## Canon

## PowerShot G3X

## **Camera User Guide**

- Make sure you read this guide, including the "Safety Precautions" (A15) section, before using the camera.
- Reading this guide will help you learn to use the camera properly.
- Store this guide safely so that you can use it in the future.

- Click the buttons in the lower right to access other pages.
- : Next page
- ◀: Previous page
- ☐: Page before you clicked a link
- To jump to the beginning of a chapter, click the chapter title at right.

**Basic Guide Advanced Guide** Camera Basics Auto Mode / **Hybrid Auto Mode** Other Shooting Modes P Mode Tv. Av. M. C1, and C2 Mode Playback Mode Wi-Fi Functions Setting Menu Accessories Appendix Index

Before Use

**ENGLISH** 



## **Initial Information**

## Package Contents

Before use, make sure the following items are included in the package. If anything is missing, contact your camera retailer.



Camera



Battery Pack NB-10L (with terminal cover)



Battery Charger CB-2LC/CB-2LCE







- Printed matter is also included.
- A memory card is not included (\(\subseteq 2\)).

## **Compatible Memory Cards**

The following memory cards (sold separately) can be used, regardless of capacity.

- SD memory cards\*1
- SDHC memory cards\*1\*2
- SDXC memory cards\*1\*2



- \*1 Cards conforming to SD standards. However, not all memory cards have been verified to work with the camera.
- \*2 UHS-I memory cards are also supported.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





## Preliminary Notes and Legal Information

- Take and review some test shots initially to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that result in the failure of an image to be recorded or to be recorded in a way that is machine readable.
- Copyright laws in your country may prohibit the use of your recorded images or copyrighted music and images with music in the memory card for anything other than private enjoyment. Refrain from unauthorized recording that infringes on copyright law, and note that even for personal use, photography may contravene copyright or other legal rights at some performances or exhibitions, or in some commercial settings.
- For information on camera warranty or Canon Customer Support, please refer to the warranty information provided with your camera User Manual Kit.
- Although the LCD monitor is produced under extremely high-precision manufacturing conditions and more than 99.99% of the pixels meet design specifications, in rare cases some pixels may be defective or may appear as red or black dots. This does not indicate camera damage or affect recorded images.
- The LCD monitor may be covered with a thin plastic film for protection against scratches during shipment. If covered, remove the film before using the camera.
- When the camera is used over an extended period, it may become warm. This does not indicate damage.

## **Conventions in This Guide**

- In this guide, icons are used to represent the corresponding camera buttons and dials on which they appear or which they resemble.
- The following camera buttons and controls are represented by icons.
   Numbers in parentheses indicate the numbers of corresponding controls in "Part Names" (24).
  - [()] Continuous ring (20) on front
  - [ Front dial (7) on front
  - [▲] Up button (10) on back
  - [4] Left button (11) on back
  - [ ] Right button (18) on back
  - [▼] Down button (19) on back
  - [ Control dial (12) on back
- Shooting modes and on-screen icons and text are indicated in brackets.
- (1): Important information you should know
- Ø: Notes and tips for expert camera use
- %: Indicates touch-screen operations
- — xx: Pages with related information (in this example, "xx" represents
   a page number)
- Instructions in this guide apply to the camera under default settings.
- For convenience, all supported memory cards are simply referred to as the "memory card".
- The symbols "▶ Still Images" and "▶ Movies" below titles indicate how the function is used—whether for still images or movies.

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu


Accessories

Appendix






## **Part Names**

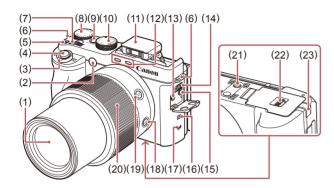

- Lens
- Lamp
- Zoom lever Shooting:[ (telephoto)] / [ (wide angle)] Playback:[Q (magnify)] / [ (index)]
- Shutter button
- Movie button
- Strap mount
- Front dial
- Exposure compensation dial
- ON/OFF button
- (10) Mode dial
- (11) Flash

- (12) Microphone
- (13) External microphone IN terminal
- (Flash pop up)] switch
- (15) Headphone iack
- (N-Mark)\*1
- (17) Wi-Fi antenna area
- [MF (Manual focus)] button
- (19) [☐ (Framing Assist Seek)] button
- Continuous ring
- Tripod socket
- Memory card/battery cover
- (23) DC coupler terminal cover

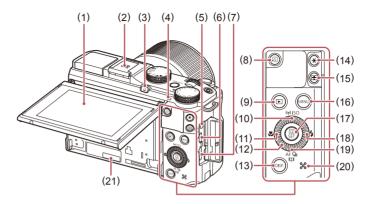

- Screen (LCD monitor)\*2
- Hot shoe / Hot shoe cap
- [☐ (Mobile Device Connection)] button
- Indicator
- Remote switch terminal
- DIGITAL terminal
- HDMI<sup>™</sup> terminal
- [ Shortcut)] button
- [ | (Playback)] button
- (10) [((p)) (Wi-Fi)] / **|SO** (ISO speed)] / Up button
- (11) [ (Macro)] / Left button

- (12) Control dial
- (13) [DISP. (Display)] button
- (14) [大] / [前 (Single-image erase)] button
- (15) [ (AF frame selector)] / [66] button
- (16) [MENU] button
- (17) (Quick Set menu/Set)] button
- (18) [ (Flash)] / Right button
- (19) [AF (One Shot/Servo)] / [ (Drive mode)] / [ (Story Highlights)] / Down button
- (20) Speaker
- (21) Serial number (Body number)
- Used with NFC features ( 134).
- Gestures may not be detected as easily if you apply a screen protector. In this case, increase the sensitivity of the touch-screen panel (\$\sum\_164\$).



 Turning the control dial is one way to choose setting items, switch images, and perform other operations. Most of these operations are also possible with the  $[\blacktriangle][\blacktriangledown][\blacktriangleleft][\blacktriangleright]$  buttons.

#### Before Use

**Basic Guide** 

**Advanced Guide** 

**Camera Basics** 

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





## **Table of Contents**

#### **Before Use**

Initial Information	2
Package Contents	2
Compatible Memory Cards	2
Preliminary Notes and Legal Information	3
Conventions in This Guide	3
Part Names	4
Common Camera Operations	13
Safety Precautions	15
Basic Guide	
Basic Operations	18
Initial Preparations	18
Attaching Accessories	18
Holding the Camera	19
Charging the Battery Pack	19

Inserting the Battery Pack and Your Memory Card ......20
Removing the Battery Pack and Memory Card ......20

 Shooting (Smart Auto)
 23

 Viewing
 24

 Erasing Images
 25

Advanced (	Gu	ıid	е
------------	----	-----	---

Camera Basics	26
On/Off	26
Power-Saving Features (Auto Power Down)	27
Power Saving in Shooting Mode	27
Power Saving in Playback Mode	27
Shutter Button	27
Shooting Modes	28
Adjusting the Screen Angle and Orientation	28
Tilting the Screen Downward	28
Tilting the Screen Upward	28
Shooting Display Options	29
Using the Quick Set Menu	30
Using Touch-Screen Operations to Configure Settings	30
Using the Menu Screen	31
Touch-Screen Operations	32
On-Screen Keyboard	32
Indicator Display	33
Clock	34
Auto Mode / Hybrid Auto Mode	35
Shooting with Camera-Determined Settings	35
Shooting (Smart Auto)	35
Shooting in Hybrid Auto Mode	37
Digest Movie Playback	38
Still Images/Movies	
Still Images	
Movies	
Scene Icons	
Continuous Shooting Scenes	

Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



On-Screen Frames	41
Common, Convenient Features	41
Zooming In Closer on Subjects (Digital Zoom)	
Shooting at Preset Focal Lengths (Step Zoom)	42
Easily Reacquiring Subjects after Manual Zooming	
(Framing Assist – Seek)	42
Auto Zooming in Response to Subject Movement	
(Auto Zoom)	43
Adjusting the Constant Face Display Size	44
Easily Reacquiring Subjects with Auto Zooming	
(Seek Assist)	44
Using the Self-Timer	45
Using the Self-Timer to Avoid Camera Shake	45
Customizing the Self-Timer	46
Shooting by Touching the Screen (Touch Shutter)	46
Continuous Shooting	47
Image Display during Playback	47
Using Face ID	48
Personal Information	48
Registering Face ID Information	48
Shooting	49
Checking and Editing Registered Information	50
Overwriting and Adding Face Information	51
Erasing Registered Information	52
Image Customization Features	52
Changing the Aspect Ratio	52
Changing Image Quality	53
Correcting Greenish Image Areas from Mercury Lamps	53
Changing Movie Image Quality	54
For NTSC Video	54
For PAL Video	54

Helpful Shooting Features	55
Using the Electronic Level	55
Magnifying the Area in Focus	55
Checking for Closed Eyes	56
Changing the IS Mode Settings	56
Deactivating Image Stabilization	56
Recording Movies with Subjects at the Same Size Shown	
before Recording	57
Customizing Camera Operation	57
Preventing the AF-Assist Beam from Firing	
Preventing the Red-Eye Reduction Lamp from Lighting Up	57
Changing the Image Display Style after Shots	58
Changing the Image Display Period after Shots	58
Changing the Screen Displayed after Shots	58
Other Shooting Modes	59
Enjoying a Variety of Images from Each Shot	
(Creative Shot)	59
,, , , ,	
(Creative Shot)	60
(Creative Shot)	60 60
(Creative Shot)	60 60 61
(Creative Shot) Choosing Effects Moving Subjects (Sports) Specific Scenes Image Effects (Creative Filters)	60 60 61 62
(Creative Shot) Choosing Effects Moving Subjects (Sports) Specific Scenes.	60 60 61 62
(Creative Shot)	60 60 61 62 62
(Creative Shot)	60 61 62 62 63
(Creative Shot) Choosing Effects Moving Subjects (Sports) Specific Scenes. Image Effects (Creative Filters) Shooting High-Contrast Scenes (High Dynamic Range) Adding Artistic Effects Shooting with Faded Colors (Nostalgic)	60 61 62 62 63 63
(Creative Shot) Choosing Effects Moving Subjects (Sports) Specific Scenes Image Effects (Creative Filters) Shooting High-Contrast Scenes (High Dynamic Range) Adding Artistic Effects Shooting with Faded Colors (Nostalgic) Shooting with a Fish-Eye Lens Effect (Fish-Eye Effect)	60 61 62 62 63 63
(Creative Shot) Choosing Effects Moving Subjects (Sports) Specific Scenes Image Effects (Creative Filters) Shooting High-Contrast Scenes (High Dynamic Range) Adding Artistic Effects Shooting with Faded Colors (Nostalgic) Shooting with a Fish-Eye Lens Effect (Fish-Eye Effect) Shots Resembling Miniature Models (Miniature Effect)	60 61 62 63 63 64
(Creative Shot) Choosing Effects Moving Subjects (Sports) Specific Scenes Image Effects (Creative Filters) Shooting High-Contrast Scenes (High Dynamic Range) Adding Artistic Effects Shooting with Faded Colors (Nostalgic) Shooting with a Fish-Eye Lens Effect (Fish-Eye Effect) Shots Resembling Miniature Models (Miniature Effect) Playback Speed and Estimated Playback Time	60 61 62 63 63 64
(Creative Shot) Choosing Effects Moving Subjects (Sports) Specific Scenes Image Effects (Creative Filters) Shooting High-Contrast Scenes (High Dynamic Range) Adding Artistic Effects Shooting with Faded Colors (Nostalgic) Shooting with a Fish-Eye Lens Effect (Fish-Eye Effect) Shots Resembling Miniature Models (Miniature Effect) Playback Speed and Estimated Playback Time (for One-Minute Clips)	60 61 62 63 63 64 64
(Creative Shot) Choosing Effects Moving Subjects (Sports) Specific Scenes Image Effects (Creative Filters) Shooting High-Contrast Scenes (High Dynamic Range) Adding Artistic Effects Shooting with Faded Colors (Nostalgic) Shooting with a Fish-Eye Lens Effect (Fish-Eye Effect) Shots Resembling Miniature Models (Miniature Effect) Playback Speed and Estimated Playback Time (for One-Minute Clips) Shooting with a Toy Camera Effect (Toy Camera Effect)	60 61 62 63 63 64 64

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



Special Modes for Other Purposes	. 6
Auto Shooting after Face Detection (Smart Shutter)	67
Auto Shooting after Smile Detection (Smile)	67
Auto Shooting after Wink Detection (Wink Self-Timer)	68
Auto Shooting after Detecting New Person	
(Face Self-Timer)	69
Shooting Starry Skies (Star)	70
Shooting Night Scenes under Starry Skies	
(Star Nightscape)	70
Shooting Star Trails (Star Trails)	
Shooting Movies of Star Movement	
(Star Time-Lapse Movie)	7
Adjusting Colors	73
Recording Various Movies	. 74
Recording Movies in [ Mode	74
Shooting Still Images during Movie Recording	74
Locking or Changing Image Brightness before Recording	7
Correcting Severe Camera Shake	7
Sound Settings	70
Adjusting the Recording Volume	70
Deactivating the Wind Filter	70
Using the Attenuator	70
Recording Short Clips	70
Playback Effects	7
Recording iFrame Movies	7
P Mode	. 78
Shooting in Program AE ([P] Mode)	. 78
Image Brightness (Exposure)	
Adjusting Image Brightness (Exposure Compensation)	
Locking Image Brightness / Exposure (AE Lock)	
Changing the Metering Method	
Linking the Spot AE Point Frame to the AF Frame	

Changing the ISO Speed	80
Adjusting ISO Auto Settings	81
Changing the Noise Reduction Level (High ISO NR)	81
Auto Exposure Bracketing (AEB Shooting)	81
Dynamic Range Correction (DR Correction)	82
Shadow Correction	83
Using the ND Filter	83
Image Colors	83
Capturing Natural Colors (White Balance)	83
Custom White Balance	84
Manually Correcting White Balance	84
Changing Image Color Tones (My Colors)	85
Custom Color	85
Shooting Range and Focusing	86
Shooting Close-Ups (Macro)	86
Shooting in Manual Focus Mode	86
Fine-Tuning the Focus	87
Easily Identifying the Focus Area (MF Peaking)	88
Focus Bracketing (Focus-BKT Mode)	88
Digital Tele-Converter	89
Choosing the AF Method	89
1-point AF	89
Moving and Resizing AF Frames (1-point AF)	89
ُنْ+Tracking	90
Shooting with Servo AF	91
Changing the Focus Setting	91
Choosing a Person to Focus On (Face Select)	92
Choosing Subjects to Focus On (Touch AF)	92
Shooting with the AF Lock	93
Flash	93
Changing the Flash Mode	93
Auto	93

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



On	93
Slow Synchro	94
Off	94
Adjusting the Flash Exposure Compensation	94
Shooting with the FE Lock	95
Changing the Flash Timing	95
Other Settings	96
Changing Image Quality	96
Capturing in RAW Format	96
Using the Menu	
Changing the IS Mode Settings	97
Tv, Av, M, C1, and C2 Mode	98
Specific Shutter Speeds ([Tv] Mode)	98
Specific Aperture Values ([Av] Mode)	99
Specific Shutter Speeds and Aperture Values ([M] Mode)	99
Shooting Long Exposures (Bulb)	100
Adjusting the Flash Output	101
Recording Movies at Specific Shutter Speeds and Apertur	e
Values	101
Customizing Controls and Display	102
Customizing Display Information	102
Customizing the Information Displayed	103
Assigning Functions to Controls	103
Saving Shooting Settings	104
Settings that can be saved	104
Saving Commonly Used Shooting Menu Items (My Menu).	105
Playback Mode	106
Viewing	106
Touch-Screen Operations	107
Switching Display Modes	108

Overexposure Warning (for Image Highlights)	108
Histogram	108
RGB Histogram, GPS Information Display	108
Viewing Short Movies Created When Shooting Still Images	
(Digest Movies)	109
Viewing by Date	
Checking People Detected in Face ID	110
Browsing and Filtering Images	110
Navigating through Images in an Index	110
Touch-Screen Operations	111
Finding Images Matching Specified Conditions	111
Using the Front Dial to Jump between Images	
Touch-Screen Operations	112
Viewing Individual Images in a Group	113
Editing Face ID Information	114
Changing Names	114
Erasing Names	114
Image Viewing Options	115
Magnifying Images	115
Touch-Screen Operations	115
Viewing Slideshows	115
Protecting Images	116
Using the Menu	116
Choosing Images Individually	117
Selecting a Range	117
Protecting All Images at Once	118
Clearing All Protection at Once	118
Erasing Images	118
Erasing Multiple Images at Once	119
Choosing a Selection Method	119
Choosing Images Individually	119
Selecting a Range	120

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



Specifying All Images at Once	120
Rotating Images	120
Using the Menu	120
Deactivating Auto Rotation	121
Tagging Images as Favorites	121
Using the Menu	121
Convenient Control: Assigned Buttons	122
Convenient Control: Touch Actions	123
Using Touch Actions Functions	123
Changing Touch Actions Functions	123
Assignable Functions	123
Editing Still Images	124
Resizing Images	124
Using the Menu	124
Cropping	125
Changing Image Color Tones (My Colors)	126
Correcting Image Brightness (i-Contrast)	126
Correcting Red-Eye	127
Editing Movies	128
Reducing File Sizes	129
Image Quality of Compressed Movies	129
Editing Digest Movies	129
Viewing Albums (Story Highlights)	130
Choosing Themes for Albums	130
Adding Background Music to Albums	131
Creating Your Own Albums	132
Wi-Fi Functions	133
Available Wi-Fi Features	133
Sending Images to a Smartphone	134
Sending Images to an NFC-Compatible Smartphone	

Connecting via NFC When Camera Is Off or in	
Shooting Mode	. 134
Connecting via NFC When Camera Is in Playback Mode	.136
Sending to a Smartphone Assigned to the Button	.136
Adding a Smartphone Using the Wi-Fi Menu	. 138
Using Another Access Point	. 139
Previous Access Points	. 140
Saving Images to a Computer	140
Preparing to Register a Computer	. 140
Checking Your Computer Environment	. 140
Installing the Software	. 140
Configuring the Computer for a Wi-Fi Connection	
(Windows Only)	.141
Saving Images to a Connected Computer	. 142
Confirming Access Point Compatibility	. 142
Using WPS-Compatible Access Points	. 142
Connecting to Listed Access Points	. 144
Previous Access Points	. 145
Sending Images to a Registered Web Service	145
Registering Web Services	
Registering CANON iMAGE GATEWAY	. 146
Registering Other Web Services	. 147
Uploading Images to Web Services	. 148
Printing Images Wirelessly from a Connected Printer	149
Sending Images to Another Camera	150
Image Sending Options	151
Sending Multiple Images	. 151
Choosing Images Individually	. 151
Selecting a Range	. 151
Sending Favorite Images	. 152
Notes on Sending Images	. 152
Choosing the Number of Recording Pixels (Image Size)	. 153

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



Adding Comments	153
Sending Images Automatically (Image Sync)	153
Initial Preparations	153
Preparing the Camera	153
Preparing the Computer	154
Sending Images	154
Viewing Images Sent via Image Sync on a Smartphone	155
Using a Smartphone to View Camera Images and Control	
the Camera	155
Geotagging Images on the Camera	155
Shooting Remotely	156
Editing or Erasing Wi-Fi Settings	157
Editing Connection Information	157
Changing a Device Nickname	157
Erasing Connection Information	157
Changing the Camera Nickname	158
D	
Returning the Wi-Fi Settings to Default	158
Setting Menu	
g g	. 159
Setting Menu	. <b>159</b> 159
Setting MenuAdjusting Basic Camera Functions	. <b>159</b> 159 159
Setting Menu	<b>159</b> 159 159 159
Setting Menu	<b>159</b> 159 159 159 160
Setting Menu	<b>159</b> 159 159 160 160
Setting Menu  Adjusting Basic Camera Functions  Date-Based Image Storage  File Numbering  Formatting Memory Cards  Low-Level Formatting	<b>159</b> 159 159 159 160 160 160
Setting Menu  Adjusting Basic Camera Functions  Date-Based Image Storage  File Numbering  Formatting Memory Cards  Low-Level Formatting  Changing the Video System	<b>159</b> 159 159 159 160 160 160 161
Setting Menu  Adjusting Basic Camera Functions  Date-Based Image Storage  File Numbering  Formatting Memory Cards  Low-Level Formatting  Changing the Video System  Electronic Level Calibration	<b>159</b> 159 159 160 160 161
Setting Menu  Adjusting Basic Camera Functions  Date-Based Image Storage  File Numbering  Formatting Memory Cards  Low-Level Formatting  Changing the Video System  Electronic Level Calibration  Resetting the Electronic Level	159 159 159 159 160 160 161 161
Setting Menu  Adjusting Basic Camera Functions  Date-Based Image Storage  File Numbering  Formatting Memory Cards  Low-Level Formatting  Changing the Video System  Electronic Level Calibration  Resetting the Electronic Level  Switching the Color of Screen Information	<b>159</b> 159 159 159 160 160 161 161 161
Setting Menu  Adjusting Basic Camera Functions  Date-Based Image Storage  File Numbering  Formatting Memory Cards  Low-Level Formatting  Changing the Video System  Electronic Level Calibration  Resetting the Electronic Level  Switching the Color of Screen Information  Using Eco Mode	<b>159</b> 159 159 159 160 160 161 161 161 161
Setting Menu  Adjusting Basic Camera Functions  Date-Based Image Storage  File Numbering  Formatting Memory Cards  Low-Level Formatting  Changing the Video System  Electronic Level Calibration  Resetting the Electronic Level  Switching the Color of Screen Information  Using Eco Mode  Power-Saving Adjustment	<b>159</b> 159 159 159 160 160 161 161 161 162 162

Lens Retraction Timing	163
Display Language	163
Silencing Camera Operations	163
Adjusting the Volume	163
Customizing Sounds	164
Start-Up Screen	164
Hiding Hints and Tips	164
Adjusting the Touch-Screen Panel	164
Metric / Non-Metric Display	164
Checking Certification Logos	164
Setting Copyright Information to Record in Images	165
Deleting All Copyright Information	165
Adjusting Other Settings	165
Restoring Default Camera Settings	165
Accessories	166
System Map	167
Optional Accessories	168
Power Supplies	168
Flash Units	168
Other Accessories	168
Printers	169
Using Optional Accessories	169
Playback on a TV	
Powering the Camera with Household Power	170
Using Lens Filters (Sold Separately)	171
Using a Lens Hood (Sold Separately)	172
Using a Remote Switch (Sold Separately)	172
Using the Hot Shoe	173
Using an Electronic Viewfinder (Sold Separately)	173
Using an External Flash (Sold Separately)	175
Speedlite EX Series	175
Using Speedlite Bracket SB-E2 (Sold Separately)	176

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



Camera Settings Available with an External Flash	
(Sold Separately)	176
Using an External Microphone	177
Using Headphones (Sold Separately)	177
Using the Software	178
Computer Connections via a Cable	178
Checking Your Computer Environment	178
Installing the Software	178
Saving Images to a Computer	178
Printing Images	180
Easy Print	180
Configuring Print Settings	181
Cropping Images before Printing	181
Choosing Paper Size and Layout before Printing	182
Available Layout Options	182
Printing ID Photos	182
Printing Movie Scenes	183
Movie Printing Options	183
Adding Images to the Print List (DPOF)	183
Configuring Print Settings	183
Setting Up Printing for Individual Images	184
Setting Up Printing for a Range of Images	184
Setting Up Printing for All Images	184
Clearing All Images from the Print List	185
Printing Images Added to the Print List (DPOF)	185
Adding Images to a Photobook	185
Choosing a Selection Method	185
Adding Images Individually	185
Adding All Images to a Photobook	186
Removing All Images from a Photobook	186

App	endix	187
Т	roubleshooting	187
C	On-Screen Messages	191
C	On-Screen Information	193
	Shooting (Information Display)	193
	Battery Level	193
	Playback (Detailed Information Display)	194
	Summary of Movie Control Panel	194
F	unctions and Menu Tables	195
	Functions Available in Each Shooting Mode	195
	Quick Set Menu	197
	Shooting Tab	200
	[ <b>1</b> ] Tab	200
	[ <b>1</b> 2] Tab	201
	[ <b>6</b> 3] Tab	203
	[ <b>1</b> 4] Tab	204
	[ <b>1</b> 5] Tab	205
	[ <b>1</b> 6] Tab	
	[ <b>1</b> 7] Tab	
	[ <b>6</b> 8] Tab	
	Set Up Tab	
	My Menu Tab	
	Playback Tab	
	Print Tab	
H	landling Precautions	210
S	Specifications	211
	Camera Specifications	211
	Wi-Fi	
	Digital Zoom Focal Length (35mm equivalent)	
	Number of Shots/Recording Time, Playback Time	
	Number of Shots per Memory Card	
	Recording Time per Memory Card	213

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



Flash Range	213
Shooting Range	213
Continuous Shooting Speed	213
Shutter Speed	214
Aperture	214
Battery Pack NB-10L	214
Battery Charger CB-2LC/CB-2LCE	214
Index	215
Wi-Fi (Wireless LAN) Precautions	217
Radio Wave Interference Precautions	217
Security Precautions	217
Trademarks and Licensing	218
Disclaimer	219

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



## **Common Camera Operations**

#### ♠ Shoot

- Use camera-determined settings (Auto Mode, Hybrid Auto Mode)
  - 35. 37
- See several effects applied to each shot, using camera-determined settings (Creative Shot Mode)
  - 🕮 59

#### Shooting people well



Portraits (461)



**Against Snow** (🕮61)

#### Matching specific scenes



Sports (<u>\$\text{\$\decircle}\$</u> 60)



Night Scenes (2461)





Starry Skies (Å70)

#### Applying special effects





Poster Effect (462)



Miniature Effect  $(\Box 64)$ 



Soft Focus (466)



(467)





 $(\square 63)$ **O** 

"Aged" Photos

Toy Camera Effect  $(\Box 165)$ 



Monochrome

Include yourself in the shot (Self-Timer)

- 45, 69

Index

Before Use

**Basic Guide** 

**Advanced Guide** 

**Camera Basics** 

Hybrid Auto Mode

Other Shooting Modes

Tv. Av. M. C1. and C2 Mode

Auto Mode /

P Mode

Playback Mode

Wi-Fi Functions

Setting Menu





Fish-Eye Effect (464)



Background Defocus  $(\square 66)$ 





- Focus on faces
- \$\mathref{1}\$35, \$\mathref{1}\$61, \$\mathref{1}\$90, \$\mathref{1}\$92
- Without using the flash (Flash Off)
  - 📖 35
- Movie clips and photos together (Movie Digest)
  - 🕮 37

#### **▶** View

- View images (Playback Mode)
  - 📖 106
- Automatic playback (Slideshow)
  - 115
- On a TV
  - 🕮 169
- On a computer
  - 🛄 178
- Browse through images quickly
  - 🕮 110
- Erase images
  - 118
- Create an album automatically
  - 📖 130

#### Shoot/View Movies

- Shoot movies
  - \$\mathbb{Q}\] 35, \$\mathbb{Q}\] 74, \$\mathbb{Q}\] 101
- View movies (Playback Mode)
  - 106

#### 🕒 Print

- Print pictures
  - 📖 180

#### ☐ Save

- Save images to a computer via a cable
  - 178

#### Use Wi-Fi Functions

- Send images to a smartphone
  - 📖 134
- Share images online
  - 🕮 145
- Send images to a computer
  - 📖 153

#### Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







## **Safety Precautions**

- Before using the product, ensure that you read the safety precautions described below. Always ensure that the product is used correctly.
- The safety precautions noted here are intended to prevent you and other persons from being injured or incurring property damage.
- Be sure to also check the guides included with any separately sold accessories you use.

## **Marning**

Denotes the possibility of serious injury or death.

- Do not trigger the flash in close proximity to people's eyes. Exposure to the intense light produced by the flash could damage eyesight. In particular, remain at least 1 meter (3.3 feet) away from infants when using the flash.
- Store this equipment out of the reach of children and infants. A strap wound around a child's neck may result in asphyxiation. If your product uses a power cord, mistakenly winding the cord around a child's neck may result in asphyxiation.

The hot shoe cover is dangerous if swallowed. If this occurs, contact a doctor immediately.

- Use only recommended power sources.
- . Do not disassemble, alter, or apply heat to the product.
- Do not peel off the adhesive covering, if the battery pack has it.
- Avoid dropping or subjecting the product to severe impacts.
- Do not touch the interior of the product if it is broken, such as when dropped.
- Stop using the product immediately if it emits smoke or a strange smell, or otherwise behaves abnormally.
- Do not use organic solvents such as alcohol, benzine, or thinner to clean the product.

Avoid contact with liquid, and do not allow liquid or foreign objects inside.
 This could result in electrical shock or fire.

If the product gets wet, or if liquid or foreign objects get inside, remove the battery pack/batteries or unplug immediately.

 Do not look through the viewfinder (if your model has one) at intense light sources, such as the sun on a clear day or an intense artificial light source.

This could damage your eyesight.

- Do not touch the product during thunderstorms if it is plugged in.
   This could result in electrical shock or fire. Immediately stop using the product and distance yourself from it.
- Use only the recommended battery pack/batteries.
- Do not place the battery pack/batteries near or in direct flame.
   This may cause the battery pack/batteries to explode or leak, resulting in electrical shock, fire, or injuries. If leaking battery electrolyte comes into contact with eyes, mouth, skin, or clothing, immediately flush with water.
- If the product uses a battery charger, note the following precautions.
  - Remove the plug periodically and, using a dry cloth, wipe away any dust and dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.
  - Do not insert or remove the plug with wet hands.
  - Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the plug is damaged or not fully inserted in the outlet.
  - Do not allow dust or metal objects (such as pins or keys) to contact the terminals or plug.
  - Do not cut, damage, alter, or place heavy items on the power cord, if your product uses one.

This could result in electrical shock or fire.

• Turn the camera off in places where camera use is prohibited. The electromagnetic waves emitted by the camera may interfere with the operation of electronic instruments and other devices. Exercise adequate caution when using the product in places where use of electronic devices is restricted, such as inside airplanes and medical facilities. Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





 Do not allow the camera to maintain contact with skin for extended periods.

Even if the camera does not feel hot, this may cause low-temperature burns, manifested in redness of the skin or blistering. Use a tripod in hot places, or if you have poor circulation or insensitive skin.

## Caution

Denotes the possibility of injury.

- When carrying the product by the strap, be careful not to bang it. subject it to strong impacts or shocks, or let it get caught on other objects.
- Be careful not to bump or push strongly on the lens. This could lead to injury or damage the camera.
- Be careful not to subject the screen to strong impacts. If the screen cracks, injury may result from the broken fragments.
- When using the flash, be careful not to cover it with your fingers or clothing.

This could result in burns or damage to the flash.

- Avoid using, placing, or storing the product in the following places:
  - Places subject to direct sunlight
  - Places subject to temperatures above 40 °C (104 °F)
  - Humid or dusty places

These could cause leakage, overheating, or an explosion of the battery pack/batteries, resulting in electrical shock, fire, burns, or other injuries. Overheating and damage may result in electrical shock, fire, burns, or other injuries.

- The slideshow transition effects may cause discomfort when viewed for prolonged periods.
- When using optional lenses, lens filters, or filter adapters (if applicable), be sure to attach these accessories firmly.

If the lens accessory becomes loose and falls off, it may crack, and the shards of class may lead to cuts.

 On products that raise and lower the flash automatically, make sure to avoid pinching your fingers with the lowering flash.

This could result in injury.

#### Caution

Denotes the possibility of property damage.

 Do not aim the camera at intense light sources, such as the sun on a clear day or an intense artificial light source.

Doing so may damage the image sensor or other internal components.

- When using the camera on a sandy beach or at a windy location, be careful not to allow dust or sand to enter the camera.
- On products that raise and lower the flash automatically, do not push the flash down or prv it open.

This may cause the product to malfunction.

• Wipe off any dust, grime, or other foreign matter on the flash with a cotton swab or cloth.

The heat emitted from the flash may cause foreign matter to smoke or the product to malfunction.

 Remove and store the battery pack/batteries when you are not using the product.

Any battery leakage that occurs may cause product damage.

• Before you discard the battery pack/batteries, cover the terminals with tape or other insulators.

Contacting other metal materials may lead to fire or explosions.

• Unplug any battery charger used with the product when not in use. Do not cover with a cloth or other objects when in use.

Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.

 Do not leave any dedicated battery packs near pets. Pets biting the battery pack could cause leakage, overheating, or explosion, resulting in product damage or fire.

#### Before Use

**Basic Guide** 

**Advanced Guide** 

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





 If your product uses multiple batteries, do not use batteries that have different levels of charge together, and do not use old and new batteries together. Do not insert the batteries with the + and – terminals reversed.

This may cause the product to malfunction.

- When putting the camera in your bag, ensure that hard objects do not come into contact with the screen. Also close the screen (so that it faces the body), if your product's screen closes.
- Do not attach any hard objects to the product. Doing so may cause malfunctions or damage the screen.





Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix




# **Basic Guide**Basic Operations

Basic information and instructions, from initial preparations to shooting and playback

## **Initial Preparations**


Prepare for shooting as follows.

## Attaching Accessories

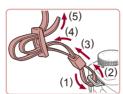


#### 1 Attach the strap.

- Attach the included strap to the camera as shown.
- On the other side of the camera, attach the strap the same way.

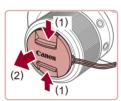

#### 2 Attach the lens cap.

 Remove the lens cap from the lens and attach the lens cap cord to the strap.

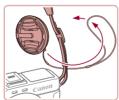



- Always remove the lens cap before turning the camera on. Try clipping the lens cap to the neck strap when the cap is not in use.
- Keep the lens cap on the lens when the camera is not in use.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix






## Holding the Camera



- Place the strap around your neck.
- When shooting, keep your arms close to your body and hold the camera securely to prevent it from moving. If you have raised the flash, do not rest your fingers on it.


## Charging the Battery Pack

Before use, charge the battery pack with the included charger. Be sure to charge the battery pack initially, because the camera is not sold with the battery pack charged.

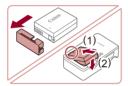

#### 1 Insert the battery pack.


 Remove the cover from the battery pack, align the marks on the battery pack and charger, and insert the battery pack by pushing it in (1) and down (2).

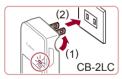

## CB-2LCE

#### 2 Charge the battery pack.

- CB-2LC: Flip out the plug (1) and plug the charger into a power outlet (2).
- CB-2LCE: Plug the power cord into the charger, then plug the other end into a power outlet.
- The charging lamp turns orange, and charging begins.
- When charging is finished, the lamp turns green.

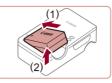

#### 3 Remove the battery pack.

 After unplugging the battery charger, remove the battery pack by pushing it in (1) and up (2).



- To protect the battery pack and keep it in optimal condition, do not charge it continuously for more than 24 hours.
- For battery chargers that use a power cord, do not attach the charger or cord to other objects. Doing so could result in malfunction or damage to the product.



- For details on charging time and the number of shots and recording time possible with a fully charged battery pack, see "Number of Shots/Recording Time, Playback Time" (\$\infty\$212).
- Charged battery packs gradually lose their charge, even when they are not used. Charge the battery pack on (or immediately before) the day of use.
- As a visual reminder of the charge status, attach the battery cover with 
   visible on a charged battery pack and concealed on an uncharged one.
- The charger can be used in areas with 100 240 V AC power (50/60 Hz). For power outlets in a different format, use a commercially available adapter for the plug. Never use an electrical transformer designed for traveling, which may damage the battery pack.

Before Use

Basic Guide

**Advanced Guide** 

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





## **Inserting the Battery Pack and Your Memory Card**

Insert the included battery pack and a memory card (sold separately). Note that before using a memory card that is new or has been formatted in another device, you should format the memory card with this camera (160).



#### Open the cover.

 Slide the switch (1) and open the cover (2).



#### 2 Insert the battery pack.

- Holding the battery pack with the terminals in the position shown, hold the battery lock toward (1) and insert the battery pack toward (2) until the lock clicks shut.
- If you insert the battery pack facing the wrong way, it cannot be locked into the correct position. Always confirm that the battery pack is facing the right way and locks when inserted.



#### 3 Check your card's write-protect switch and insert the memory card.

- Recording is not possible on memory cards with a write-protect switch when the switch is in the locked position. Move the switch toward (1).
- Insert the memory card with the label (2) facing as shown until it clicks into place.
- Make sure the memory card is facing the right way when you insert it. Inserting memory cards facing the wrong way may damage the camera.



#### Close the cover.

• Lower the cover (1) and hold it down as you slide the switch, until it clicks into the closed position (2).



For guidelines on how many shots or hours of recording can be saved on one memory card, see "Number of Shots per Memory Card" (QQ 212).

#### Removing the Battery Pack and Memory Card



#### Remove the battery pack.

- Open the cover and press the battery lock in the direction of the arrow
- The battery pack will pop up.



#### Remove the memory card.

- Push the memory card in until it clicks. and then slowly release it.
- The memory card will pop up.

Refore Use

**Basic Guide** 

**Advanced Guide** 

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 







## Setting the Date and Time

Set the current date and time correctly as follows if the [Date/Time] screen is displayed when you turn the camera on. Information you specify this way is recorded in image properties when you shoot, and it is used when you manage images by shooting date or print images showing the date.



#### 1 Turn the camera on.

- Press the ON/OFF button.
- The [Date/Time] screen is displayed.



#### 2 Set the date and time.


- Press the [◄][▶] buttons to choose an option.
- Press the [▲][▼] buttons or turn the [♣] dial to specify the date and time.
- When finished, press the [3] button.



Time Zone

**#** 02.02.2015 10:00

MENU Previous

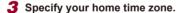

- Press the [◀][▶] buttons to choose your home time zone.
- 4 Finish the setup process.
- Press the (
   §) button when finished.

   After a confirmation message, the setting screen is no longer displayed.
- To turn off the camera, press the ON/OFF button.



Unless you set the date, time, and home time zone, the [Date/ Time] screen will be displayed each time you turn the camera on. Specify the correct information.



To set daylight saving time (1 hour ahead), choose [३♠;] in step 2 and then choose [३♠;] by pressing the [♠][▼] buttons or turning the [♠] dial.



You can also set the date and time by touching the desired option
on the screen in step 2 and then touching [▲][▼], followed
by [SET]. Similarly, you can also set your home time zone by
touching [◄][▶] on the screen in step 3, followed by [SET].

#### **Changing the Date and Time**

Adjust the date and time as follows:



#### 1 Access the menu screen.

Press the [MENU] button.





#### 2 Choose [Date/Time].

- Press the [◀][▶] buttons or turn the [♣♣] dial to choose [♠2] tab.
- Press the [▲][▼] buttons or turn the
   [★] dial to choose [Date/Time], and then press the [♠] button.

Before Use

**Basic Guide** 

**Advanced Guide** 

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

Appendix







#### 3 Change the date and time.

- Follow step 2 in "Setting the Date and Time" (21) to adjust the settings.
- Press the [MFNI] button to close the menu screen.



- Date/time settings can be retained for about 3 weeks by the camera's built-in date/time battery (backup battery) after the battery pack is removed.
- The date/time battery will be charged in about 4 hours once you insert a charged battery pack or connect the camera to an AC adapter kit (sold separately, 168), even if the camera is left
- Once the date/time battery is depleted, the [Date/Time] screen will be displayed when you turn the camera on. Set the correct date and time as described in "Setting the Date and Time" (21).

## **Display Language**

Change the display language as needed.



- 1 Enter Playback mode.
- Press the [►] button.



- 2 Access the setting screen.
- Press and hold the [ B ] button, and then immediately press the [MENU] button.







- Press the [▲][▼][◀][▶] buttons or turn the [ dial to choose a language, and then press the [ ] button.
- Once the display language has been set. the setting screen is no longer displayed.





- The current time is displayed if you wait too long in step 2 after pressing the [ button before you press the [MENU] button. In this case, press the [ ] button to dismiss the time display and repeat step 2.
- You can also change the display language by pressing the [MENU] button and choosing [Language [3]] on the [43] tab.



You can also set the display language by touching a language on the screen in step 3 and then touching it again.



**Basic Guide** 

**Advanced Guide** 

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





## Trying the Camera Out

Still Images Movies



Follow these instructions to turn the camera on, shoot still images or movies, and then view them.

## **Shooting (Smart Auto)**

For fully automatic selection of the optimal settings for specific scenes. simply let the camera determine the subject and shooting conditions.




#### Turn the camera on.

- Press the ON/OFF button
- The startup screen is displayed.



#### 2 Enter [AUTO] mode.

- Set the mode dial to [AUTO].
- Aim the camera at the subject. The camera will make a slight clicking noise as it determines the scene

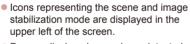

 Frames displayed around any detected subjects indicate that they are in focus.



#### 3 Compose the shot.

 To zoom in and enlarge the subject, move the zoom lever toward [ (telephoto), and to zoom away from the subject, move it toward [ (wide angle).




#### **Shooting Still Images**

#### 1) Focus.

Press the shutter button lightly, halfway down. The camera beeps twice after focusing, and frames are displayed to indicate image areas in focus.



• If [Raise the flash] is displayed, move the [\$] switch to raise the flash. It will fire when shooting. If you prefer not to use the flash, push it down with your finger. into the camera

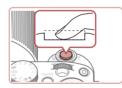

#### 2) Shoot.

- Press the shutter button all the way down.
- As the camera shoots, a shutter sound is played, and in low-light conditions when you have raised the flash, it fires automatically.
- Keep the camera still until the shutter sound ends
- After displaying your shot, the camera will revert to the shooting screen.

Before Use

**Basic Guide** 

**Advanced Guide** 

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 









#### **Recording Movies**

#### 1) Start recording.

- Press the movie button. The camera beeps once as recording begins, and [ Rec] is displayed with the elapsed time (1).
- Black bars are displayed on the top and bottom edges of the screen, and the subject is slightly enlarged. The black bars indicate image areas not recorded.
- Frames displayed around any detected faces indicate that they are in focus.
- Once recording begins, take your finger off the movie button.



#### 2) Finish recording.

 Press the movie button again to stop recording. The camera beeps twice as recording stops.

### Viewing

After shooting images or movies, you can view them on the screen as follows.



#### 1 Enter Playback mode.

- Press the [] button.
- Your last shot is displayed.



#### 2 Choose images.

- To view the previous image, press the [◀] button or turn the [♠] dial counterclockwise. To view the next image, press the [▶] button or turn the [♠] dial clockwise.
- Press and hold the [◀][▶] buttons to browse through images quickly.





- To access this screen (Scroll Display mode), turn the [\*] dial rapidly. In this mode, turn the [\*] dial to browse through images.
- To return to single-image display, press the [4] button.
- Movies are identified by a [SII ►] icon.
   To play movies, go to step 3.

Before Use

**Basic Guide** 

**Advanced Guide** 

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







#### 3 Play movies.

- Press the [<sup>®</sup>] button, press the [<sup>▲</sup>][<sup>▼</sup>] buttons to choose [<sup>▶</sup>], and then press the [<sup>®</sup>] button again.
- Playback now begins, and after the movie is finished, [SET >] is displayed.
- To adjust the volume, press the [▲][▼] buttons during playback.



 To switch to Shooting mode from Playback mode, press the shutter button halfway.



 You can also start movie playback by touching [()]. To adjust the volume, quickly drag up or down across the screen during playback.

#### **Erasing Images**

You can choose and erase unneeded images one by one. Be careful when erasing images, because they cannot be recovered.



### 1 Choose an image to erase.

 Press the [◀][▶] buttons or turn the [♣] dial to choose an image.



#### 2 Erase the image.

- Press the [i] button.
- After [Erase?] is displayed, press the
   [◀][▶] buttons or turn the [♠] dial to
   choose [Erase], and then press the [♠]
   button
- The current image is now erased.
- To cancel erasure, press the [◀][▶] buttons or turn the [♠] dial to choose [Cancel], and then press the [♠] button.



• You can choose multiple images to erase at once (Q119).



- You can also erase the current image by touching [Erase] on the screen in step 2.
- Images can also be erased by using Touch Actions (Q 123).

Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





# **Advanced Guide**Camera Basics

Other basic operations and more ways to enjoy your camera, including shooting and playback options

## On/Off



#### **Shooting Mode**

- Press the ON/OFF button to turn the camera on and prepare for shooting.
- To turn the camera off, press the ON/OFF button again.



#### Playback Mode

- Press the [] button to turn the camera on and view your shots.
- To turn the camera off, press the [▶] button again.



- To switch to Playback mode from Shooting mode, press the [ ] button.
- To switch to Shooting mode from Playback mode, press the shutter button halfway (27).
- The lens will be retracted after about one minute once the camera is in Playback mode. You can turn the camera off when the lens is retracted by pressing the [ ] button.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



## Power-Saving Features (Auto Power Down)

As a way to conserve battery power, the camera automatically deactivates the screen (Display Off) and then turns itself off after a specific period of inactivity.

#### **Power Saving in Shooting Mode**

The screen is automatically deactivated after about one minute of inactivity. In about two more minutes, the lens is retracted and the camera turns itself off. To activate the screen and prepare for shooting when the screen is off but the lens is still out, press the shutter button halfway (27).

#### Power Saving in Playback Mode

The camera turns itself off automatically after about five minutes of inactivity.




- You can deactivate Auto Power Down and adjust the timing of Display Off, if you prefer (\$\sum\_162\$).
- Power saving is not active while the camera is connected to other devices via Wi-Fi (133), or when connected to a computer (178).

### **Shutter Button**


To ensure your shots are in focus, always begin by holding the shutter button halfway down, and once the subject is in focus, press the button all the way down to shoot.

In this manual, shutter button operations are described as pressing the button *halfway* or *all the way down*.

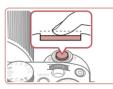

1 Press halfway. (Press lightly to focus.)

 Press the shutter button halfway. The camera beeps twice, and frames are displayed around image areas in focus.

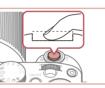

2 Press all the way down. (From the halfway position, press fully to shoot.)

- The camera shoots, as a shutter sound is played.
- Keep the camera still until the shutter sound ends.



- Images may be out of focus if you shoot without initially pressing the shutter button halfway.
- Length of shutter sound playback varies depending on the time required for the shot. It may take longer in some shooting scenes, and images will be blurry if you move the camera (or the subject moves) before the shutter sound ends.

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu


Accessories

**Appendix** 



## **Shooting Modes**

Use the mode dial to access each shooting mode.

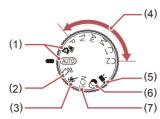

- Auto Mode / Hybrid Auto Mode Fully automatic shooting, with camera-determined settings (\$\Omega\$23, \$\Omega\$35, \$\Omega\$37).
- (2) Creative Shot Mode See several effects applied to each shot automatically (☐59).
- (3) Sports Mode Shoot continuously as the camera focuses on moving subjects (\$\square\$60\$).
- (4) P, Tv, Av, M, C1, and C2 Modes Take a variety of shots using your preferred settings (☐78, ☐98).

- (5) Movie Mode
  For shooting movies (\$\superscript{\Pi}\$74,
  \$\superscript{\Pi}\$101).

  You can also shoot movies when the mode dial is not set to Movie mode, simply by pressing the
- (6) Creative Filters Mode Add a variety of effects to images when shooting (\$\subseteq\$62).

movie button.

(7) Special Scene Mode Shoot with optimal settings for specific scenes (\(\subseteq 61\)).

## Adjusting the Screen Angle and Orientation

You can adjust the screen angle and orientation to suit the scene or how you are shooting.

## Tilting the Screen Downward



- Pull the top of the screen down.
- The screen can be opened to about 45°.

## Tilting the Screen Upward



(4) o

- Lift the bottom of the screen up until it clicks (1), slide the top of the screen down (2), and then lift the bottom of the screen up again (3).
- The screen can be opened to about 180°.
- When including yourself in shots, you can view a mirror image of yourself by rotating the screen around toward the front of the camera.
- When finished, tilt the screen back to lower it (4), and then slide it up until it clicks (5).

Before Use

**Basic Guide** 

Advanced Guide

#### **Camera Basics**

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







- When the camera is not in use, keep the screen closed.
- Be careful not to open the screen any further than this, as it will damage the camera.



To cancel reverse display, choose MENU (□31) ► [□1] tab
 [Reverse Disp.] ► [Off].

## **Shooting Display Options**

Press the [DISP] button to show or hide shooting information, grid lines, or the electronic level.

To configure the on-screen display in greater detail, access [▶1] tab ► [Shooting information display] (☐102).



- Screen brightness is automatically increased by the night view function when you are shooting under low light, making it easier to check how shots are composed. However, on-screen image brightness may not match the brightness of your shots. Note that any on-screen image distortion or jerky subject motion will not affect recorded images.
- For playback display options, see "Switching Display Modes" (\$\sum\_108\$).

Before Use

**Basic Guide** 

**Advanced Guide** 

#### Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



## Using the Quick Set Menu

Configure commonly used functions in the Q (Quick Set) menu. Note that menu items and options vary depending on the shooting mode (197).



### Access the Q menu.



#### Choose a menu item.

- Press the [▲][▼] buttons to choose a menu item (1).
- Available options (2) are shown at the bottom of the screen.



#### 3 Choose an option.

- Press the [◀][▶] buttons or turn the [♠] or [ dial to choose an option.
- Options labeled with a [MENU] icon can be configured by pressing the [MENU] button.
- Options labeled with a IDISA icon can be configured by pressing the [DISP] button.



#### 4 Finish the setup process.

- Press the [ B ] button.
- The screen before you pressed the (A) button in step 1 is displayed again, showing the option you configured.



- To undo any accidental setting changes, you can restore the camera's default settings (\$\sum\_165\$).
- You can also exit by choosing [ ] in the menu items and pressing the [ ] button.

### **Using Touch-Screen Operations to Configure** Settings



- Touch [Q] in the upper right of the screen to access the Quick Set menu.
- Touch a menu item and then an option to complete the setting.
- To return to the previous screen, touch the [ ] menu item, or touch the selected option again.
- You can access the screen for options labeled with a [MENU] icon by touching [MENU]
- You can access the screen for options labeled with a [DISP] icon by touching IDISP.

Refore Use

**Basic Guide** 

Advanced Guide

#### Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 








## Using the Menu Screen

Configure a variety of camera functions through the menu screen as follows.



1 Access the menu screen.

Press the [MENU] button.

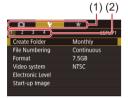

2 Choose a tab.

- Tabs represent functions (1), such as shooting ([♠]), playback ([♠]), or settings ([♠]), or pages within each function (2). Tabs are identified in this manual by combining the function and page, as in [♠1].







3 Choose a menu item.


- Press the [▲][▼] buttons or turn the [⊕] dial to choose an item, and then press the [⊕] button.
- For menu items with options not shown, first press the [⊕] button to switch screens, and then either press the [▲][▼] buttons or turn the [⊕] dial to select the menu item.
- To return to the previous screen, press the [MENU] button.





4 Choose an option.

- When options are listed vertically, press the [▲][▼] buttons or turn the [♣] dial to choose an option.
- When options are listed horizontally, press the [◀][▶] buttons or turn the [♣] dial to choose an option.

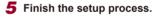

- Press the [
   ] button to confirm your choice and return to the menu item selection screen
- Press the [MENU] button to return to the screen displayed before you pressed the [MENU] button in step 1.



- To undo any accidental setting changes, you can restore the camera's default settings (A165).
- Available menu items vary depending on the selected shooting or playback mode (\$\infty\$200 - \$\infty\$209).

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### **Touch-Screen Operations**

- To choose tabs, press the [MENU] button to access the menu screen, and then touch the desired function tab and page tab.
- Drag the menu items up or down to scroll them, or touch a menu item to choose it.
- Touch an option to complete the setting and return to the menu item selection screen.
- For menu items displayed with a bar to indicate the level, touch the desired position on the bar.
- To configure menu items for which options are not shown, first touch
  the menu item to access the setting screen. On the setting screen,
  either drag or touch to choose the menu item, and then touch to
  choose the option. To return to the previous screen, touch [MENU\*].
- You can also touch input elements (such as check boxes or text fields) to select them, and you can enter text by touching the on-screen keyboard.
- When [SET] is shown, you can touch [SET] instead of pressing the (இ) button, if you prefer.
- When [MENU] is shown, you can touch [MENU] instead of pressing the [MENU] button, if you prefer.
- When [DISP] is shown, you can touch [DISP] instead of pressing the [DISP] button, if you prefer.
- To dismiss the menu, press the [MENU] button again.

## **On-Screen Keyboard**

Use the on-screen keyboard to enter information for Face ID ( $\square$ 48), Wi-Fi connections ( $\square$ 142), and so on. Note that the length and type of information you can enter varies depending on the function you are using.



#### **Entering Characters**

- Touch the characters to enter them.
- The amount of information you can enter (1) varies depending on the function you are using.

#### **Moving the Cursor**

Touch [←][→].

#### **Entering Line Breaks**

Touch [←].

#### **Switching Input Modes**

- To switch to numbers or symbols, touch
   [4].
- Touch [☆] to enter capital letters.
- Available input modes vary depending on the function you are using.

#### **Deleting Characters**

- To delete the previous character, either touch [◆X] or press the [m] button.
- Touching and holding [X] will delete five characters at a time.

Before Use

Basic Guide

Advanced Guide

#### Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





## Confirming Input and Returning to the Previous Screen

• Press the [MENU] button.



Another way to use the keyboard is by pressing the [♠][▼][♠][▶] buttons or turning the [♠] dial to select characters or icons, and then pressing the [♠] button. You can also move the cursor by turning the [♠♠] dial. To return to the previous screen, press the [MENU] button.

## **Indicator Display**

The indicator on the back of the camera ( $\square 4$ ) lights up or blinks depending on the camera status.

Color	Indicator Status	Camera Status
Green	On	Connected to a computer (\$\infty\$178), or display off (\$\infty\$27, \$\infty\$161, \$\infty\$162)
	Blinking	Starting up, recording/reading/transmitting images, shooting long exposures (\$\times\$98, \$\times\$99), or connecting/transmitting via Wi-Fi



 When the indicator blinks green, never turn the camera off, open the memory card/battery cover, or shake or jolt the camera, which may corrupt images or damage the camera or memory card. **Before Use** 

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



## Clock

You can check the current time.





- Press and hold the ( button.
- The current time appears.
- If you hold the camera vertically while using the clock function, it will switch to vertical display. Press the [◀][▶] buttons or turn the [♣] dial to change the display color.
- Press the [<sup>®</sup>] button again to cancel the clock display.



When the camera is off, press and hold the [(3)] button, then
press the ON/OFF button to display the clock.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



## Auto Mode / **Hybrid Auto Mode**

Convenient mode for easy shots with greater control over shooting

## Shooting with Camera-Determined Settings

For fully automatic selection of the optimal settings for specific scenes. simply let the camera determine the subject and shooting conditions.

## **Shooting (Smart Auto)**

► Still Images ► Movies





#### Turn the camera on.

- Press the ON/OFF button
- The startup screen is displayed.



## 2 Enter [AUTO] mode.

- Set the mode dial to [AUTO].
- Aim the camera at the subject. The camera will make a slight clicking noise as it determines the scene
- Icons representing the scene and image stabilization mode are displayed in the upper left of the screen (239, **40**).
- Frames displayed around any detected subjects indicate that they are in focus.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu


Accessories

**Appendix** 







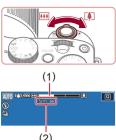

#### 3 Compose the shot.

 To zoom in and enlarge the subject, move the zoom lever toward [ (telephoto), and to zoom away from the subject, move it toward [ (wide angle). (A zoom bar (1) showing the zoom position is displayed, along with the range of focus (2).)

## 4 Shoot. **Shooting Still Images**





- Press the shutter button halfway. The camera beeps twice after focusing, and frames are displayed to indicate image areas in focus.
- Several frames are displayed when multiple areas are in focus.



non.

If [Raise the flash] is displayed, move the [5] switch to raise the flash. It will fire when shooting. If you prefer not to use the flash, push it down with your finger, into the camera



#### Start recording.

- Press the movie button. The camera beeps once as recording begins, and [ Rec] is displayed with the elapsed time (1).
- Black bars are displayed on the top and bottom edges of the screen, and the subject is slightly enlarged. The black bars indicate image areas not recorded.
- Once recording begins, take your finger off the movie button

#### 2) Resize the subject and recompose the shot as needed.

- To resize the subject, repeat the operations in step 3. However, note that the sound of camera operations will be recorded. Note that movies shot at zoom factors shown in blue will look grainy.
- When you recompose shots, the focus, brightness, and colors will be automatically adjusted.





- As the camera shoots, a shutter sound is played, and in low-light conditions when you have raised the flash, it fires automatically.
- Keep the camera still until the shutter sound ends
- After displaying your shot, the camera will revert to the shooting screen.

#### **Recording Movies**

- Frames displayed around any detected faces indicate that they are in focus.

**Appendix** 

Index

Refore Use

**Basic Guide** 

Advanced Guide

Camera Basics

Hybrid Auto Mode

Other Shooting Modes

Tv. Av. M. C1. and C2 Mode

Auto Mode /

P Mode

Playback Mode


Wi-Fi Functions

**Setting Menu** 

Accessories





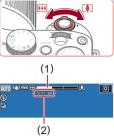








#### 3) Finish recording.

- Press the movie button again to stop recording. The camera beeps twice as recording stops.
- Recording will stop automatically when the memory card becomes full.



The flash firing during shots indicates that the camera has automatically attempted to ensure optimal colors in the main subject and background (Multi-area White Balance).

### Shooting in Hybrid Auto Mode

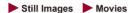

You can make a short movie of the day just by shooting still images. The camera records 2-4-second clips of scenes before each shot, which are later combined in a digest movie.



### 1 Enter [ mode.

Follow step 2 in "Shooting (Smart Auto)"
 ( Shooting (Smart Auto) (Smart Auto) (Smart Auto)



### Compose the shot.

- Follow steps 3 4 in "Shooting (Smart Auto)" (☐35) to compose the shot and focus.
- For more impressive digest movies, aim the camera at subjects about four seconds before shooting still images.



- Follow step 4 in "Shooting (Smart Auto)"
   (235) to shoot a still image.
- The camera records both a still image and movie clip. The clip, which ends with the still image and a shutter sound, forms a single chapter in the digest movie.



- Battery life is shorter in this mode than in [AUTO] mode, because digest movies are recorded for each shot.
- A digest movie may not be recorded if you shoot a still image immediately after turning the camera on, choosing [ mode, or operating the camera in other ways.
- Sounds and vibrations from operating the camera will be recorded in digest movies.



- Digest movie image quality is automatically set to [♣HD 2997P] for NTSC or [♣HD 25,00P] for PAL and cannot be changed (□160).
- Sounds are not played when you press the shutter button halfway or trigger the self-timer (\$\infty\$164).
- - The digest movie file size reaches approximately 4 GB, or the total recording time reaches approximately 16 minutes and 40 seconds.
  - The digest movie is protected (A 116).
- Daylight saving time (\$\sum\_221\$) or time zone (\$\sum\_162\$) settings are changed.
- A new folder is created (A159).
- Recorded shutter sounds cannot be modified or erased.
- If you prefer to record digest movies without still images, adjust the setting in advance. Choose MENU (□31) ► [□7] tab ► [Digest Type] ► [No Stills].

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto <u>Mode</u>

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





#### **Digest Movie Playback**

Display a still image shot in [3] mode to play the digest movie created on the same day, or specify the date of the digest movie to play (109).

### Still Images/Movies



#### Still Images



- A blinking [A] icon warns that images are more likely to be blurred by camera shake. In this case, mount the camera on a tripod or take other measures to keep it still.
- If your shots are dark despite the flash firing, move closer to the subject. For details on the flash range, see "Flash Range" (213).
- The subject may be too close if the camera only beeps once when you press the shutter button halfway. For details on the range of focus (shooting range), see "Shooting Range" (213).
- To reduce red-eye and to assist in focusing, the lamp may be lit when shooting in low-light conditions.
- A blinking [\$\frac{1}{2}\$] icon displayed when you attempt to shoot
  indicates that shooting is not possible until the flash has finished
  recharging. Shooting can resume as soon as the flash is ready,
  so either press the shutter button all the way down and wait, or
  release it and press it again.
- The shutter sound will not be played when the Sleeping and Babies (Sleeping) icons ( 39) are displayed.
- Although you can shoot again before the shooting screen is displayed, your previous shot may determine the focus, brightness, and colors used.



You can change how long images are displayed after shots (\$\mathbb{\pi}\$58).

#### Movies



 Keep your fingers away from the microphone (1) while shooting movies. Blocking the microphone may prevent audio from being recorded or may cause the recording to sound muffled.



- Avoid touching camera controls other than the movie button when shooting movies, because sounds made by the camera will be recorded.
- Once movie recording begins, the image display area changes and subjects are enlarged to allow for correction of significant camera shake. To shoot subjects at the same size shown before shooting, set Dynamic IS to [Low] (457).



- Audio is recorded in stereo.
- During movie recording, lens operating noises from auto focusing may also be recorded. If you prefer not to record sound, choose MENU (□31) ► [□8] tab ► [Sound rec.] ► [Disable].

**Before Use** 

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto <u>Mode</u>

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





#### Scene Icons

► Still Images ► Movies

In [ and [AUTO] modes, shooting scenes determined by the camera are indicated by the icon displayed, and corresponding settings are automatically selected for optimal focusing, subject brightness, and color. Depending on the scene, continuous images may be shot ( 40).

Outrie of	Background				
Subject	Normal	Backlit	Dark*1	Sunsets	Spotlights
People	<b>*</b> 2	*3	R	-	Δ
Moving People	*3	*3	_	-	-
Shadows on Face	<b>!</b> *2	-	_	-	-
Smiling	<b>2</b> *3	*3	_	-	-
Sleeping	*2	*3	_	_	-
Babies	<b>*</b> 3	<b>*</b> 3	_	-	-
Smiling Babies	*3	*3	-	-	-
Sleeping Babies	<b>@</b> .*2	<b>@</b> *3	-	-	-
Moving Children	<b>*</b> 3	*3	_	-	-
Other Subjects	<b>ATT</b> *2	*3	J	<b>**</b>	
Other Moving Subjects	*3	*3	_	-	_
Other Close-Range Subjects	*2	*3	-	-	

- \*1 Tripod Used
- \*2 The background color of icons is light blue when the background is a blue sky, dark blue when the background is dark, and gray for all other backgrounds.
- \*3 The background color of icons is light blue when the background is a blue sky, and gray for all other backgrounds.
- The background color of [A], [A], [A], [A], and [A] is dark blue, and the background color of [M] is orange.

- For movies, only People, Other Subjects, and Other Close-Range Subjects icons are displayed.
- In [ mode, icons are only displayed for People, Shadows on Face, Other Subjects, and Other Close-Range Subjects.
- For self-timer shots, icons are not displayed for the following subjects: moving, smiling, or sleeping people; smiling or sleeping babies; moving children; and other moving subjects.
- Icons are not displayed for smiling or sleeping subjects and moving children in drive modes other than [4] (40, 47) and when [Hg Lamp Corr.] is set to [On] and scenes are automatically corrected (53).
- Backlit icons are not displayed for moving children and smiling people when the flash is set to [\$^A\].
- Icons for babies (including smiling and sleeping babies) and moving children are displayed when [Face ID] is set to [On] and faces of registered babies (less than two years old) or children (2 – 12 years old) are detected (248). Confirm beforehand that the date and time are correct (221).

1

Try shooting in [P] mode (\$\sum\_78\$) if the scene icon does not
match actual shooting conditions, or if it is not possible to shoot
with your expected effect, color, or brightness.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





#### **Continuous Shooting Scenes**

If the icon for one of the following scenes (in table's left column) is displayed when you shoot a still image, the camera shoots continuously. If the icon for one of the following scenes (in table's left column) is displayed when you press the shutter button halfway, one of the icons [4], [4], or [4] is displayed to inform you that the camera shoots continuously.

Smiling (including Babies)	Consecutive images are captured, and the camera analyzes details such as facial expressions to save the image determined to be the best.
Sleeping (including Babies)	Beautiful shots of sleeping faces, created by combining consecutive shots to reduce camera shake and image noise.  The AF-assist beam and the flash will not fire, and the shutter sound will not be played.
Children	So you don't miss a photo opportunity of children who move around, the camera will capture three consecutive images for each shot.



- In some scenes, expected images may not be saved, and images may not look as expected.
- Focus, image brightness, and color are determined by the first shot.



When you want to shoot single images only, press the [▼] button, and then select [☐] (either press the [◀][▶] buttons or turn the [**(**)] dial).

### **Image Stabilization Icons**

► Still Images ► Movies



Optimal image stabilization for the shooting conditions (Intelligent IS) is automatically applied, and the following icons are displayed.

	3 11 7	
(4)	Image stabilization for still images (Normal)	
<b>((→)</b> )	Image stabilization for still images when panning (Panning)*	
(4) (4)	Image stabilization for macro shots. During movie recording, [((iii))] is displayed, and image stabilization for macro movie recording is used (Hybrid IS).	
( <b>4</b> B)	Image stabilization for movies, reducing strong camera shake, as when shooting while walking (Dynamic)	
( <b>#</b> )	Image stabilization for slow camera shake, such as when shooting movies at telephoto (Powered)	
(( <del>(?)</del> )	No image stabilization, because the camera is mounted on a tripod or held still by other means. However, during movie recording, [((47))] is displayed, and image stabilization to counteract wind or other sources of vibration is used (Tripod IS).	

\* Displayed when you pan, following moving subjects with the camera. When you follow subjects moving horizontally, image stabilization only counteracts vertical camera shake, and horizontal stabilization stops. Similarly, when you follow subjects moving vertically, image stabilization only counteracts horizontal camera shake



- To cancel image stabilization, set [IS Mode] to [Off] (\$\omega\$56). In this case, an IS icon is not displayed.
- In [♣] mode, no [♠)] icon is displayed.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





#### **On-Screen Frames**

Still Images Movies



In [AUTO] mode, a variety of frames are displayed once the camera detects subjects you are aiming the camera at.

- A white frame is displayed around the subject (or person's face) determined by the camera to be the main subject, and gray frames are displayed around other detected faces. Frames follow moving subjects within a certain range to keep them in focus. However, if the camera detects subject movement, only the white frame will remain on the screen.
- When you are pressing the shutter button halfway and the camera detects subject movement, a blue frame is displayed, and the focus and image brightness are constantly adjusted (Servo AF).



Try shooting in [P] mode (Q78) if no frames are displayed, if frames are not displayed around desired subjects, or if frames are displayed on the background or similar areas.



To choose subjects to focus on, touch the desired subject on the screen. [ ] is displayed, and the camera enters Touch AF mode.

### **Common, Convenient Features**

# **Zooming In Closer on Subjects (Digital Zoom)**




When distant subjects are too far away to enlarge using the optical zoom, use digital zoom for up to about 100x enlargement.



#### **1** Move the zoom lever toward [ ▲ ].

- Hold the lever until zooming stops.
- Zooming stops at the largest zoom factor before the image becomes noticeably grainy, which is then indicated on the screen.

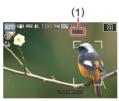

#### Move the zoom lever toward [ ♣ ] again.

- The camera zooms in even closer on the subject.
- (1) is the current zoom factor.



- Moving the zoom lever will display the zoom bar (which indicates the zoom position). The color of the zoom bar will change depending on the zoom range.
- White range: optical zoom range where the image will not appear grainy.
- Yellow range: digital zoom range where the image is not noticeably grainy (ZoomPlus).
- Blue range: digital zoom range where the image will appear
- Because the blue range will not be available at some recording pixel settings (Q96), the maximum zoom factor can be achieved by following step 1.

Refore Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







To deactivate digital zoom, choose MENU (□31) ► [ 2] tab ► [Digital Zoom] ► [Off].

# **Shooting at Preset Focal Lengths (Step Zoom)**

► Still Images ► Movies

Shoot at common focal lengths in a range of 24 – 600 mm (35mm film equivalent).



 Turn the [ dial clockwise until it clicks to change the focal length from 24 mm to 28 mm. Turn the [ dial clockwise to zoom in or counterclockwise to zoom out.



Step zoom is not available when shooting movies even if you turn the [ dial.



When using the digital zoom (41), turning the [ dial clockwise will not change the zoom factor. However, turning the [ dial counterclockwise will set the focal length to 600 mm.

### **Easily Reacquiring Subjects after Manual Zooming (Framing Assist – Seek)**

► Still Images ► Movies



If you lose track of a subject while zoomed in, you can find it more easily by temporarily zooming out.



### 1 Look for the lost subject.

- Press and hold the [☐] button.
- The camera zooms out and displays a white frame around the area shown before you pressed the [L] button.



#### 2 Reacquire the subject.

- Aim the camera so that the subject enters the white frame, and then release the [t̅□t] button.
- The previous magnification is now restored, so that the area within the white frame fills the screen again.



- Some shooting information is not displayed while the camera is zoomed out
- During movie shooting, the white frame is not displayed if you press the [ ] button. Also note that a changed zoom factor and camera operating sounds are recorded.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







- If you prefer to shoot at the zoom factor of the screen in step 1, press the shutter button all the way down.
- You can adjust the zoom factor that the camera reverts to when you release the [ ] button by moving the zoom lever to resize the white frame while you hold the [ ] button.
- To adjust the area displayed when the [ button is pressed, access MENU (□31) ► [□7] tab ► [□ Display Area], and choose one of the three options.
- The zoom factor cannot be changed with the [□] button after you press the shutter button all the way down in self-timer mode (45).

### **Auto Zooming in Response to Subject** Movement (Auto Zoom)





The camera automatically zooms in and out to keep a detected face (Q90) at a constant size. If the person moves closer, the camera automatically zooms out, and vice versa. This size can also be adjusted, as needed.





### Enter ['\(\sigma'\)] Auto mode.

- Press and release the [☐] button quickly.
- ['□'] is displayed.
- A white frame is displayed around the detected face, and the camera zooms in and out to keep the subject on the screen.
- When multiple faces are detected, a white frame is displayed around the main subject's face and up to two gray frames around other faces, as the camera zooms to keep these subjects on the screen.

#### 2 Shoot.

- Auto zooming continues even after you shoot, and the frames are still displayed.
- To cancel auto zooming, press the [¹□¹] button again. I' Auto: Offl is displayed.



- A face may not be displayed at a constant size relative to the screen at some zoom factors, or if the person's head is tilted or facing the camera indirectly.
- During movie recording, a changed zoom factor and camera operating sounds are recorded.
- When \( \subseteq \text{Auto is on, some shooting information is not displayed,} \) and some shooting settings cannot be configured.
- Auto zooming to keep multiple subjects on the screen is not performed during movie recording, even if faces are detected.
- You can zoom in or out with the zoom lever, but the original zoom factor will be restored in a few seconds after you release the
- Auto zooming is not performed during continuous shooting.



- If multiple faces are detected in step 2, you can change the face used as the main subject by touching the face or pressing the [ button. However, the button cannot be used for selection during movie recording.
- When a detected subject moves toward the edge of the screen, the camera zooms out to keep the subject on the screen.
- The zoom factor cannot be changed after you press the shutter button all the way down in self-timer mode (45)
- The camera prioritizes zooming to keep subjects on the screen. For this reason, it may not be possible to maintain a constant face display size, depending on subject movement and shooting conditions.
- When no face is detected, the camera zooms to a certain level. and stops zooming until a face is detected.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





#### **Adjusting the Constant Face Display Size**



- When ☐ Auto is on, press the [4][▶] buttons or turn the [ | dial to choose the desired option.
- The camera zooms automatically to keep faces at the specified size.

Auto	Auto zoom to prevent subjects from moving off the screen. When multiple faces are detected, the camera zooms to keep these subjects on the screen.
Face	Keep faces large enough to show facial expressions clearly.
Upper Body	Keep faces small enough to show the person's upper body.
Whole Body	Keep faces small enough to show the person's entire body.
Manual	Keep faces at the size specified by moving the zoom lever. Release the zoom lever once the desired size has been obtained.




- The face size can also be adjusted in MENU (☐31) ► [☐7] tab ► [ ☐ Auto Settings] ► [ ☐ Auto Zoom]. You can choose [Off] to deactivate this feature and use only the feature described in "Easily Reacquiring Subjects with Auto Zooming (Seek Assist)"
- You can zoom in or out with the zoom lever when [Face], [Upper Body], or [Whole Body] is selected, but the original zoom factor will be restored in a few seconds after you release the lever.
- You can clear your specified face size during movie recording by pressing the [. ] button.



• When '\(\sigma'\) Auto is on, you can also choose options by touching 

### **Easily Reacquiring Subjects with Auto Zooming (Seek Assist)**

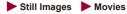



If you lose track of a subject while zoomed in and move the camera to look for it, the camera detects this movement and automatically zooms out, which makes it easier to find the subject.

1 Enter [ ] Auto mode ( 43).



- 2 Look for the lost subject.
- When you move the camera to look for the subject, the camera zooms out to help you find it.



- Reacquire the subject.
- Once you find the subject and stop moving the camera, the camera zooms in again.



- Shoot.
- To cancel this mode, press the [\*□¹] button again. ['\pi' Auto: Off] is displayed.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 







- The camera does not zoom out automatically while [ ] is displayed around a detected face, even if you move the camera.
- When the feature described in "Auto Zooming in Response to Subject Movement (Auto Zoom)" ( ( 43) is deactivated, [ 7] is displayed around a detected face, and the camera automatically zooms out when moved.
- Zooming is not possible while the shutter button is pressed halfway.
- To deactivate this feature and use only the feature described in
   "Auto Zooming in Response to Subject Movement (Auto Zoom)"
   (□43), choose MENU (□31) ► [□7] tab ► [□ Auto
   Settings] ► [Seek Assist] ► [Off].

### Using the Self-Timer



With the self-timer, you can include yourself in group photos or other timed shots. The camera will shoot about 10 seconds after you press the shufter button







#### 1 Configure the setting.

- Press the (<sup>®</sup>) button, choose (<sup>™</sup>) in the menu, and then choose (<sup>™</sup>) (<sup>™</sup>30).
- Once the setting is complete, [☼₀] is displayed.

#### 2 Shoot.

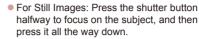



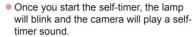

- Two seconds before the shot, the blinking and sound will speed up. (The lamp will remain lit in case the flash fires.)
- To cancel shooting after you have triggered the self-timer, press the [MFNU] button.
- To restore the original setting, choose [☼] in step 1.

#### **Using the Self-Timer to Avoid Camera Shake**



This option delays shutter release until about two seconds after you have pressed the shutter button. If the camera is unsteady while you are pressing the shutter button, it will not affect your shot.



- Follow step 1 in "Using the Self-Timer"
   (△45) and choose [☼].
- Once the setting is complete, [♠] is displayed.
- Follow step 2 in "Using the Self-Timer" (45) to shoot.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







#### **Customizing the Self-Timer**

Still Images Movies

You can specify the delay (0 - 30 seconds) and number of shots (1 - 10).




### Choose [6].

Following step 1 in "Using the Self-Timer" (45), choose [6] and press the IDISP1 button.



#### 2 Configure the setting.

- Press the [▲][▼] buttons to choose the delay time or number of shots.
- Press the [◀][▶] buttons or turn the [♠] dial to choose a value, and then press the [ ] button.

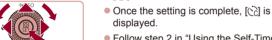

- Follow step 2 in "Using the Self-Timer"  $(\square 45)$  to shoot.



For movies recorded using the self-timer, recording begins after your specified delay time, but specifying the number of shots has no effect.



- When you specify multiple shots, image brightness and white balance are determined by the first shot. More time is required between shots when the flash fires or when you have specified to take many shots. Shooting will stop automatically when the memory card becomes full.
- When a delay longer than two seconds is specified, two seconds before the shot, the lamp blinking and self-timer sound will speed up. (The lamp will remain lit in case the flash fires.)

### **Shooting by Touching the Screen** (Touch Shutter)

► Still Images ► Movies



With this option, instead of pressing the shutter button, you can simply touch the screen and release your finger to shoot. The camera will focus on subjects and adjust image brightness automatically.



#### Enable touch-shutter function.

• Press the [MENU] button, choose [Touch Shutter] on the [ 2] tab, and then choose [On] (231).



#### 2 Shoot.

- Touch the subject on the screen, and then lift your finger immediately.
- The camera shoots, as a shutter sound is played.
- To cancel touch shutter, choose [Off] in step 1.



Even while the shot is displayed, you can prepare for the next shot by touching [ 1]

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





### **Continuous Shooting**

Still Images Movies



In [AUTO] mode, hold the shutter button all the way down to shoot continuously.

For details on the continuous shooting speed, see "Continuous Shooting Speed" (213).



#### Configure the setting.

- Press the 「▼] button, turn the 「●] dial to choose [4]. and then press the [4] button
- Once the setting is complete, [□] is displayed.



#### 2 Shoot.

Hold the shutter button all the way down to shoot continuously.



- During continuous shooting, the focus, exposure, and colors are locked at the position/level determined when you pressed the shutter button halfway.
- Cannot be used with the self-timer (45).
- Shooting may stop momentarily or continuous shooting may slow down depending on shooting conditions, camera settings, and the zoom position.
- As more shots are taken, shooting may slow down.
- Shooting may slow down if the flash fires.
- Multi-area White Balance (235) is not available. Also note that these features are not available.
  - [Hg Lamp Corr.] ( 53) [Blink Detection] (\$\iii56\$)
- With Touch Shutter (Q46), the camera shoots continuously while you touch the screen. Focus and exposure during continuous shooting remain constant, after they are determined for the first shot.



In [AUTO] mode, you can also choose items in step 1 by pressing the [4][1] buttons.

#### Image Display during Playback

Each set of images shot continuously is managed as a single group. and only the first image in that group will be displayed. To indicate that the image is part of a group, [SEE ] is displayed in the upper left of the screen



If you erase a grouped image (\$\infty\$118), all images in the group are also erased. Be careful when erasing images.



- Grouped images can be played back individually ( 113) and ungrouped (A113).
- Protecting ( 116) a grouped image will protect all images in the group.
- Grouped images can be viewed individually when played back using Image Search ( 110). In this case, images are temporarily ungrouped.
- The following actions are not available for grouped images: editing Face ID information (Q114), magnifying (Q115), tagging as favorites (\$\iii121\$), editing (\$\iii124\$), printing (\$\bigcap\$180), setting up individual image printing (\$\bigcap\$184), or adding to a photobook ( 185). To do these things, either view grouped images individually (A113) or cancel grouping (QQ 113) first.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





# Using Face ID

If you register a person ahead of time, the camera will detect that person's face, and prioritize focus, brightness, and color for that person when shooting. In [AUTO] mode, the camera can detect babies and children based on registered birthdays and optimize settings for them when shooting.

This function is also useful when searching for a specific registered person among a large number of images (2111).

#### **Personal Information**

- Information such as images of a face (face info) registered with Face ID, and personal information (name, birthday) will be saved on the camera. Additionally, when registered people are detected, their names will be recorded in still images. When using the Face ID function, be careful when sharing the camera or images with others, and when posting images online where many others can view them.
- When disposing of a camera or transferring it to another person after using Face ID, be sure to erase all information (registered faces, names, and birthdays) from the camera (\$\infty\$52).

### **Registering Face ID Information**

You can register information (face info, names, and birthdays) for up to 12 people to use with Face ID.









- 1 Access the setting screen.
- Press the [MENU] button, choose [Face ID Settings] on the [12] tab, and then press the [3] button (131).
- Press the [▲][▼] buttons or turn the [♠] dial to choose [Add to Registry], and then press the [♠] button.
- Press the [▲][▼] buttons or turn the [♣] dial to choose [Add a New Face], and then press the [♠] button.
- 2 Register face information.
- Aim the camera so that the face of the person you want to register is inside the gray frame at the center of the screen.
- A white frame on the person's face indicates that the face is recognized.
   Make sure a white frame is displayed on the face, and then shoot.
- If the face is not recognized, you cannot register face information.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions


Setting Menu

Accessories

Appendix





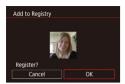

- After [Register?] is displayed, press the
   [◀][▶] buttons or turn the [♣] dial to
   choose [OK], and then press the [♣]
   button.
- The [Edit Profile] screen is displayed.







- 3 Register the person's name and birthday.
- Press the (B) button to access the keyboard, and then enter the name (232).
- To register a birthday, on the [Edit Profile] screen, choose [Birthday] (either press the [▲][▼] buttons or turn the [♠] dial), and then press the [♠] button.
- Press the [◀][▶] buttons to choose an option.
- Press the [▲][▼] buttons or turn the [♣] dial to specify the date.
- When finished, press the [ ] button.
- 4 Save the settings.
  - Press the [▲][▼] buttons or turn the [♣] dial to choose [Save], and then press the [♣] button.
  - After a message is displayed, press the
     [◀][▶] buttons or turn the [♣] dial to
     choose [Yes], and then press the [♣]
     button.

# **5** Continue registering face information.

- To register up to 4 more points of face information (expressions or angles), repeat step 2.
- Registered faces are more easily recognized if you add a variety of face information. In addition to a head-on angle, add a slight side angle, a shot when smiling, and shots inside and outside.



- The flash will not fire when following step 2.
- If you do not register a birthday in step 3, Babies or Children icons (A)39) will not be displayed in [AUTO] mode.



 You can overwrite registered face info, and add face info later if you have not filled all 5 face info slots (Q48).

## Shooting

If you register a person ahead of time, the camera will prioritize that person as the main subject, and optimize focus, brightness, and color for that person when shooting.



- When you point the camera toward people, the names of up to 3 registered people will be displayed when they are detected.
- Shoot.
- Displayed names will be recorded in still images. The names of detected people (maximum total of 5) will be recorded, even if the names are not displayed.

Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 








People other than those registered may be mistakenly detected as the registered person if they share similar facial features.



- Registered people may not be correctly detected if the captured image or scene differs drastically from the registered face information
- If a registered face is not detected, or not easily detected, overwrite registered information with new face info. Registering face info right before shooting will allow for easier detection of registered faces.
- If a person is mistakenly detected as another person and you continue shooting, you can edit or erase the name recorded in the image during playback ( 114).
- Because faces of babies and children change guickly as they grow, you should update their face info regularly (48).
- Names will still be recorded in images even if you clear the [Shooting Info] check box in "Customizing the Information Displayed" (103) so that the names are not displayed.
- If you don't want names to be recorded in images, choose [Face ID Settings] on the [ 2] tab, choose [Face ID], and then choose
- You can check names recorded in images in the playback screen (simple information display) (\$\iii 108\$).
- In [ mode, names are not displayed on the shooting screen, but they will be recorded in still images.
- Names recorded in continuous shooting (Q47) continue to be recorded in the same position as the first shot, even if subjects move.

### **Checking and Editing Registered Information**



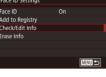





- 1 Access the [Check/Edit Info] screen.
- Following step 1 in "Registering Face ID Information" (48), choose [Check/ Edit Infol and press the [4] button.
- 2 Choose a person to check or edit their information.
- Press the [▲][▼][◀][▶] buttons to choose the person whose information you want to check or edit, and then press the [@] button.
- 3 Check or edit the information as needed.
  - To check a name or birthday, choose [Edit Profile] (either press the [▲][▼] buttons or turn the [ dial), and then press the [ button. On the screen displayed, you can edit the name or birthday as described in step 3 of "Registering Face ID Information" (48).
  - To check face information, choose [Face Info List] (either press the [▲][▼] buttons or turn the [ dial), and then press the [P] button. Press the [P] button on the screen displayed, choose face information to erase by pressing the [▲][▼][◀][▶] buttons or turning the [♣] dial, and then press the [ ] button. After [Erase?] is displayed, choose [OK] (either press the [4][1] buttons or turn the [1] dial), and then press the [ ] button.

Before Use **Basic Guide** Advanced Guide **Camera Basics** Auto Mode / Hybrid Auto Mode Other Shooting Modes P Mode Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







Even if you change names in [Edit Profile], the names recorded in previously shot images will remain the same.

#### **Overwriting and Adding Face Information**

You can overwrite existing face information with new face info. You should update face information regularly, especially with babies and children, as their faces change quickly as they grow.

You can also add face information when all 5 face info slots have not been filled.



1 Access the [Add Face Info] screen.

 Following step 1 in "Registering Face ID Information" (248), choose [Add Face Info] and press the (3) button.



2 Choose a person to overwrite their face info.

- Press the [▲][▼][◀][▶] buttons to choose the name of the person whose face info you want to overwrite, and then press the [♠] button.
- If five items of face info have already been registered, a message will be displayed. Choose [OK] (either press the [◀][▶] buttons or turn the [♣] dial), and then press the [♣] button.
- If less than five items of face info are registered, go to step 4 to add face information.





**3** Choose the face info to overwrite.

 Press the [▲][▼][◀][▶] buttons or turn the [♣] dial to choose the face info to overwrite, and then press the [♣] button.

4 Register face information.

- Follow step 2 in "Registering Face ID Information" (48) to shoot, and then register the new face information.
- Registered faces are more easily recognized if you add a variety of face information. In addition to a head-on angle, add a slight side angle, a shot when smiling, and shots inside and outside.



- You cannot add face information if all 5 information slots are filled.
   Follow the steps above to overwrite face information.
- You can follow the above steps to register new face info when there is at least one slot open; however, you cannot overwrite any face information. Instead of overwriting face info, first erase unwanted existing info (\$\square\$50\$), and then register new face information (\$\square\$48\$) as needed.

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### **Erasing Registered Information**

You can erase information (face info, names, and birthdays) registered to Face ID. However, names recorded in previously shot images will not be erased.



### Access the [Erase Info] screen.

 Follow step 1 in "Registering Face ID" Information" (48) and choose [Erase Info1



#### 2 Choose a person to erase their information.

- Press the [▲][▼][◀][▶] buttons to choose the name of the person to erase, and then press the ( button.
- After [Erase?] is displayed, press the [4][ ] buttons or turn the [ ) dial to choose [OK], and then press the [1] button



If you erase a registered person's info, you will not be able to display their name (Q110), overwrite their info (Q114), or 



You can also erase names in image information (\$\text{l114}\$).

### Image Customization Features

# **Changing the Aspect Ratio**

Still Images Movies

Change the image aspect ratio (ratio of width to height) as follows.



- Press the Pres menu, and choose the desired option (430).
- Once the setting is complete, the screen aspect ratio will be updated.
- To restore the original setting, repeat this process but choose [3:2].



- Used for display on widescreen HDTVs or similar display devices.
- Native aspect ratio of the camera screen. Same aspect ratio as 35mm film, used for printing images at 5 x 7-inch or postcard sizes.
- Used for display on standard-definition televisions or similar display 4:3 devices. Also used for printing images at 3.5 x 5-inch or A-series sizes.
- 1:1 Square aspect ratio.



- Not available in [ mode.
- - ► [ 1] tab ► [Still Image Aspect Ratio].

Refore Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

Appendix





### **Changing Image Quality**

Still Images Movies



Choose from 4 levels of image quality. For quidelines on how many of each kind of image can fit on a memory card, see "Number of Shots per Memory Card" (A212).



- Press the Pres menu, and choose the desired option (230).
- The option you configured is now displayed.
- To restore the original setting, repeat this process but choose [4].

Guidelines for Choosing Recording Pixel Setting Based on Paper Size (for 3:2 Images)

4L	A2 (16.5 x 23.4 in.)
<b>4</b> M1	A3 – A5 (11.7 x 16.5 – 5.8 x 8.3 in.)
<b>4</b> M2	3.5 x 5 in., 5 x 7 in., Postcard
<b>⊿</b> S	For e-mailing and similar purposes



- Not available in [ mode.
- - ► [ 1] tab ► [Image quality].

### **Correcting Greenish Image Areas from Mercury Lamps**

► Still Images ► Movies



In [ALITO] mode, subjects or background in shots of evening scenes illuminated by mercury lamps may appear to have a greenish tinge. This greenish tinge can be corrected automatically when shooting, using Multiarea White Balance.



- Press the [MFNI] button, choose [Ha Lamp Corr.] on the [ 6] tab, and then choose [On] (231).
- Once the setting is complete, [♣] is displayed.
- To restore the original setting, repeat this process but choose [Off].



After you are finished shooting under mercury lamps, you should set [Hg Lamp Corr.] back to [Off]. Otherwise, green hues not caused by mercury lamps may be corrected by mistake.



- Try taking some test shots first to make sure you obtain the desired results.
- In continuous shooting (Q47), this setting is set to [Off] and cannot be changed.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### Changing Movie Image Quality

➤ Still Images ➤ Movies

Adjust movie image quality (image size and frame rate). The frame rate indicates how many frames are recorded per second, which is determined automatically based on the NTSC or PAL setting (\$\sum\_160\$). For guidelines on the maximum movie length at each level of image quality that will fit on a memory card, see "Recording Time per Memory Card" (\$\sum\_2213\$).



- Press the (B) button, choose the movie quality menu item, and then choose the desired option (A30).
- The option you configured is now displayed.



#### For NTSC Video

Image Quality	Number of Recording Pixels	Frame Rate	Details
EFHD 59.94P	1920 x 1080	59.94 fps	For shooting in Full
□FHD 29.97P	1920 x 1080	29.97 fps	HD. [晰 59,947] enables movies with smoother
EFHD 23.98P	1920 x 1080	23.98 fps	motion
HD 29.97P	1280 x 720	29.97 fps	For shooting in HD
EVGĀ 29.97P	640 x 480	29.97 fps	For shooting in standard definition

#### For PAL Video

Image Quality	Number of Recording Pixels	Frame Rate	Details
EFHD 50.00P	1920 x 1080	50.00 fps	For shooting in Full
EFHD 25.00P	1920 x 1080	25.00 fps	HD.
□HD 25.00P	1280 x 720	25.00 fps	For shooting in HD
EVGA 25.00P	640 x 480	25.00 fps	For shooting in standard definition



- Black bars (displayed on the left and right in [\$\(\text{E}\)[\(\frac{25.002}{1}\)] and [\$\(\text{E}\)[\(\frac{25.002}{1}\)] modes and on the top and bottom in [\$\text{E}\)[\(\frac{25.002}{1}\)], [\$\(\text{E}\)[\(\frac{25.002}{1}\)], [\$\(\text{E}\)[\(\frac{25.002}{1}\)], [\$\(\text{E}\)[\(\frac{25.002}{1}\)], and [\$\(\text{E}\)[\(\frac{25.002}{1}\)] modes) indicate image areas not recorded.
- You can also configure this setting by choosing MENU (□31)
   □ 8] tab
   □ Movie Qualityl.

Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



### **Helpful Shooting Features**

### **Using the Electronic Level**

Still Images Movies

An electronic level can be displayed on the screen when shooting as a guideline to determine if the camera is level.



Display the electronic level.

 Press the [DISP] button to display the electronic level



00 0

2 Level the camera as needed.

I evel the camera so that the center of the electronic level is green.



- If the electronic level is not displayed in step 1, press the MFNU button and check the setting in [ 1] tab ► [Shooting] information display].
- Tilting the camera too far forward or backward will prevent you from using the electronic level, which will turn gray.
- The electronic level is not displayed during movie recording.
- If you hold the camera vertically, the orientation of the electronic level will be updated automatically to match the camera orientation
- Calibrate the electronic level if it seems ineffective in helping you level the camera (QQ 161).
- Not available in [ mode.

### Magnifying the Area in Focus

enlarge the portion of the image in focus in the AF frame.

► Still Images ► Movies

**Basic Guide** 

Advanced Guide

Refore Use

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 

Index

Configure the settings.

You can check the focus by pressing the shutter button halfway, which will



2 3 4 5 6 7 8 SHOOT

• Press the [MENU] button, choose [AF-Point Zoom] on the [ 2] tab, and then choose [On] ( 31).



On

2 Check the focus.

- Press the shutter button halfway. The face detected as the main subject is now magnified.
- To restore the original setting, choose [Off] in step 1.



AF-Point Zoom

- The area in focus is not magnified in the following cases when the shutter button is pressed halfway.
  - If a face was not detected, if the person is too close to the camera and their face is too large for the screen, or if the camera detects subject movement
  - When digital zoom is used (41)
  - When a TV is used as a display (\$\iii169)\$
- Not available in [ mode.



### **Checking for Closed Eyes**

► Still Images ► Movies



is displayed when the camera detects that people may have closed their eves.



### Configure the setting.

• Press the [MENU] button, choose [Blink Detection] on the [ 7] tab, and then choose [On] (231).



#### 2 Shoot.

- [፮] flashes when the camera detects a person whose eyes are closed.
- To restore the original setting, choose [Off] in step 1.



- When you have specified multiple shots in [C] mode, this function is only available for the final shot.
- A frame is displayed around people whose eyes are closed when you have selected [2 sec.], [4 sec.], [8 sec.], or [Hold] in [Display Time] (\$\infty\$58).
- This feature is not available during continuous shooting in [4] mode (40).
- This feature is not available in continuous shooting mode (47).

### Changing the IS Mode Settings

### **Deactivating Image Stabilization**



► Still Images ► Movies

When the camera is held still (as when shooting from a tripod), you should set image stabilization to [Off] to deactivate it.

### 1 Access the setting screen.

• Press the [MENU] button, choose [IS Settings] on the [ 4] tab, and then press the  $[\mathbb{R}]$  button  $(\mathbb{L}31)$ .



### Configure the setting.

Press the [▲][▼] buttons or turn the [ dial to choose [IS Mode], press the [♠] button, and then press the [♠][▼] buttons or turn the [ dial to choose the desired option ( 31).

Continuous	Optimal image stabilization for the shooting conditions is automatically applied (Intelligent IS) (Q40).
Off	Deactivates image stabilization

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### Recording Movies with Subjects at the Same Size Shown before Recording



Normally, once movie recording begins, the image display area changes and subjects are enlarged to allow for correction of significant camera shake

To record movies with subjects at the same size shown before shooting. you can reduce image stabilization.



- Follow step 1 in "Deactivating Image Stabilization" (\$\square\$56\$) to access the [IS Settings1 screen.
- Choose [Dynamic IS], and then choose [Low] ( 31).



- You can also set [IS Mode] to [Off], so that subjects are recorded at the same size shown before shooting
- [Dynamic IS] is not available when [IS Mode] is set to [Off]
- Only [Standard] is available when the movie quality is [29,977] (NTSC) or [W 25.00P] (PAL).

# **Customizing Camera Operation**

Customize shooting functions on the [ ] tab of the menu screen as follows

For instructions on menu functions, see "Using the Menu Screen" (231).

# **Preventing the AF-Assist Beam from Firing**





You can deactivate the lamp that normally lights up to help you focus when you press the shutter button halfway in low-light conditions.



- Press the [MENU] button, choose [AFassist Beam] on the [ 3] tab, and then choose [Off] (A31).
- To restore the original setting, repeat this process but choose [On].

### **Preventing the Red-Eye Reduction Lamp from Lighting Up**


Still Images Movies



You can deactivate the red-eye reduction lamp that lights up to reduce red-eye when the flash is used in low-light shots.

#### 1 Access the [Flash Control] screen.

• Press the [MENU] button, choose [Flash Control] on the [5] tab, and then press the [4] button (431).

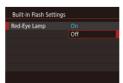

- 2 Configure the setting.
- Choose [Red-Eye Lamp], and then choose [Off] (A31).
- To restore the original setting, repeat this process but choose [On].

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





### Changing the Image Display Style after Shots



You can change how long images are displayed and what information is displayed immediately after shooting.

#### **Changing the Image Display Period after Shots**

- 1 Access the [Review image after shooting] screen.
- Press the [MENU] button, choose [Review image after shooting] on the [ 2] tab, and then press the [ 3] button ( 31).



### 2 Configure the setting.

- To restore the original setting, repeat this process but choose [Quick].

Quick	Displays images only until you can shoot again.
2 sec., 4 sec., 8 sec.	Displays images for the specified time. Even while the shot is displayed, you can take another shot by pressing the shutter button halfway again.
Hold	Displays images until you press the shutter button halfway.
Off	No image display after shots.

#### **Changing the Screen Displayed after Shots**

Change the way images are displayed after shots as follows.

1 Set [Display Time] to [2 sec.], [4 sec.], [8 sec.], or [Hold] (\$\infty\$58).



### 2 Configure the setting.

- To restore the original setting, repeat this process but choose [Off].

Off	Displays only the image.
Detailed	Displays shooting details (🛄 194).



- When [Display Time] (\$\sum\_558\$) is set to [Off] or [Quick], [Display Info] is set to [Off] and cannot be changed.
- By pressing the DISP; button while an image is displayed after shooting, you can switch the display information. Note that the settings of [Display Info] are not changed. You can also erase images by pressing the mill button.

**Before Use** 

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

Appendix






# **Other Shooting Modes**

Shoot more effectively in various scenes, and take shots enhanced with unique image effects or captured using special functions



# **Enjoying a Variety of Images from Each Shot (Creative Shot)**

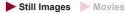



The camera determines the subject and shooting conditions, automatically applying special effects and recomposing the shot to emphasize the subject. Six still images are recorded for each shot. You can capture multiple still images with effects using camera-determined settings.



- Enter [刘] mode.
- Set the mode dial to [⟨√]₁].

#### Shoot.

- Press the shutter button all the way down. As you shoot, the shutter sound is played three times.
- After the six images are displayed in succession, they are displayed simultaneously for about two seconds.
- To keep the images displayed until you press the shutter button halfway, press the [ button. For full-screen display in this state, choose an image by pressing the [▲][▼][◀][▶] buttons or turning the (a) dial, and then press the button.
- To return to the original display, press the [MENU] button.



- Shooting will take some time when the flash fires, but hold the camera steady until the shutter sound is played three times.
- The six images are managed together as a group (Q113).
- Simultaneous display of the six images as shown in step 2 is only available immediately after you shoot.

Refore Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





### **Choosing Effects**

► Still Images ► Movies



You can choose effects for images captured in [ mode.



• After choosing [ ] mode, turn the [ dial to choose the effect

A Auto	All effects
ि Retro	Images resemble old photos
ฟ Monochrome	Images are generated in one color
্ৰি Special	Bold, distinctive-looking images
Ñ Natural	Subdued, natural-looking images

# Moving Subjects (Sports)

► Still Images ► Movies



Shoot continuously as the camera focuses on moving subjects.



1 Enter [ mode.

● Set the mode dial to [4].



2 Focus.

 While you are pressing the shutter button halfway, the camera will continue to adjust focus and image brightness where the blue frame is displayed.

3 Shoot.

Hold the shutter button all the way down to shoot continuously.



- In [ mode, shots may look grainy because the ISO speed (Q80) is increased to suit the shooting conditions.
- For details on the shooting range in [4] mode, see "Shooting Range" (213).
- There may be a delay after continuous shooting before you can shoot again. Note that some types of memory cards may delay your next shot even longer.
- Shooting may slow down depending on shooting conditions, camera settings, and the zoom position.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



### **Specific Scenes**

Choose a mode matching the shooting scene, and the camera will automatically configure the settings for optimal shots.



Enter [SCN] mode.

Set the mode dial to [SCN].



2 Choose a shooting mode.

 Press the (
 B) button, choose (
 In the menu, and then choose a shooting mode (230).

3 Shoot.



Shooting Portraits (Portrait)

► Still Images ► Movies

 Take shots of people with a softening effect



Shooting Evening Scenes without Using a Tripod (Handheld Night Scene)

Still Images Movies



- Beautiful shots of evening scenes or portraits with evening scenery in the background, without the need to hold the camera very still (as with a tripod).
- A single image is created by combining consecutive shots, reducing camera shake and image noise.



\* Shooting with Snowy Backgrounds (Snow)

► Still Images ► Movies



Bright, natural-colored shots of people against snowy backgrounds.



Shooting Fireworks (Fireworks)

► Still Images ► Movies

Vivid shots of fireworks.



- Subjects appear larger in [17] mode compared to other modes.
- In [ ] mode, shots may look grainy because the ISO speed (Q80) is increased to suit the shooting conditions.
- Because the camera will shoot continuously in [ mode, hold it steady while shooting.
- In [ mode, excessive motion blur or certain shooting conditions may prevent you from obtaining the desired results.
- In [ mode, mount the camera on a tripod or take other measures to keep it still and prevent camera shake. Additionally, you should set [IS Mode] to [Off] when using a tripod or other means to secure the camera (\$\square\$56).



- When you use a tripod for evening scenes, shooting in [AUTO] mode instead of [ mode will give better results ( 35).
- In [ mode, although no frames are displayed when you press the shutter button halfway, optimal focus is still determined.
- You can also choose the shooting mode by accessing MENU (□31) ► [ 1] tab ► [Rec. Mode].

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 







### Image Effects (Creative Filters)

Add a variety of effects to images when shooting.



- 1 Enter [2] mode.
- Set the mode dial to [2].



- 2 Choose a shooting mode.
  - Press the (P) button, choose (H)R in the menu, and then choose a shooting mode (230).
- 3 Shoot.



- Shooting in Vivid Colors (Super Vivid)
  - ► Still Images ► Movies
  - Shots in rich, vivid colors.



- Posterized Shots (Poster Effect)
  - ► Still Images ► Movies
  - Shots that resemble an old poster or illustration.



In [2] and [7] modes, try taking some test shots first, to make sure you obtain the desired results.



contrast shots.

You can also choose the shooting mode by accessing MENU (□31) ► [ 1] tab ► [Rec. Mode].

### **Shooting High-Contrast Scenes** (High Dynamic Range)

Still Images Movies

Three consecutive images are captured at different brightness levels each time you shoot, and the camera combines image areas with optimal brightness to create a single image. This mode can reduce the washed-

Other Shooting Modes

**Hybrid Auto Mode** 

Camera Basics

Auto Mode /

1 Choose [HDR].

● Follow steps 1 – 2 in "Image Effects (Creative Filters)" (\$\sum\_62\$) and choose



Shoot.

out highlights and loss of detail in shadows that tend to occur in high-

 Hold the camera steady as you shoot. When you press the shutter button all the way down, the camera will take three shots and combine them.



Excessive motion blur or certain shooting conditions may prevent you from obtaining the desired results.

P Mode

Before Use

**Basic Guide** 

Advanced Guide

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







- If excessive camera shake interferes with shooting, mount the camera on a tripod or take other measures to keep it still. Additionally, you should set [IS Mode] to [Off] when using a tripod or other means to secure the camera (\$\square\$56).
- Any subject movement will cause images to look blurry.
- There will be a delay before you can shoot again, as the camera processes and combines the images.
- [ND] may be displayed when you press the shutter button halfway in bright conditions, indicating automatic adjustment for optimal image brightness.

#### **Adding Artistic Effects**



- Follow steps 1 − 2 in "Image Effects (Creative Filters)" (\$\sum\_62\$) and choose
- Turn the [ | dial to choose an effect level
- A preview is shown of how your shot will look with the effect applied.

Natural	Images are natural and organic.
Art Standard	Images resemble paintings, with subdued contrast.
Art Vivid	Images resemble vivid illustrations.
Art Bold	Images resemble oil paintings, with bold edges.
Art Embossed	Images resemble old photos, with bold edges and dark ambiance.

### **Shooting with Faded Colors (Nostalgic)**

► Still Images ► Movies



This effect makes colors look faded and images look weathered, as in old photographs. Choose from five effect levels.

### Choose [9].

● Follow steps 1 – 2 in "Image Effects (Creative Filters)" ( 62) and choose



#### 2 Choose an effect level.

- Turn the [ dial to choose an effect level.
- A preview is shown of how your shot will look with the effect applied.
- 3 Shoot.



Try taking some test shots first, to make sure you obtain the desired results.



- Colors will look faded on the shooting screen, but the image aging effect is not shown. Review the image in Playback mode to see the effect ( $\square$ 106).
- The image aging effect is not shown in movies.

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### Shooting with a Fish-Eye Lens Effect (Fish-Eye Effect)



Shoot with the distorting effect of a fish-eve lens.

#### Choose [ ]].

 Follow steps 1 − 2 in "Image Effects (Creative Filters)" (\$\sum\_62\$) and choose 



#### 2 Choose an effect level.

- Turn the [ dial to choose an effect level
- A preview is shown of how your shot will look with the effect applied.
- 3 Shoot.



Try taking some test shots first, to make sure you obtain the desired results

#### **Shots Resembling Miniature Models** (Miniature Effect)



Creates the effect of a miniature model, by blurring image areas above and below your selected area.

You can also make movies that look like scenes in miniature models by choosing the playback speed before the movie is recorded. People and objects in the scene will move quickly during playback. Note that sound is not recorded.

### Choose [4].

- Follow steps 1 − 2 in "Image Effects (Creative Filters)" (\$\sum\_62\$) and choose [4]
- A white frame is displayed, indicating the image area that will not be blurred.



### 2 Choose the area to keep in focus.

- Press the [▲] button.
- Move the zoom lever to resize the frame. and turn the [ dial to move it.



- 3 For movies, choose the movie playback speed.
- Turn the [ dial to choose the speed.
- 4 Return to the shooting screen and shoot.
- Press the [ ] button to return to the shooting screen, and then shoot.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





#### Playback Speed and Estimated Playback Time (for One-Minute Clips)

Speed	Playback Time	
5x	Approx. 12 sec.	
10x	Approx. 6 sec.	
20x	Approx. 3 sec.	

Movies are played back at 30 fps.



- The zoom is not available when shooting movies. Be sure to set the zoom before shooting.
- Try taking some test shots first, to make sure you obtain the desired results.



- To switch the orientation of the frame to vertical, press the [4][1] buttons in step 2. To return the frame to horizontal orientation. press the [A][V] buttons.
- To move the frame when it is in horizontal orientation, press the [A][V] buttons, and to move the frame when it is in vertical orientation, press the [◀][▶] buttons.
- Holding the camera vertically will change the orientation of the frame
- Movie image quality is [EVG] at an aspect ratio of [4:3] and [EHD] at an aspect ratio of [16:9] (\$\iiis 52\$). These quality settings cannot be changed.
- The zoom factor cannot be changed with the [ ] button on the screens in steps 2 and 3, or while shooting movies.



You can also move the frame by touching or dragging across the screen.

### **Shooting with a Toy Camera Effect** (Toy Camera Effect)

► Still Images ► Movies



This effect makes images resemble shots from a toy camera by vignetting (darker, blurred image corners) and changing the overall color.

Choose [6].

 Follow steps 1 − 2 in "Image Effects (Creative Filters)" (\$\sum\_62\$) and choose 



2 Choose a color tone.

- Turn the [ dial to choose a color
- A preview is shown of how your shot will look with the effect applied.

3 Shoot.

Standard	Shots resemble toy camera images.	
Warm Images have a warmer tone than with [Standard].		
Cool Images have a cooler tone than with [Standard].		



Try taking some test shots first, to make sure you obtain the desired results.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### **Making Subjects Stand Out** (Background Defocus)





You can shoot subjects so that they stand out from the background. Two consecutive images are captured with settings optimized for background defocus. The background is defocused through lens effects and subject- and scene-based image processing

#### Choose [ 1.

 Follow steps 1 − 2 in "Image Effects (Creative Filters)" (\$\sum\_62\$) and choose [<u>\*</u>]



### 2 Shoot.

- Hold the camera steady as you shoot. Two consecutive images are captured when you press the shutter button all the wav down.
- A blinking [ a licon indicates that the images could not be processed.



Excessive motion blur or certain shooting conditions may prevent you from obtaining the desired results.



- For the best results with this effect, try shooting close to the subject, and ensure ample distance between the subject and background.
- There may be a delay after shooting before you can shoot again.
- To adjust the effect level, turn the [ dial.

### **Shooting with a Soft Focus Effect**

Still Images Movies

**Basic Guide** 

Before Use

This function allows you to shoot images as if a soft focus filter were attached to the camera. You can adjust the effect level as desired.

#### Choose [ ].

● Follow steps 1 – 2 in "Image Effects (Creative Filters)" (\$\infty\$62) and choose [2]



2 Choose an effect level.

- Turn the [ dial to choose an effect level.
- A preview is shown of how your shot will look with the effect applied.

3 Shoot.



Try taking some test shots first, to make sure you obtain the desired results.

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





### **Shooting in Monochrome**

Still Images Movies

Shoot images in black and white, sepia, or blue and white.

### Choose [ ].

 Follow steps 1 − 2 in "Image Effects (Creative Filters)" ( 62) and choose



### 2 Choose a color tone.

- Turn the [ dial to choose a color tone.
- A preview is shown of how your shot will look with the effect applied.

#### 3 Shoot.

B/W	Black and white shots.
Sepia	Sepia tone shots.
Blue	Blue and white shots.

### **Special Modes for Other Purposes**

**Auto Shooting after Face Detection** (Smart Shutter)

Still Images Movies

#### Auto Shooting after Smile Detection (Smile)

► Still Images ► Movies



The camera shoots automatically after detecting a smile, even without you pressing the shutter button.



#### 1 Choose [L].

- Follow steps 1 2 in "Specific Scenes" (\$\bigcap\$61) and choose [\bigcap\$], and then press the [A] button.
- Press the [◀][▶] buttons or turn the [♠] dial to choose [ L], and then press the ( button.
- The camera now enters shooting standby mode, and [Smile Detection on] is displayed.



#### 2 Aim the camera at a person.

- Each time the camera detects a smile. it will shoot after the lamp lights up.
- To pause smile detection, press the [▼] button. Press the [V] button again to resume detection.



Switch to another mode when you finish shooting, or the camera will continue shooting each time a smile is detected.

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







- You can also shoot as usual by pressing the shutter button.
- The camera can detect smiles more easily when subjects face the camera and open their mouth wide enough so that teeth are visible.
- To change the number of shots, press the [▲][▼] buttons after choosing [L] in step 1. [Blink Detection] (456) is only available for the final shot.



You can also choose the shooting mode by choosing [ in steps 1 – 2 of "Specific Scenes" (Q61), touching [S0] to access the setting screen, touching [ L ], and then touching the same option or [SFT].

#### Auto Shooting after Wink Detection (Wink Self-Timer)



Aim the camera at a person and press the shutter button all the way down. The camera will shoot about two seconds after a wink is detected.



### Choose [3].

- Follow steps 1 − 2 in "Specific Scenes" (\$\bigcap\$61) and choose [\bigcap\$], and then press the [A] button.
- Press the [◀][▶] buttons or turn the [♣] dial to choose [ ], and then press the ( button.

#### 2 Compose the shot and press the shutter button halfway.

- On the screen, touch the face of the person who will wink to choose it (Touch AF), and then press the shutter button halfway.
- Make sure a green frame is displayed around the face of the person who will wink

#### 3 Press the shutter button all the way down.

- The camera now enters shooting standby mode, and [Wink to take picture] is displayed.
- The lamp blinks and the self-timer sound is played.



#### Face the camera and wink.

- The camera will shoot about two seconds. after detecting a wink by the person whose face is inside the frame
- To cancel shooting after you have triggered the self-timer, press the [MENU] button.



- If the wink is not detected, wink again slowly and deliberately.
- Winking may not be detected if eyes are obscured by hair, a hat, or glasses.
- Closing and opening both eyes at once will also be detected as
- If winking is not detected, the camera will shoot about 15 seconds later.
- To change the number of shots, press the [▲][▼] buttons after choosing [ in step 1. [Blink Detection] ( 56) is only available for the final shot.
- If no one is in the shooting area when the shutter button is pressed all the way down, the camera will shoot after a person enters the shooting area and winks.
- The zoom factor cannot be changed with the [ ] button after you press the shutter button all the way down.



You can also choose the shooting mode by choosing [ in steps 1 – 2 of "Specific Scenes" (461), touching [150] to access the setting screen, touching [ and then touching the same option or [ SET ].

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





#### Auto Shooting after Detecting New Person (Face Self-Timer)

Still Images Movies

The camera will shoot about two seconds after detecting that the face of another person (such as the photographer) has entered the shooting area (\$\infty\$90). This is useful when including yourself in group photos or similar shots.



### Choose [Ci].

- Follow steps 1 − 2 in "Specific Scenes" (\$\bigcap\$61) and choose [\bigcap\$i], and then press the [A] button.
- Press the [◀][▶] buttons or turn the [♠] dial to choose [c. ], and then press the ( button.
- 2 Compose the shot and press the shutter button halfway.
  - Make sure a green frame is displayed around the face you focus on and white frames around other faces.
- 3 Press the shutter button all the way down.
- The camera now enters shooting standby mode, and [Look straight at camera to start count down] is displayed.
- The lamp blinks and the self-timer sound is played.



#### Join the subjects in the shooting area and look at the camera.

- After the camera detects a new face, the lamp blinking and self-timer sound will speed up. (When the flash fires, the lamp will remain lit.) About two seconds later. the camera will shoot
- To cancel shooting after you have triggered the self-timer, press the [MENU] button.



- Even if your face is not detected after you join the others in the shooting area, the camera will shoot about 15 seconds later.
- To change the number of shots, press the [▲][▼] buttons after choosing [1] in step 1. [Blink Detection] (456) is only available for the final shot.
- The zoom factor cannot be changed with the [ ] button after you press the shutter button all the way down.



• You can also choose the shooting mode by choosing [ in steps 1 – 2 of "Specific Scenes" ( 61), touching [ 50] to access the setting screen, touching [ ], and then touching the same option or [SET].

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





### **Shooting Starry Skies (Star)**

#### Shooting Night Scenes under Starry Skies (Star Nightscape)

Still Images Movies

Capture impressive shots of starry skies above night scenes. Starlight in the image is automatically enhanced, making starry skies look beautiful.



#### ↑ Choose (주1).

- Follow steps 1 2 in "Specific Scenes" (☐61) and choose [☐], and then press the [A] button.
- Press the [◀][▶] buttons or turn the [♠] dial to choose [ ], and then press the ( button.
- Zoom is set to maximum wide angle and cannot be adjusted.

#### Secure the camera.

 Mount the camera on a tripod or take other measures to keep it still and prevent camera shake.



3 Shoot.



There will be a delay before you can shoot again, as the camera processes the images.



- For easier viewing, try choosing MENU ▶ [\$\varphi\_2\$] tab ▶ [Night Displayl ► [On] (☐ 161) before shooting.
- To make stars brighter, choose MENU (□31) ► [□5] tab ► [Star Emphasis] ► [Sharp]. To emphasize the bright stars in a starry sky, set [Star Emphasis] to [Soft]. This setting can produce eye-catching shots by enlarging bright stars while de-emphasizing dimmer stars. To disable starlight processing, select [Off].
- Try switching to manual focus mode (Q86) to more accurately specify the focal position before shooting.



You can also choose the shooting mode by choosing [ in steps 1 – 2 of "Specific Scenes" ( 61), touching [ 50] to access the setting screen, touching [ ], and then touching the same option or [SET].

#### **Shooting Star Trails (Star Trails)**

► Still Images ► Movies



Streaks created by the movement of stars through the sky are recorded in a single image. After determining the shutter speed and number of shots. the camera shoots continuously. A shooting session can last up to about two hours. Check the battery level in advance.



#### Choose [27].

- Follow steps 1 2 in "Specific Scenes" (\$\bigcap 61\$) and choose \$\bigcap \bigcap 1\$, and then press the [A] button.
- Press the [◀][▶] buttons or turn the [♣] dial to choose [A], and then press the ( button.
- Zoom is set to maximum wide angle and cannot be adjusted.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

Appendix





#### 2 Specify the duration of the shooting session.

• Turn the [ | dial to choose the shooting duration.

#### Secure the camera.

 Mount the camera on a tripod or take other measures to keep it still.



#### 4 Shoot.

- Press the shutter button all the way down. [Busy] is displayed briefly, and then shooting begins.
- Do not disturb the camera while shooting.
- To cancel shooting, press the shutter button all the way down again. Note that cancellation may take up to about 60 seconds.



- If the camera runs out of battery power, shooting stops and a composite image created from the images up to that point is
- There will be a delay before you can shoot again, as the camera processes the images.



- For easier viewing, try choosing MENU ▶ [¥2] tab ▶ [Night Display | ▶ [On] (☐161) before shooting.
- Try switching to manual focus mode (\$\iii 86\$) to more accurately specify the focal position before shooting.



You can also choose the shooting mode by choosing [ in steps 1 – 2 of "Specific Scenes" (Q61), touching [S0] to access the setting screen, touching [ ], and then touching the same option or [ SET ].

#### Shooting Movies of Star Movement (Star Time-Lapse Movie)





By recording a time-lapse movie that combines images shot at a specified interval, you can create movies with fast-moving stars. You can adjust the shooting interval and recording duration as needed.

Note that each session takes a long time, and requires many shots. Check the battery level and memory card space in advance.



#### Choose [ 7].

- Follow steps 1 2 in "Specific Scenes" (A) and choose A, and then press the [A] button.
- Press the [◀][▶] buttons or turn the [♣] dial to choose [ ], and then press the ( button.
- Zoom is set to maximum wide angle and cannot be adjusted.



### 2 Configure movie settings.

- Press the [DISP] button.
- Press the [▲][▼] buttons or turn the [♣] dial to choose an item, and then choose the desired option.
- Secure the camera.
- Mount the camera on a tripod or take other measures to keep it still.

Refore Use

**Basic Guide** 

#### Advanced Guide

#### Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





#### 4 Check the brightness.

- Press the shutter button all the way down to shoot a single still image.
- Switch to Playback mode (\$\overline{\overli
- To adjust brightness, turn the exposure compensation dial and change the exposure level on the shooting screen.
   Check brightness again by taking another shot.



#### 5 Shoot.

- Press the movie button. [Busy] is displayed briefly, and then shooting begins.
- Do not disturb the camera while shooting.
- To cancel shooting, press the movie button again. Note that cancellation may take up to about 60 seconds.
- The camera operates in Eco mode (161) while shooting.

Item	Options	Details	
Effect	<b>25666</b>	Choose movie effects, such as star trails.	
Shot Interval	15 sec., 30 sec., 1 min.	Choose the interval between each shot.	
Frame Rate	[74,99, [79,97 (NTSC)] [72,50, [75,00 (PAL)]	Choose the movie frame rate.	
Shooting Time	60 min., 90 min., 120 min., Unlimited	Choose the length of the recording session. To record until the battery runs out, choose [Unlimited].	

Estimated playback time based on shooting interval and frame rate (for a one-hour session)

Interval between Chate	Frame Rate		Dischards Time
Interval between Shots	NTSC	PAL	Playback Time
15 sec.	14.99	[ <u>12</u> .50	16 sec.
15 sec.	[29.97	<u>[25.00</u>	8 sec.
30 sec.	14.99	[ <u>1</u> 2.50	8 sec.
30 sec.	[ <u>2</u> 9.97	· [25.00	4 sec.
1 min.	14.99	[ <u>1</u> 2.50	4 sec.
1 min.	129.97	[ <u>25</u> .00	2 sec.



- There will be a delay before you can shoot again, as the camera processes the images.
- If the camera runs out of battery power or memory card space, shooting stops and a movie created from the images up to that point is saved.
- A shooting interval of [1 min.] is not available with these effects:

**Before Use** 

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







- Sound is not recorded.
- For easier viewing, try choosing MENU ► [¥2] tab ► [Night Display] ► [On] ( 161) before shooting.
- You can also access the screen in step 2 by choosing MENU (□31) ► [otal Time-Lapse Movie Setting].
- To save each shot collected before the movie is created, choose MENU (□31) ► [□5] tab ► [Save ♣ Stills] ► [On]. Note that these individual images are managed as a single group, and during playback, only the first image is displayed. To indicate that the image is part of a group, [SFI 💷] is displayed in the upper left of the screen. If you erase a grouped image (Q118), all images in the group are also erased. Be careful when erasing images.
- Try switching to manual focus mode (Q86) to more accurately specify the focal position before shooting.
- Even if you specify [Unlimited] in [Shooting Time] in step 2 and use an AC adapter kit (sold separately, 168), shooting will stop after about 8 hours, at most.



You can also choose the shooting mode by choosing [ in steps 1 – 2 of "Specific Scenes" (\$\infty\$61), touching [\bigsit{\$0}\$] to access the setting screen, touching [st.], and then touching the same option or [SET].

### **Adjusting Colors**

Still Images Movies

Colors can be manually adjusted in [ mode.

1 Choose a shooting mode.

● Choose [주] (☐70), [주] (☐70), or [ 71]



- 2 Choose color adjustment.
- Press the [P] button, and then choose [ ] in the menu ( 30).
- 3 Adjust the setting.
- Turn the [♣️ dial or press the [♠][▶] buttons to adjust the correction level for B and A, and then press the [4] button.
- Once the setting is complete, [TWB] is displayed.



- B represents blue and A, amber.
- Advanced settings can be accessed by pressing the [MENU] button when the screen in step 2 is displayed (\$\infty\$84).



- You can also choose the correction level by touching or dragging the bar in step 2.
- Advanced settings can be accessed by touching [MENU] when the screen in step 2 is displayed (484).

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



### **Recording Various Movies**

### Recording Movies in [17] Mode





### Enter [] mode.

- Set the mode dial to [\*].
- Press the [ ] button, choose [ ] in the menu, and then choose [ ] ( 30).
- Black bars are displayed on the top and bottom edges of the screen, and the subject is slightly enlarged. The black bars indicate image areas not recorded.
- Configure the settings to suit the movie (Q195).
- Shoot.
- Press the movie button
- To stop movie recording, press the movie button again.



You can also choose the shooting mode by accessing MENU (□31) ► [Contact 1] tab ► [Rec. Mode].



Focus can be adjusted during recording by touching [AF] and turning the [O] ring while [MF] is displayed.

#### **Shooting Still Images during Movie Recording**

Still Images Movies

Shoot still images during movie recording as follows.



#### While shooting a movie, focus on a subject.

- Make sure that [ ] is displayed, and then press the shutter button halfway.
- Focus and exposure are now readjusted. (However, the camera does not beep.)
- Movie recording will continue.

#### 2 Shoot.

- Press the shutter button all the way down.
- Your shot will be recorded.



- Shooting still images during movie recording may not be possible when the memory card's recording speed is slow, or when there is not enough free internal memory.
- (blinking): Image processing for recording is in progress. You can shoot when the icon stops blinking.
- [ Still images cannot be shot.
- In [4] mode, [5] is displayed during movie recording, and still images cannot be shot.
- When still images are captured during movie recording, the still image and shutter sound are included in the movie.
- The flash does not fire.
- Movie recording may stop if shooting still images fills up the internal memory.

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 







- During recording of [#HD 59.94P], [#HD 29.97P], [#HD 23.98P], [#HD 29.97P]. [EFID 50,00P], [EFID 25,00P] or [EHD 25,00P] movies (with at aspect ratio of 16:9), still images will have an aspect ratio of [16:9].
- During recording of [=VGA 29.972] or [=VGA 25.002] movies (with at aspect ratio of 4:3), still images will have an aspect ratio of [4:3].
- images are shot when movie and still image aspect ratios do not match.
- The ISO speed will be [AUTO].
- When [Dynamic IS] is set to [Standard] (\$\infty\$57), a larger area is captured than for movies.

#### Locking or Changing Image Brightness before Recording



You can lock the exposure before or during recording or adjust it in 1/3stop increments within a range of -3 to +3 stops.



- Lock the exposure.
- Touch [X ] to lock the exposure.
- To unlock the exposure, touch [\( \frac{\dagger}{\dagger} \)] again.
- 2 Adjust the exposure.
  - Turn the exposure compensation dial.
- **3** Shoot (274).

### **Correcting Severe Camera Shake**

Still Images Movies



Counteract severe camera shake, such as when recording while moving. The portion of images displayed changes more than for [Standard], and subjects are further enlarged.



 Follow the steps in "Recording Movies with Subjects at the Same Size Shown before Recording" (\$\infty\$57) to choose [High].



- [Dynamic IS] is not available when [IS Mode] is set to [Off].
- Only [Standard] is available when the movie quality is [40] 29.97P] (NTSC) or [W(A 25.00P] (PAL).

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



### **Sound Settings**

Still Images Movies



### Adjusting the Recording Volume

Although the recording level (volume) is automatically adjusted to reduce distortion, you can set the level manually to suit the shooting scene.



### Access the [Sound rec.] screen.

 Press the [MENU] button, choose [Sound rec.] on the [ 8] tab, and then press the [ button ( 31).



### 2 Configure the setting.

- Choose [Sound rec.], and then choose [Manual] (231).
- Choose [Level] and set the desired recording level.
- To restore the original setting, repeat this process but choose [Auto].

#### **Deactivating the Wind Filter**

Noise caused by strong wind can be reduced. However, the recording may sound unnatural when this option is used when there is no wind. In this case, you can deactivate the wind filter.



- Access the [Sound rec.] screen as described in step 1 of "Adjusting the Recording Volume" (\$\square\$76).
- Choose [Wind filter/Attenuator], and then press the [ ] button.
- Choose [Wind Filter], and then choose [Off] (QQ31).

#### Using the Attenuator

The attenuator can reduce audio distortion in noisy environments. However, in guiet environments, it lowers the sound-recording level.

Apply playback effects to brief clips of a few seconds, such as fast motion,

1 Enter [ I mode.

• Set the mode dial to [\*]

slow motion, or replay. Clips recorded in this mode may be included in

- Access the [Sound rec.] screen as described in step 1 of "Adjusting the Recording Volume" (\$\square\$76).
- Choose [Wind filter/Attenuator], and then press the [ ] button.
- Choose [Attenuator], and then choose [Auto] or [On] ( 31).

### **Recording Short Clips**

Story Highlights albums (130).

► Still Images ► Movies

• Press the [ B ] button, choose [ I ] in the menu, and then choose [ ] ( 30).

 Black bars displayed on the top and bottom edges of the screen indicate



Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Appendix

Index



### 2 Specify the shooting time and playback effect.

image areas not recorded.

- Press the [▲] button.
- Turn the [ dial to set the shooting time (4-6 sec.), and turn the [ dial to set the playback effect (\$\infty\$77).
- Shoot (174).
- A bar showing the elapsed time is displayed.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Setting Menu

Accessories





#### **Playback Effects**

<b>▶▶</b> 2x	Record a clip that is played back in fast motion.		
<b>▶</b> 1x	▶ 1x Record a clip that is played back at normal speed.		
■ 1/2x Record a clip that is played back in slow motion.			
Œ	Record a clip that is played back normally before it appears to be rewound two seconds to show a replay of the last part. During recording, a mark indicating the last two seconds is added to the bar showing the elapsed time.		



- Sound is not recorded in these clips.
- The movie quality is [<sup>E</sup>HD 29972] (for NTSC) or [<sup>E</sup>HD 25002] (for PAL) (□54, □54) and cannot be changed.

### Recording iFrame Movies



Record movies that can be edited with iFrame-compatible software or devices.



- 1 Choose [ ].
- Set the mode dial to [\*].
- Press the [<sup>®</sup>] button, choose [<sup>™</sup>] in the menu, and then choose [<sup>™</sup>] (□30).
- Black bars displayed on the top and bottom edges of the screen indicate image areas not recorded.

### **2** Shoot (QQ 74).



- iFrame is a video format developed by Apple Inc.
- The movie quality is [新] 2507] (for NTSC) or [新] 25007 (for PAL) (□54, □54) and cannot be changed.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





### P Mode

More discerning shots, in your preferred shooting style



- Instructions in this chapter apply to the camera with the mode dial set to [P] mode.
- [P]: Program AE; AE: Auto Exposure
- Before using a function introduced in this chapter in modes other than [P], make sure the function is available in that mode (2195).

### Shooting in Program AE ([P] Mode)





You can customize many function settings to suit your preferred shooting style.



- Enter [P] mode.
- Set the mode dial to [P].
- 2 Customize the settings as desired (179 - 197), and then shoot.



- If the optimum exposure cannot be obtained when you press the shutter button halfway, the shutter speed and aperture value are displayed in orange. In this case, try adjusting the ISO speed (\$\infty\$80) or activating the flash (if subjects are dark, \$\infty\$93), which may enable optimum exposure.
- Movies can be recorded in [P] mode as well, by pressing the movie button. However, some Q menu (Q30) and MENU (231) settings may be automatically adjusted for movie recording.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



### Image Brightness (Exposure)

### Adjusting Image Brightness (Exposure Compensation)

Still Images Movies



The standard exposure set by the camera can be adjusted in 1/3-stop increments, in a range of -3 to +3.



As you watch the screen, turn the exposure compensation dial to adjust brightness.

### Locking Image Brightness / Exposure (AE Lock)

Still Images Movies



Before shooting, you can lock the exposure, or you can specify focus and exposure separately.





- Lock the exposure.
- Aim the camera at the subject to shoot with the exposure locked, and then press the [X-] button.
- [X-] is displayed, and the exposure is locked
- To unlock AE, press the [X] button again. [X-] is no longer displayed.
- 2 Compose the shot and shoot.



- AE: Auto Exposure
- After the exposure is locked, you can adjust the combination of shutter speed and aperture value by turning the [ | dial (Program Shift).

### **Changing the Metering Method**

Still Images Movies



Adjust the metering method (how brightness is measured) to suit shooting conditions as follows.



- Press the ( button, choose ( in the menu, and choose the desired option (230).
- The option you configured is now displayed.

Evaluative	For typical shooting conditions, including backlit shots. Automatically adjusts exposure to match the shooting conditions.
Center Weighted Avg.	Determines the average brightness of light across the entire image area, calculated by treating brightness in the central area as more important.
• Spot	Metering restricted to within the [ ] (Spot AE Point frame). You can also link the Spot AE Point frame to the AF frame (\$\infty\$80).

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





### Linking the Spot AE Point Frame to the AF Frame

Still Images Movies


### Set the metering method to [ • ].

Follow the steps in "Changing the Metering Method" ( 79) to choose 



### 2 Configure the setting.


- Press the [MENU] button, choose [Spot AE Point] on the [6] tab, and then choose [AF Point] (231).
- The Spot AE Point frame will now be linked to the movement of the AF frame (489).

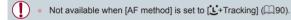

### Changing the ISO Speed

► Still Images ► Movies



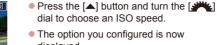

©	W. Marie		
/A	AUTO	200	MENU 🖃
	7.2.1	01.25	OTUA MI

The option you configured is now displayed.

AUTO	Automatically adjusts the ISO speed to suit the shooting mode and conditions.	
125, 160, 200	For shooting outdoors in fair weather.	
250, 320, 400, 500, 640, 800	For shooting in cloudy conditions, or at twilight.	
1000, 1250, 1600, 2000, 2500, 3200, 4000, 5000, 6400	For shooting night scenes,	
8000, 10000, 12800	or in dark rooms.	

Choose a higher ISO speed for higher sensitivity, or a lower value for lower sensitivity.



- To view the automatically determined ISO speed when you have set the ISO speed to [AUTO], press the shutter button halfway.
- Although choosing a lower ISO speed may reduce image graininess, there may be a greater risk of subject and camera shake in some shooting conditions.
- The faster shutter speed used at higher ISO speeds reduces subject and camera shake and increases the flash range. However, shots may look grainy.
- You can also set the ISO speed by accessing MENU (□31) [ 5] tab ► [ISO speed] ► [ISO Speed].

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





### **Adjusting ISO Auto Settings**

Still Images Movies

When the camera is set to [AUTO], maximum ISO speed can be specified in a range of [400] - [12800], and sensitivity can be specified in a range of three levels

### Access the setting screen.

- Press the [MENU] button, choose [ISO speed] on the [ 5] tab, and then press the  $[\mathbb{R}]$  button  $(\mathbb{L}31)$ .
- Choose [ISO Auto Settings] and press the [ button.



### 2 Configure the setting.

 Choose a menu item to configure, and then choose the desired option (\$\iii 31).



You can also access the [ISO Auto Settings] screen by pressing the [MENU] button when choosing the ISO speed via the [A] button.

### **Changing the Noise Reduction Level** (High ISO NR)

You can choose from 3 levels of noise reduction: [Standard], [High], [Low]. This function is especially effective when shooting at high ISO speeds.



• Press the [MENU] button, choose [High ISO NRI on the [6] tab, and then choose the desired option (\$\square\$31).



Not available when images are captured in RAW format  $(\square 96).$ 

### **Auto Exposure Bracketing (AEB Shooting)**

Accessories

Playback Mode

Wi-Fi Functions

Setting Menu

Appendix

Index

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

**Hybrid Auto Mode** 

Other Shooting Modes

Tv. Av. M. C1. and C2 Mode

Auto Mode /

P Mode

Still Images Movies

Three consecutive images are captured at different exposure levels (standard exposure, underexposure, and then overexposure) each time you shoot. You can adjust the amount of underexposure and overexposure (relative to standard exposure) from -2 to +2 stops in 1/3stop increments.



### 1 Choose [♣].

• Press the [MENU] button, choose [Bracketing] on the [ 4] tab, choose [4], and then press the [DISP] button.





#### 2 Configure the setting.

 Press the [◀][▶] buttons or turn the [♠] dial to adjust the setting.



- AEB shooting is only available in [3] mode (193).
- Continuous shooting (Q47) is not available in this mode.



- If exposure compensation is already in use (\$\iint\_79\$), the value specified for that function is treated as the standard exposure level for this function.
- You can also access the setting screen of step 2 by pressing the [DISP] button when the exposure compensation screen (\$\mathbb{\pi} 79\$) is displayed.
- Three shots are taken, regardless of any quantity specified in [C]
- In [Blink Detection] mode (\$\iiis 56\$), this function is only available for the final shot.



You can also configure this setting by touching or dragging the bar on the setting screen in step 2 to specify a value and then touching [DISP.].

#### **Dynamic Range Correction (DR Correction)**

► Still Images ► Movies



Tone down bright image areas, which might otherwise look washed out, as follows.



- Press the [ B ] button, choose [ I ] in the menu, and choose the desired option  $(\square 30).$
- The option you configured is now displayed.

Options	Details	Available ISO Speed (📖80)
<b>C</b> OFF	-	
<b>C</b> AUTO	Automatic adjustment to prevent washed-out highlights	[AUTO], [125] – [12800]
<b>420%</b>	Tone down highlights by about 200% relative to the brightness level of [•••].	[AUTO], [250] – [6400]



ISO speed (Q80) will be adjusted to a speed within the supported range if you have specified a value outside the supported range indicated here.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### **Shadow Correction**

Still Images Movies




Automatically preserve image detail in shadows as follows.



- Press the ( button, choose ( cal in the menu, and then choose [ ( ) ( ) ( ) ( ) ( )
- Once the setting is complete, [ ] is displayed.

### Using the ND Filter

To shoot at slower shutter speeds and smaller aperture values, use the ND filter, which reduces light intensity to 1/8 the actual level (equivalent to 3 stops).

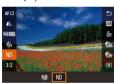

- Press the (இ) button, choose (\\ ) in the menu, and then choose [ND] ( 30).
- Once the setting is complete, [ND] is displayed.



Mount the camera on a tripod or take other measures to keep it still and prevent camera shake. Additionally, you should set [IS Model to [Off] when using a tripod or other means to secure the camera (\$\infty\$56).



ND: Neutral Density

## Image Colors

### **Capturing Natural Colors (White Balance)**

► Still Images ► Movies

By adjusting white balance (WB), you can make image colors look more natural for the scene you are shooting.



- Press the [ ] button, choose [ ] in the menu, and choose the desired option (230).
- The option you configured is now displayed.

AWB	Auto	Automatically sets the optimal white balance for the shooting conditions.
*	Day Light	For shooting outdoors in fair weather.
<b>1</b>	Shade	For shooting in the shade.
2	Cloudy	For shooting in cloudy weather or at twilight.
*	Tungsten	For shooting under ordinary incandescent lighting.
7/1	Fluorescent	For shooting under white fluorescent lighting.
<del>\</del> ##	Fluorescent H	For shooting under daylight fluorescent lighting.
<b>4</b>	Flash	For shooting with the flash.
<b>■</b> <sup>1</sup> <b>■</b> <sup>2</sup>	Custom	For manually setting a custom white balance (\$\subset\$84).

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 



#### **Custom White Balance**

Still Images Movies



For image colors that look natural under the light in your shot, adjust white balance to suit the light source where you are shooting. Set the white balance under the same light source that will illuminate your shot.



- Follow the steps in "Capturing Natural" Colors (White Balance)" ( 83) to choose [ ] or [ ]
- Aim the camera at a plain white subject. so that the entire screen is white. Press the [DISP] button.
- The tint of the screen changes once the white balance data has been recorded.



Colors may look unnatural if you change camera settings after recording white balance data.



You can also record white balance data on the screen above by touching [DISP.].

### **Manually Correcting White Balance**

► Still Images ► Movies



You can correct white balance. This adjustment can match the effect of using a commercially available color temperature conversion filter or colorcompensating filter.



### Configure the setting.

- Follow the steps in "Capturing Natural" Colors (White Balance)" (Q83) to choose [Mil]
- Turn the [ | dial to adjust the correction level for B and A
- Once the setting is complete, [\( \frac{\text{WB}}{\text{B}} \)] is displayed.



### 2 Configure advanced settings.

- To configure more advanced settings, press the [MENU] button and adjust the correction level by turning the [ ) or [ dial or pressing the [ ] [ ] [ ] [ ] huttons
- To reset the correction level, press the IDISP1 button.
- settina.



The camera will retain white balance correction levels even if you switch to another white balance option (by following steps in "Capturing Natural Colors (White Balance)" ( 83)), but correction levels will be reset if you record custom white balance data



- B: blue: A: amber: M: magenta: G: green
- You can customize camera operation so that the B and A adjustment screen is accessed simply by turning the [ ) or [ dial ( 103).
- One level of blue/amber correction is equivalent to about 7 mireds on a color temperature conversion filter. (Mired: Color temperature unit representing color temperature conversion filter
- You can also configure this setting by choosing MENU (231) ► [ 6] tab ► [WB Correction].



- You can also choose the correction level by touching or dragging the bar in step 1 or the frame in step 2.
- You can also access the screen in step 2 by touching [MENU] in
- On the screen in step 2, you can touch [DISP] to restore the original level and touch [MENU] to return to the shooting screen.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





### **Changing Image Color Tones (My Colors)**

► Still Images ► Movies



Change image color tones as desired, such as converting images to sepia or black and white.



- Press the (P) button, choose (A) in the menu, and choose the desired option (230).
- The option you configured is now displayed.

€0FF	My Colors Off	-
₽v	Vivid	Emphasizes contrast and color saturation, making images sharper.
₽N	Neutral	Tones down contrast and color saturation for subdued images.
€se	Sepia	Creates sepia tone images.
₽BW	B/W	Creates black and white images.
₽p	Positive Film	Combines the effects of Vivid Blue, Vivid Green, and Vivid Red to produce intense yet natural-looking colors resembling images on positive film.
₽L	Lighter Skin Tone	Lightens skin tones.
₽D	Darker Skin Tone	Darkens skin tones.
₽B	Vivid Blue	Emphasizes blues in images. Makes the sky, ocean, and other blue subjects more vivid.
₽G	Vivid Green	Emphasizes greens in images. Makes mountains, foliage, and other green subjects more vivid.
₽R	Vivid Red	Emphasizes reds in images. Makes red subjects more vivid.
₽c	Custom Color	Adjust contrast, sharpness, color saturation, and other qualities as desired (\(\higcup 85\)).



White balance (\$\improx 83\$) cannot be set in [\$\frac{1}{8}\end{1}] or [\$\frac{1}{8}\end{1}\text{ modes.} With [A] and [An] modes, colors other than people's skin tone may change. These settings may not produce the expected results with some skin tones.

#### **Custom Color**

Still Images Movies



Choose the desired level of image contrast, sharpness, color saturation, red, green, blue, and skin tones in a range of 1-5.



Access the setting screen.

 Follow the steps in "Changing Image Color Tones (My Colors)" (485) to choose [8c], and then press the [DISP] button.

2 Configure the setting.

- Press the [◀][▶] buttons to choose an item, and then specify the value by turning the [ dial.
- For stronger/more intense effects (or darker skin tones), adjust the value to the right, and for weaker/lighter effects (or lighter skin tones), adjust the value to the left.
- Press the [DISP] button to complete the setting.



· You can also specify a value by touching or dragging the bar.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### Shooting Range and Focusing

### **Shooting Close-Ups (Macro)**

Still Images Movies

To restrict the focus to subjects at close range, set the camera to [1]. For details on the range of focus, see "Shooting Range" (213).



- Press the [◀] button, choose [♣] (either press the [4][1] buttons or turn the [1] dial), and then press the [4] button.
- Once the setting is complete. [ ] is displayed.



If the flash fires, vignetting may occur.



To prevent camera shake, try mounting the camera on a tripod and shooting with the camera set to [6] (45).




You can also configure this setting by pressing the [◀] button, touching [ ], and then touching it again.

### **Shooting in Manual Focus Mode**

Still Images Movies



When focusing is not possible in AF mode, use manual focus. You can specify the general focal position and then press the shutter button halfway to have the camera determine the optimal focal position near the position you specified. For details on the range of focus, see "Shooting Range" (213).

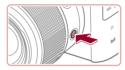

- 1 Choose IMF1.
- Press the [MF] button.
- [MF] and the MF indicator are displayed.



### 2 Specify the general focal position.

- Referring to the on-screen MF indicator (1. which shows the distance and focal position) and the magnified display, turn the [()] ring or [(\*\*)] dial to specify the general focal position, and then press the ( button.
- To adjust the magnification, press the IDISP1 button.
- During magnified display, you can move the focusing frame by pressing the [▲][▼][◀][▶] buttons.
- Fine-tune the focus.
- Press the shutter button halfway to have the camera fine-tune the focal position (Safetv MF).
- To cancel this mode, press the [MF] button

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







- When you focus manually, the AF method (\$\infty\$89) is [1-point AF] and AF frame size ( 89) is [Normal], and these settings cannot be changed.
- Focusing is possible when using the digital zoom (Q41) or digital tele-converter (Q89), or when using a TV as a display (\$\times169\$), but the magnified display will not appear.



- To focus more accurately, try attaching the camera to a tripod to stabilize it.
- You can enlarge or hide the magnified display area by adjusting MENU (☐31) ► [☐4] tab ► [MF-Point Zoom] settings.
- To deactivate automatic focus fine-tuning when the shutter button is pressed halfway, choose MENU (□31) ► [□4] tab ► [Safety MF] ▶ [Off].



You can move the focusing frame by dragging on the screen in step 2.

### **Fine-Tuning the Focus**

► Still Images ► Movies



You can fine-tune the focus after autofocusing by turning the continuous ring.

### Configure the setting.

• Press the [MENU] button, choose [AF+MF] on the [ 3] tab, and then choose [On] (A31).



### 2 Focus.

 Press the shutter button halfway to focus on the subject, and continue holding the button halfway down.

#### Fine-tune the focus.

- Turn the [()] ring. Referring to the onscreen MF indicator bar (which shows the distance and focal position) and the magnified display area, turn the [()] ring to adjust the focus.
- To enlarge or reduce the magnified display, press the [DISP] button.
- To cancel focusing, release the shutter button.

#### Shoot.

Press the shutter button all the way down to shoot.

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

#### P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 






### Easily Identifying the Focus Area (MF Peaking)

► Still Images ► Movies

Edges of subjects in focus are displayed in color to make manual focusing easier. You can adjust the colors and the sensitivity (level) of edge detection as needed.

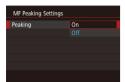

### 1 Access the setting screen.

 Press the [MENU] button, choose [MF Peaking Settings] on the [ ▲ 1 tab, choose [Peaking], and then choose [On] (△31).

### 2 Configure the setting.

 Choose a menu item to configure, and then choose the desired option (\$\subset\$31).



Colors displayed for MF peaking are not recorded in your shots.

#### Focus Bracketing (Focus-BKT Mode)

► Still Images ► Movies

Three consecutive images are captured each time you shoot, with the first one at the focal distance you set manually and the others at farther and nearer focal positions determined by presets. The distance from your specified focus can be set in three levels.



### 1 Choose [4].

 Press the [MENU] button, choose [Bracketing] on the [▲4] tab, and then choose [¾] (↓31).



### 2 Configure the setting.

 Press the [DISP] button, and then adjust the setting by pressing the [◀][▶] buttons or turning the [♠] dial.



- Focus bracketing is only available in [3] mode (Q93).
- Continuous shooting (Q47) is not available in this mode.



- You can also access the setting screen in step 2 by pressing the [MENU] button in step 2 of "Shooting in Manual Focus Mode" (\subseteq 86).
- Three shots are taken, regardless of any quantity specified in [Cc] (246).
- In [Blink Detection] mode (\$\sum\_56\$), this function is only available for the final shot.



 You can also configure this setting by touching or dragging the bar on the screen in step 2 to specify a value and then touching [MENU]. Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

**Other Shooting Modes** 

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### **Digital Tele-Converter**

Still Images Movies

The focal length of the lens can be increased by approximately 1.6x or 2.0x. This can reduce camera shake because the shutter speed is faster than it would be if you zoomed (including using digital zoom) in to the same zoom factor.



- Press the [MENU] button, choose [Digital Zoom] on the [ 2] tab, and then choose the desired option (\$\infty\$31).
- The view is enlarged and the zoom factor is displayed on the screen.



The shutter speed may be equivalent when you move the zoom lever all the way toward [ for maximum telephoto, and when you zoom in to enlarge the subject to the same size following step 2 in "Zooming In Closer on Subjects (Digital Zoom)" (41).

### Choosing the AF Method

► Still Images ► Movies



Change the auto focus (AF) mode to suit shooting conditions.



• Press the [4] button, choose [AF 1] in the menu, and choose the desired option (231).



You can also configure this setting by accessing MENU (231) ► [ 3] tab ► [AF method].

#### 1-point AF

Still Images Movies



The camera focuses using a single AF frame. Effective for reliable focusing. You can also move the frame by touching the screen (\$\square\$92).



A yellow AF frame is displayed with [1] if the camera cannot focus when you press the shutter button halfway.



- To compose shots so that subjects are positioned at the edge or in a corner, first aim the camera to capture the subject in an AF frame, and then hold the shutter button halfway down. As you continue to hold the shutter button halfway, recompose the shot as desired, and then press the shutter button all the way down (Focus Lock).
- The AF frame position is enlarged when you press the shutter button halfway with [AF-Point Zoom] (\$\infty\$55) set to [On].

### Moving and Resizing AF Frames (1-point AF)

► Still Images ► Movies



When you want to change the position or size of the AF frame, set the AF method to [1-point AF1.



Move the AF frame.

- Touch the screen. An AF frame is displayed in orange where you touched (Touch AF).
- Turn the (a) or (a) dial to move the AF frame, and press the [▲][▼][◀][▶] buttons to fine-tune the position.
- To return the AF frame to the original position in the center, press the [DISP] button.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





#### 2 Resize the AF frame.

 To reduce the AF frame size, turn the (1) ring. Turn it again to restore it to the original size.

### 3 Finish the setup process.

• Press the [P] button.



AF frames are displayed at normal size when you use the digital zoom (41) or digital tele-converter (89), and in manual focus mode (\$\mathbb{Q}\$86).



- You can also access the screen in step 1 by pressing the
- You can also return the AF frame to the original position in the center by holding down the [ • • • ] button.
- You can also link the Spot AE Point frame to the AF frame (Q 80).
- You can also configure the AF frame size by pressing the [MENU] button and choosing [AF Frame Size] on the [ 3] tab ( 31 ).



On the screen in step 2, you can also move the AF frame by touching the screen, restore the AF frame to the original position by touching [DISP], or exit the setting by touching [SET]

#### ::+Tracking





 Detects people's faces, and then sets the focus, exposure (evaluative metering only), and white balance ([MR] only).

- After you aim the camera at the subject, a white frame is displayed around the person's face determined by the camera to be the main subject, and up to two gray frames are displayed around other detected faces
- When the camera detects movement, frames will follow moving subjects, within a certain range.
- After you press the shutter button halfway, up to nine green frames are displayed around faces in focus.



- When no faces are detected, or when only gray frames are displayed (without a white frame), pressing the shutter button halfway will display green frames in the areas in focus. Note that the maximum number of frames depends on the aspect ratio (\$\bigsilon\$52) setting.
  - [3:2] or [4:3]: 31 frames [1:1]: 25 frames
  - [16:9]: 21 frames
- If no faces are detected in Servo AF (Q91) mode, the AF frame is displayed in the center of the screen when you press the shutter button halfway.
- Examples of faces that cannot be detected:
  - Subjects that are distant or extremely close
  - Subjects that are dark or light
  - Faces in profile, at an angle, or partly hidden
- The camera may misinterpret non-human subjects as faces.
- No AF frames are displayed if the camera cannot focus when you press the shutter button halfway.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### **Shooting with Servo AF**

Still Images Movies



This mode helps avoid missing shots of subjects in motion, because the camera continues to focus on the subject and adjust the exposure as long as you press the shutter button halfway.



### Configure the setting.

Press the [▼] button and turn the [♣ dial to choose [SERVO].



 The focus and exposure are maintained where the blue AF frame is displayed while you are pressing the shutter button halfway.



- Focusing may not be possible in some shooting conditions.
- In low-light conditions, Servo AF may not be activated (AF frames may not turn blue) when you press the shutter button halfway. In this case, the focus and exposure are set according to the specified AF method.
- Continuous shooting (QQ47) is slower in Servo AF mode.
- If optimum exposure cannot be obtained, the shutter speed and aperture value are displayed in orange. Release the shutter button, and then press it halfway again.
- AF lock shooting is not available.
- [AF-Point Zoom] on the [ 2] tab ( 31) is not available.
- Not available when using the self-timer (\$\iii45\$).



- To have the camera keep adjusting the focus during continuous shooting (Q47), specify Servo AF with [AF method] set to [1-point AF].
- You can also configure this setting by accessing MENU (Q31) ► [ 3] tab ► [AF operation].

### **Changing the Focus Setting**

► Still Images ► Movies

**Basic Guide** 

Before Use

You can change default camera operation of constantly focusing on subjects it is aimed at, even when the shutter button is not pressed. Instead, you can limit camera focusing to the moment you press the shutter button halfway.

Continuous AF Off • Press the [MENU] button, choose [Continuous AF] on the [ 3] tab, and then choose [Off] (231).

Helps avoid missing sudden photo opportunities, because the camera constantly focuses on subjects until you press the On shutter button halfway. Conserves battery power, because the camera does not focus Off constantly.

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### Choosing a Person to Focus On (Face Select)

Still Images Movies



You can shoot after choosing a specific person's face to focus on.



Set the AF method to [L+Tracking] (289).

#### 2 Enter Face Select mode.

- Aim the camera at the person's face and press the [ !! ] button.
- After [Face Select : Onl is displayed, a face frame [ ] is displayed around the face detected as the main subject.
- Even if the subject moves, the face frame follows the subject within a certain range.
- If a face is not detected, [ ] is not displayed.

#### Choose the face to focus on.

- To switch the face frame [ ] to another detected face, press the [1-1-1] button.
- Once you cycle through all detected faces. [Face Select: Off] is displayed. followed by the selected AF method screen.



### Shoot.

- Press the shutter button halfway. After the camera focuses, [ ] changes to [ ]
- Press the shutter button all the way down to shoot.



When [Face ID] is set to [On], only the name of the registered person chosen as the main subject is displayed, even if other registered people have been detected. However, their names will be recorded in the still images (48).

### Choosing Subjects to Focus On (Touch AF)

► Still Images ► Movies



You can shoot after choosing a person's face or another subject to focus on.



- **1** Set the AF method to [∴+Tracking] (289).
- 2 Choose a person's face or another subject to focus on.
- Touch the subject or person on the screen.
- When the subject is detected, the camera beeps and [ is displayed. Focus is maintained even if the subject moves.
- To cancel Touch AF, touch [♣].



#### 3 Shoot.

- Press the shutter button halfway. After the camera focuses, [ ] changes to a green [ ].
- Press the shutter button all the way down to shoot

Refore Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 










- If you prefer the camera not to shoot when you touch the screen. make sure [Touch Shutter] mode is deactivated. Press the [MENU] button, choose [Touch Shutter] on the [ 2] tab, and then choose [Off] ( 31).
- Tracking may not be possible when subjects are too small or move too rapidly, or when there is inadequate contrast between subjects and the background.
- Even if you are shooting in [ mode ( 86), the camera will revert to [1] mode if you touch the screen to specify where to focus.
- If [Face ID] is set to [On], names will not display when registered people are detected, but the names will be recorded in the still images (Q48). However, a name will display if the subject chosen to focus on is the same as a person detected with Face ID.

### Shooting with the AF Lock

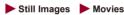



The focus can be locked. After you lock the focus, the focal position will not change even when you release your finger from the shutter button.





#### Lock the focus.

- With the shutter button pressed halfway, press the [MF] button.
- The focus is now locked, and [MF] and the MF indicator are displayed.
- To unlock the focus, hold the shutter button halfway down and press the [MF] button again.

### 2 Compose the shot and shoot.



Cannot be used with Touch Shutter (46).



When [AF method] is set to [1-point AF], you can lock the focus during movie recording by touching the screen. To unlock the focus, touch [ 1]

### Flash

### Changing the Flash Mode

Still Images Movies



You can change the flash mode to match the shooting scene. For details on the flash range, see "Flash Range" (213).

#### Raise the flash.

Move the [\$1 switch.

### 2 Configure the setting.

- Press the [ ] button, choose a flash mode (either press the [◀][▶] buttons or turn the [ dial), and then press the [ ] button.
- The option you configured is now displayed.



- The setting screen cannot be accessed by pressing the [ ] button when the flash is lowered. Move the [ \$\frac{1}{2}\$] switch to raise the flash, then configure the setting.
- If the flash fires, vignetting may occur.

#### Auto

Fires automatically in low-light conditions.

#### On

Fires for each shot.

Refore Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





#### Slow Synchro

Fires to illuminate the main subject (such as people) while shooting at a slower shutter speed to illuminate backgrounds out of flash range.



- In [4\*] mode, mount the camera on a tripod or take other measures to keep it still and prevent camera shake. Additionally, you should set [IS Mode] to [Off] when using a tripod or other means to secure the camera (\$\square\$56).
- In [4\*] mode, even after the flash fires, ensure that the main subject does not move until the shutter sound is finished playing.

#### Off

For shooting without the flash.



If a blinking [9] icon is displayed when you press the shutter button halfway in camera-shake inducing, low-light conditions, mount the camera on a tripod or take other measures to keep it still.



Adjustment is also possible by pressing the [ ] button, touching the desired option, and then touching it again.

### **Adjusting the Flash Exposure Compensation**

► Still Images ► Movies



Just as with regular exposure compensation (\$\sum\_{79}\$), you can adjust the flash exposure from -2 to +2 stops, in 1/3-stop increments.



- Raise the flash, press the [▶] button and immediately turn the [ | dial to choose the compensation level, and then press the ( button.
- The correction level you specified is now displayed.



- When there is a risk of overexposure, the camera automatically adjusts the shutter speed or aperture value for flash shots to reduce washed-out highlights and shoot at optimal exposure. However, you can deactivate automatic adjustment of the shutter speed and aperture value by accessing MENU (Q31) and choosing [ 5] tab ► [Flash Control] ► [Safety FE] ► [Off].
- You can also configure the flash exposure compensation by accessing MENU (□31) and choosing [ 5] tab ► [Flash Control] ▶ [Flash Exp. Comp].
- You can also access the [Built-in Flash Settings] screen (231) as follows (except when an optional external flash is mounted). Press and hold the [ ] button for at least one second.
  - When the flash is up, press the [ ] button and immediately press the [MENU] button.



• You can also access the [Built-in Flash Settings] screen (231) by pressing the [ ] button and touching [MENU]

Refore Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 



### **Shooting with the FE Lock**

► Still Images ► Movies



Just as with the AE lock (\$\iiint\$79), you can lock the exposure for flash shots.

> Raise the flash and set it to [4] (293).







- 2 Lock the flash exposure.
  - Aim the camera at the subject to shoot with the exposure locked. With the shutter button pressed halfway, press the [X-] button.
  - The flash fires, and when [X] is displayed, the flash output level is retained.
  - To unlock FE, release the shutter button. and press the [X) button again. In this case, [X-] is no longer displayed.
- Compose the shot and shoot.
  - After one shot, FE is unlocked and [X] is no longer displayed.




### **Changing the Flash Timing**

► Still Images ► Movies



Change the timing of the flash and shutter release as follows.

- 1 Access the setting screen.
- Press the [MENU] button, choose [Flash Control] on the [5] tab, and then press the [ ] button ( ] 31).

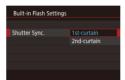

- 2 Configure the setting.
- Choose [Shutter Sync.], and then choose the desired option (\$\implies 31).

1st-curtain	The flash fires immediately after the shutter opens.	
2nd-curtain	The flash fires immediately before the shutter closes.	

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 



### Other Settings

### Changing Image Quality

Still Images Movies

Choose from 8 combinations of size (number of pixels) and compression (image quality). Also specify whether to capture images in RAW format (\$\subseteq\$96). For guidelines on how many of each kind of image can fit on a memory card, see "Number of Shots per Memory Card" (\$\subseteq\$212).



 Follow the steps in "Changing Image Quality" (\$\subseteq 53\$) to adjust the settings.



[AL] and [AL] indicate different levels of image quality depending on the extent of compression. At the same size (number of pixels), [AL] offers higher image quality. Although [AL] images have slightly lower image quality, more fit on a memory card.

#### **Capturing in RAW Format**

The camera can capture images in JPEG and RAW format.

JPEG Images	Processed in the camera for optimal image quality and compressed to reduce file size. However, the compression process is irreversible, and images cannot be restored to their original, unprocessed state. Image processing may also cause some loss of image quality.
RAW Images	"Raw" (unprocessed) data, recorded with essentially no loss of image quality from the camera's image processing. The data cannot be used in this state for viewing on a computer or printing. You must first use the software (Digital Photo Professional, \$\infty\$178) to convert images to ordinary JPEG or TIFF files. Images can be adjusted with minimal loss of image quality.



- Press the [a] button, and then choose [a] in the menu (a) 30).
- To capture in RAW format only, choose the [ ] option.
- To capture images in both JPEG and RAW format simultaneously, choose the JPEG image quality, and then press the [DISP] button. A [√] mark is displayed next to [RAW]. To undo this setting, follow the same steps and remove the [√] mark next to [RAW].



- When transferring RAW images (or RAW and JPEG images recorded together) to a computer, always use the dedicated software (2178).
- Digital zoom (
   —41) is not available when capturing images in RAW format. Additionally, noise reduction level (
   —81), dynamic range correction (
   —82), shadow correction (
   —83), and My Colors (
   —85) cannot be configured.

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







- For details on the relationship between the number of recording pixels and the number of shots that will fit on a card, see "Number of Shots per Memory Card" (☐212).
- The file extension for JPEG images is .JPG, and the extension for RAW images is .CR2.

#### **Using the Menu**



- To capture in RAW format at the same time, turn the [ ] aial and choose
   Images are captured when [-] is selected.
- Press the [◀][▶] buttons or turn the [♠] dial to choose [JPEG], and then choose the image size and quality. Note that only RAW images are captured when [-] is selected.




[RAW] and [JPEG] cannot both be set to [-].

### Changing the IS Mode Settings



Image stabilization is active only at the moment of shooting

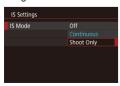

 Follow the steps in "Deactivating Image Stabilization" (\$\sum\_56\$) to choose [Shoot Only]. Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

**Other Shooting Modes** 

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





## Tv, Av, M, C1, and C2 Mode

Take smarter, more sophisticated shots, and customize the camera for your shooting style



• Instructions in this chapter apply to the camera as set to the respective mode.

### Specific Shutter Speeds ([Tv] Mode)

► Still Images ► Movies



Set your preferred shutter speed before shooting as follows. The camera automatically adjusts the aperture value to suit your shutter speed. For details on available shutter speeds, see "Shutter Speed" (214).

Enter [Tv] mode.

• Set the mode dial to [Tv].



2 Set the shutter speed.

Turn the [ dial to set the shutter speed.

Shutter Speed (Sec.)	Available ISO Speed (Q80)
30 – 1.3	[AUTO], [125] – [3200]
1 – 1/2000	[AUTO], [125] – [12800]



- In conditions requiring slower shutter speeds, there may be a delay before you can shoot again, as the camera processes images to reduce noise.
- When shooting at low shutter speeds on a tripod, you should set [IS Mode] to [Off] (\$\square\$56).
- The speed you set may be lowered automatically as needed if the flash fires.
- Orange display of the aperture value when you press the shutter button halfway indicates that the optimum exposure has not been obtained. Adjust the shutter speed until the aperture value is displayed in white, or use safety shift (\$\square\$99).



[Tv]: Time value

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





### Specific Aperture Values ([Av] Mode)

Still Images Movies

Set your preferred aperture value before shooting as follows. The camera automatically adjusts the shutter speed to suit your aperture value. For details on available aperture values, see "Aperture" ( 214).

### Enter [Av] mode.

Set the mode dial to [Δν].



### 2 Set the aperture value.

Turn the [ ] dial to set the aperture value



Orange display of the shutter speed when you press the shutter button halfway indicates that the optimum exposure has not been obtained. Adjust the aperture value until the shutter speed is displayed in white, or use safety shift (see below).



- [Av]: Aperture value (size of the opening made by the diaphragm in the lens)
- In [Tv] and [Av] modes, press the [MENU] button and set [Safety Shift] on the [ 6] tab to [On] ( 31) to have the camera automatically adjust the shutter speed and aperture value when there are exposure problems, so that you can shoot at the optimum exposure.

However, safety shift is disabled when the flash fires.

### **Specific Shutter Speeds and Aperture** Values ([M] Mode)

Still Images Movies

Follow these steps before shooting to set your preferred shutter speed and aperture value to obtain the desired exposure. For details on available shutter speeds and aperture values, see "Shutter

Speed" (214) and "Aperture" (214).

(1)(2)

 $(4)_{-}$ 

(3)

### 1 Enter [M] mode.

Set the mode dial to [M].

### 2 Configure the setting.

- Turn the [ | dial to set the shutter speed (1).
- Turn the (a) dial to set the aperture value
- Press the [▲] button, choose ISO speed adjustment (3), and turn the [ | dial to specify a value.
- When the ISO speed is fixed, an exposure level mark (5) based on your specified value is shown on the exposure level indicator for comparison to the standard exposure level (4). The exposure level mark is shown as [◀] or [ ] when the difference from standard exposure exceeds 3 stops.
- The ISO speed is determined and screen brightness changes when you press the shutter button halfway after setting the ISO speed to [AUTO]. If standard exposure cannot be obtained with your specified shutter speed and aperture value, the ISO speed is displayed in orange.

Refore Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





Shutter Speed (Sec.)	Available ISO Speed (🔲 80)
[BULB], 30 – 1.3	[AUTO], [125] – [3200]
1 – 1/2000	[AUTO], [125] – [12800]



- After you set the shutter speed and aperture value, the exposure level may change if you adjust the zoom or recompose the shot.
- Screen brightness may change depending on your specified shutter speed and aperture value. However, screen brightness remains the same when the flash is up and the mode is set to [\$].



- [M]: Manual
- Calculation of optimum exposure is based on the specified metering method (\(\subseteq 79\)).
- The following operations are available when ISO speed is set to [AUTO].
  - Adjust exposure by turning the exposure compensation dial.
  - Press the [★] button to lock the ISO speed. Screen brightness changes accordingly.

### Shooting Long Exposures (Bulb)

With bulb exposures, shots are exposed for as long as you hold down the shutter button.

### 1 Specify bulb exposure.

 Set the shutter speed to [BULB], following steps 1 – 3 in "Specific Shutter Speeds and Aperture Values ([IV]] Mode)" (199).

#### Shoot.

 Shots are exposed for as long as you hold the shutter button all the way down.
 The elapsed exposure time is displayed during exposure.



Mount the camera on a tripod or take other measures to keep it still and prevent camera shake. In this case, also disable image stabilization (☐56).



To avoid camera shake that may otherwise occur when pressing the shutter button directly, you can shoot remotely (\$\infty\$156) or use an optional remote switch (\$\infty\$172).



 When [Touch Shutter] is set to [On], shooting is started by touching the screen once and stopped by touching it again. Be careful not to move the camera when touching the screen. Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





### Adjusting the Flash Output

Still Images Movies



Choose from the three flash levels in [Tv][Av][M] modes.

### Specify the flash mode.

- Press the [MFNI] button, choose [Flash] Control] on the [ 5] tab, and then press the  $[\mathbb{R}]$  button ( $\mathbb{L}$ 31).
- Press the [▲][▼] buttons to choose [Flash Mode], and then press the [@] button
- Press the [▲][▼] buttons to choose [Manual], and then press the [4] button.



### 2 Configure the setting.

- Raise the flash, press the [▶] button and immediately turn the [ | dial to choose the flash level, and then press the [4] button.
- Once the setting is complete, the flash output level is displayed. [ Minimum, [ Medium, [ Med Maximum



- You can also set the flash level by accessing MENU (QQ31) and choosing [ 5] tab ► [Flash Control] ► [Flash Output].
- You can also access the [Flash Control] screen ( 31) as follows. Press and hold the [ ] button for at least one second. When the flash is up, press the [ 1] button and immediately press the [MENU] button.



You can also access the [Flash Control] MENU screen (231) by raising the flash, pressing the [ ) button, and touching [MENU]

### **Recording Movies at Specific Shutter Speeds and Aperture Values**

Still Images Movies



Set your preferred shutter speed, aperture value, and ISO speed. For details on available shutter speeds, aperture values, and ISO speeds. see "Shutter Speeds" (214), "Aperture" (214), and "Changing the ISO Speed" ( 80).

### Enter P∰l mode.

- Set the mode dial to [\*]
- Press the ( button, choose in the menu, and then choose [ ] ( 30).



### Configure the settings.

- Press the [A] button to choose whether to configure shutter speed or ISO speed. and then turn the [ | dial to set the value
- Turn the [ ] dial to set the aperture value.

### Shoot.

- Press the movie button.
- During recording, you can switch the setting to configure by pressing the [V] button repeatedly and adjust the value by turning the [()] ring.



Some shutter speeds may cause flickering on the screen when recording under fluorescent or LED lighting, which may be recorded

Refore Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







- In [AUTO] mode, you can also adjust the exposure before recording by turning the exposure compensation dial.
- When the ISO speed is fixed, an exposure level mark based on your specified value is shown on the exposure level indicator for comparison to the standard exposure level. The exposure level mark is shown as [◀] or [▶] when the difference from standard exposure exceeds 3 stops.
- You can check the ISO speed in [AUTO] mode by pressing the shutter button halfway. If standard exposure cannot be obtained with your specified shutter speed and aperture value, the ISO speed is displayed in orange.



- By touching [◀][▶], you can also adjust setting items selected by touch on the bottom of the screen.
- Focus can be adjusted during recording by touching [AF] and turning the [Λ] ring while [MF] is displayed.

### **Customizing Controls and Display**

### Customizing Display Information

Customize what screen is displayed when you press the [DISP] button on the shooting screen. You can also customize what information is displayed.

### 1 Access the setting screen.

Choose [ 1] tab ► [Shooting information display] ► [Display switching], and then press the [ 3] button ( 31).



### Configure the setting.

- Press the [▲][▼] buttons or turn the [♠] dial to choose any screen you prefer not to display, and then press the [♠] button to remove the [✓] mark. Pressing the [♠] button again will add the [✓] mark, which indicates that it is selected for display.
- To return to the menu screen, press the [MFNU] button.



- An example of display with the options selected in step 2 is shown at left for reference.
- At least one option must be selected.

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### **Customizing the Information Displayed**



- Follow steps 1 2 in "Customizing Display Information" (☐ 102) to choose [Custom display 1] or [Custom display 2], and then press the [DISP] button.
- Press the [▲][▼] buttons or turn the [♣] dial to choose information to display, and then press the [♣] button to add a [√] mark.
- To see an example of display, press the [MENU] button to return to the [Display switching] screen.



- For a smaller grid pattern, access [ 1] tab ► [Shooting information display] ► [Grid display].
- In Movie mode, you can also choose [2.35:1], [1.85:1], [1.75:1], [1.66:1], and [4:3] grid options. However, these options are not available when movie quality is [□(1.2007)].

### Assigning Functions to Controls




Reassign functions of the [0] ring, [ ] dial, or [ ] dial, or assign common functions to the [ ] button, [ ] button, movie button, or [MF] button.



- 1 Access the setting screen.
- Press the [MENU] button, choose [Function Assignment] on the [♠2] tab, and then press the [♣] button (□31).



- 2 Configure the setting.
- Press the [△][▼][﴿][▶] buttons or turn the [◢️¥²][⑥] dials to choose the dial or button to assign, and then press the [⑥] button.
- When assigning the [0] ring, [♣♣] dial, or [♣] dial, press the [♠][▼] buttons or turn the [♣] dial to choose the shooting mode or the camera control, press the [♠][▶] buttons to choose the shooting mode or function, and then press the [MENU] button.
- When assigning the [⑤], [˙□¹], [˙➡¹], or [MF] button, press the [⑥] button, choose the function on the screen displayed (either press the [▲][▼][♠][♠] buttons or turn the [⑥] button.

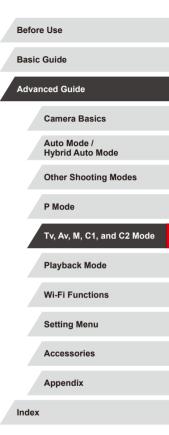



[ <b>(</b> )] ring, [ <b>()</b> ] dial, or [ <b>()</b> ] dial	By assigning [M/♣], in [M] mode you can set the shutter speed with the [♣] dial and the aperture value with the [♣] dial.	
[ʃS] button		
[t͡ʊt] button	Press the button to activate the assigned	
Movie button	function.	
[MF] button		



- To restore default functions to the [ [5] button, [ ] button, movie button, and [MF] button, choose [ ], [ ], [ ], and [MF]
- Icons labeled with [X] indicate that the function is not available in the current shooting mode or under current function conditions.
- With [+1-], you can move and resize the AF frame by pressing the assigned button in [1-point AF] mode (\$\infty\$89, \$\infty\$89).
- With [1] or [2], each press of the assigned button records white balance data (Q84), and the white balance setting changes to [ ] or [ ]
- With [AFI], each press of the button that it is assigned to adjusts and locks the focus, and [AFI] is displayed on the screen.
- With [22], pressing the button that it is assigned to deactivates screen display. To restore the display, do any of the following. Press any button other than the ON/OFF button.
  - Hold the camera in another orientation.
  - Raise or lower the flash.
  - Either open the screen and rotate it toward the front, or close the screen if it is already open and facing the front.
- if you assign a function to the movie button.



You can also configure settings by touching a desired option and then touching it again or touching [MENU].

### Saving Shooting Settings





Save commonly used shooting modes and your configured function settings for reuse. To access saved settings later, simply turn the mode dial to [C1] or [C2]. Even settings that are usually cleared when you switch shooting modes or turn the camera off (such as self-timer settings) can be retained this way.

#### Settings that can be saved

- Shooting modes ([P], [Tv], [Av], and [M])
- Items set in [**P**], [**Tv**], [**Av**], and [**M**] modes (Q79 Q99)
- Shooting menu settings
- Zoom positions
- Manual focus positions (\$\omega\$86)
- My Menu settings (QQ 105)
  - Enter a shooting mode with settings you want to save, and change the settings as desired.





- 2 Configure the setting.
- Press the [MENU] button, choose [Save Settings] on the [ 2] tab, and then press the [ ] button.
- 3 Save the settings.
  - Press the [▲][▼] buttons or turn the [♣] dial to choose the destination, and then press the [ ] button.

Refore Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







To edit saved settings (except their shooting mode), choose [C1] or [C2], change the settings, and then repeat steps 2 – 3. These setting details are not applied in other shooting modes.



 To clear information you have saved to [C1] or [C2] and restore default values, turn the mode dial to [C1] or [C2] and choose [Reset All] (\(\infty\)165).

# Saving Commonly Used Shooting Menu Items (My Menu)



You can save up to six commonly used shooting menu items on the  $[\frac{1}{2}]$  tab. By customizing the  $[\frac{1}{2}]$  tab, you can access to these items quickly from a single screen.




### 1 Access the setting screen.

 Press the [MENU] button, choose [My Menu settings] on the [★1] tab, and then press the [<sup>®</sup>] button (□31).



### Configure the setting.

- Press the [▲][▼] buttons or turn the [♠] dial to choose [Select items], and then press the [♠] button.
- Press the [▲][▼] buttons or turn the [♣] dial to choose a menu item to save (max six items) and then press the [♣] button to save it.
- [✓] is displayed.
- To cancel saving, press the [⊕] button.
   [✓] is no longer displayed.
- Press the [MENU] button.

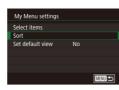

### 3 Rearrange menu items, as needed.

- Press the [▲][▼] buttons or turn the [⊕] dial to choose [Sort], and then press the [⊕] button.
- Choose a menu item to move (either press the [▲][▼] buttons or turn the [♣] dial), and then press the [♠] button.
- Press the [▲][▼] buttons or turn the [⊕] dial to change the order, and then press the [ℙ] button.
- Press the [MENU] button.



Grayed-out items in step 2 can also be specified, but they may not be available in some shooting modes.



 To make My Menu immediately accessible by pressing the [MENU] button in Shooting mode, set [Set default view] to [Yes].



- On the [Select items] screen for saving or clearing items, you can also touch items to select them.
- On the [Sort] screen, you can also drag items to change the display order.

**Before Use** 

Basic Guide

**Advanced Guide** 

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





## Playback Mode


Have fun reviewing your shots, and browse or edit them in many ways

• To prepare the camera for these operations, press the [ ] button to enter Playback mode.



It may not be possible to play back or edit images that were renamed or already edited on a computer, or images from other cameras.

### Viewing

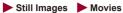



After shooting images or movies, you can view them on the screen as follows



### Enter Playback mode.

- Press the [▶] button.
- Your last shot is displayed.



### 2 Choose images.

- To view the previous image, press the [◀] button or turn the [♠] dial counterclockwise. To view the next image, press the [ >] button or turn the ( dial clockwise.
- Press and hold the [◀][▶] buttons to browse through images quickly.



- To access this screen (Scroll Display) mode), turn the [ dial rapidly. In this mode, turn the [ dial to browse through
- To return to single-image display, press the [ button.
- To browse images grouped by shooting date, press the [▲][▼] buttons in Scroll Display mode.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







Movies are identified by a [SET ►] icon.
 To play movies, go to step 3.



#### 3 Play movies.

Press the [♠] button, press the [▲][▼] buttons to choose [▶], and then press the [♣] button again.



#### 4 Adjust the volume.

- Press the [▲][▼] buttons to adjust the volume.
- To adjust the volume when the volume indicator (1) is no longer displayed, press the [▲][▼] buttons.

### 5 Pause playback.

- To pause or resume playback, press the substantal
- After the movie is finished, [SET ►] is displayed.



- To switch to Shooting mode from Playback mode, press the shutter button halfway.
- To deactivate Scroll Display, choose MENU (□31) ► [►5] tab ► [Scroll Display] ► [Off].
- To have the most recent shot displayed when you enter Playback mode, choose MENU (□31) ► [►5] tab ► [Resume] ► [Last shot].
- To change the transition shown between images, access MENU
   (□31) and choose your desired effect on the [▶5] tab ►
   [Transition Effect].

### **Touch-Screen Operations**





- To view the next image, drag left across the screen, and to view the previous image, drag right.
- To access Scroll Display mode, quickly drag left or right repeatedly.
- You can also choose images in Scroll Display mode by dragging left or right.
- Touching the central image will restore single-image display.
- To browse images grouped by shooting date in Scroll Display mode, drag up or down.
- To start movie playback, touch [♠] in step 2 of "Viewing" (♣106).
- To adjust the volume during movie playback, quickly drag up or down across the screen.
- To stop playback, touch the screen. The screen shown at left is displayed, and the following operations are available.
- Touch [◄))] to display the volume panel, and then touch [▲][▼] to adjust the volume. At a volume of 0, [◄] is displayed.
- To switch frames, touch the scrollbar or drag left or right.
- To resume playback, touch [▶].
- Touch [MENU<sup>4</sup>] to return to the screen in step 2 of "Viewing" (□106).

**Before Use** 

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 








### **Switching Display Modes**

Still Images Movies

Press the [DISP] button to view other information on the screen, or to hide the information. For details on the information displayed, see "Playback (Detailed Information Display)" ( 194).

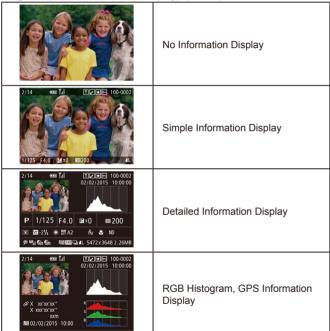



Switching display modes is not possible while the camera is connected via Wi-Fi to devices other than printers.

### **Overexposure Warning (for Image Highlights)**

► Still Images ► Movies

Washed-out highlights in the image flash on the screen in detailed information display (\$\square\$108).

#### Histogram

► Still Images ► Movies



Auto Mode / **Hybrid Auto Mode** 

Camera Basics

Other Shooting Modes

P Mode

Before Use

**Basic Guide** 

Advanced Guide

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 

Index




- The graph in detailed information display (108) is a histogram showing the distribution of brightness in the image. The horizontal axis represents the degree of brightness, and the vertical axis, how much of the image is at each level of brightness. Viewing the histogram is a way to check exposure.
- The histogram can also be accessed while shooting (Q102, Q193).


### **RGB Histogram, GPS Information Display**

Still Images Movies



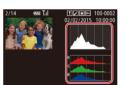

• The RGB histogram shows the distribution of shades of red, green, and blue in an image. The horizontal axis represents R. G. or B brightness, and the vertical axis, how much of the image is at that level of brightness. Viewing this histogram enables you to check image color characteristics

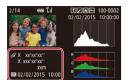

- Using a smartphone connected to the camera via Wi-Fi, you can geotag images on the camera, adding information such as latitude, longitude, and elevation (\(\subseteq 155\)). You can review this information in the GPS information display.
- Latitude, longitude, elevation, and UTC (shooting date and time) are listed from top to bottom.



 [---] is shown instead of numerical values for items not available on your smartphone or items not recorded correctly.



- UTC: Coordinated Universal Time, essentially the same as Greenwich Mean Time
- GPS information display is not available for images that lack this information.



 You can also switch between the RGB histogram (still images only) and GPS information display by dragging the lower half of the screen upward or downward in detailed information display.

# Viewing Short Movies Created When Shooting Still Images (Digest Movies)



View digest movies recorded automatically in [ ] mode ( ] 37) on a day of still image shooting as follows.



#### 1 Choose an image.

• Choose a still image labeled with [SET 🚰] and press the [📳] button.



- Play the digest movie.
- Press the (3) button, and then choose
   in the menu (130).
- The movie recorded automatically on the day of still image shooting is played back, from the beginning.



 After a moment, [SET 45] will no longer be displayed when you are using the camera with information display deactivated (\$\sum\_{108}\$).



• You can also play digest movies by touching [SET 🚰] on the screen in step 1 and touching [SET Play 🚰] on the screen in step 2.

#### Viewing by Date

Digest movies can be viewed by date.



- 1 Choose a movie.
- Press the [MENU] button, choose [List/ Play Digest Movies] on the [L2] tab, and then choose a date (L31).
- Play the movie.
- Press the [ ] button to start playback.

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





## **Checking People Detected in Face ID**

► Still Images ► Movies



If you switch the camera to simple information display mode (\$\iiint\$108), the names of up to five detected people registered in Face ID (48) will be displayed.



- Press the IDISP1 button several times until simple information display is activated, and then press the [◀][▶] buttons or turn the [ all dial to choose an image.
- Names will be displayed on detected people.



If you prefer not to have names displayed on images shot using Face ID, choose MENU (□31) ► [►3] tab ► [Face ID Info] ► [Name Display] ► [Off].

## **Browsing and Filtering Images**

## Navigating through Images in an Index

► Still Images ► Movies



By displaying multiple images in an index, you can guickly find the images you are looking for.



#### Display images in an index.

- Move the zoom lever toward [ to display images in an index. Moving the lever again will increase the number of images shown.
- To display fewer images, move the zoom lever toward [Q]. Fewer images are shown each time you move the lever.



#### 2 Choose an image.

- Turn the [ dial to scroll through the images.
- Press the [▲][▼][◀][▶] buttons to choose an image.
- An orange frame is displayed around the selected image.
- Press the [ ] button to view the selected image in single-image display.



To deactivate the 3D display effect (shown if you hold down the [ $\triangle$ ][ $\bigvee$ ] buttons or turn the [ $\textcircled{\blacksquare}$ ] dial rapidly), choose MENU (□31) ► [►5] tab ► [Index Effect] ► [Off].

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 




#### **Touch-Screen Operations**





- Pinch in to switch from single-image display to index display.
- To view more thumbnails per screen. pinch in again.
- Drag up or down on the screen to scroll through displayed images.
- To view fewer thumbnails per screen. spread your fingers apart.
- Touch an image to choose it, and touch it again to view it in single-image display.

## **Finding Images Matching Specified Conditions**

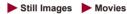



Find desired images guickly on a memory card full of images by filtering image display according to your specified conditions. You can also protect (116) or delete (1118) these images all at once.

★ Favorites	Displays images tagged as favorites (Q121).
Shot Date	Displays the images shot on a specific date.
Reople	Displays images with detected faces.
Still image/	Displays still images, movies, or movies shot in [ $\[ \]$ ] mode ( $\[ \]$ 37).
<b>∵</b> Name	Displays images of a registered person (Q48).





- In single-image display, press the [♠] button, and then press the [♠][▼] buttons to choose a display filter.
- When [★] or [♠] is selected, you can view only images matching this condition by pressing the [◀][▶] buttons or turning the [ dial. To perform an action for all of these images together, press the (@) button and go to step 3.



#### Choose the second condition and view the filtered images.

- When you have selected (♥) or (♣) as the first condition, choose the second by pressing the [◀][▶] buttons, and then turn the [ dial to view only matching images.
- To switch to filtered image display, press the ( button and go to step 3.
- When you have selected [L] as the first condition, press the [ ] button, and press the [▲][▼][◀][▶] buttons on the next screen to choose a person.



#### 3 View the filtered images.

- Images matching your conditions are displayed in vellow frames. To view only these images, press the [◀][▶] buttons, or turn the [ dial.
- To cancel filtered display, press the [66] button.



When the camera has found no corresponding images for some conditions, those conditions will not be available.

Refore Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 







- To hide or view other information, press the [DISP] button in step 3.
- Options for viewing the images found (in step 3) include "Navigating through Images in an Index" ( 110), "Magnifying Images" (2115), and "Viewing Slideshows" (2115). You can also apply image operations to all images found, by choosing [Protect All Images in Search] in "Protecting Images" (2116) or [Select All Images in Search] in "Erasing Multiple Images at Once" (119), "Adding Images to the Print List (DPOF)" (1183), or "Adding Images to a Photobook" ( 185).
- If you edit images and save them as new images ( 124 129), a message is displayed, and the images that were found are no longer shown.



- You can also choose conditions by touching the screens in steps 1 and 2.
- After choosing conditions, you can view images matching your conditions by touching a condition again.

## **Using the Front Dial to Jump between Images**





Use the front dial to find and jump between desired images quickly by filtering image display according to your specified conditions.

	Displays images tagged as favorites (\$\sum_{121}\$).
∰ Jump Shot Date	Jumps to the first image in each group of images that were shot on the same date.
Jump 10 Images	Jumps by 10 images at a time.
Jump 100 Images	Jumps by 100 images at a time.



#### Choose a condition.

- Choose a condition (or jump method) in single-image display by turning the [♣️] dial and then pressing the [♠][▼] buttons.
- 2 View images matching your specified condition, or jump by the specified amount.
- Turn the [ dial to view only images matching the condition or jump by the specified number of images forward or back.

#### **Touch-Screen Operations**



 You can also jump to the previous or next image according to your jump method chosen in step 1 of "Using the Front Dial to Jump between Images" ( 112) by dragging left or right with two fingers.

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







Turning the [ dial when browsing images in index display will jump to the previous or next image according to the jump method chosen in single-image display. However, if you have chosen [ ] or [ ], the jump method will be switched to [ ]

## Viewing Individual Images in a Group





Images shot continuously (\$\iii47\$, \$\iii60\$), images shot in [\$\iii1\$] mode (\$\infty\$59), and individual still images saved as source data in [\$\infty\$] mode (\$\infty\$71) are grouped, and only the first image is displayed. However, you can also view the images individually.



#### Choose a grouped image.

 Press the [◀][▶] buttons or turn the [♠] dial to choose an image labeled with [SET □].



#### 2 Choose [□i].

• Press the [ B] button, and then choose  $\square$  in the menu  $\square$  30).



#### 3 View images in the group individually.

- Pressing the [◀][▶] buttons or turning the (a) dial will display only images in the group.
- To cancel group playback, press the [@] button, choose [ li] in the menu, and press the [ ] button again ( ] 30).



- During group playback (step 3), you can browse through images quickly "Navigating through Images in an Index" (Q110) and magnify them "Magnifying Images" (Q115). By choosing [Protect All Images in Group] in "Protecting Images" (2116), [All Images in Group] in "Erasing Multiple Images at Once" ( 119), or [Select All in Group] in "Adding Images to the Print List (DPOF)" (\$\times 183\$) or "Adding Images to a Photobook" (\$\times 185\$), all images in the group can be manipulated at once.
- To ungroup images so that they are displayed only as single still images, choose MENU (□31) ► [►5] tab ► [Group Images] ► [Off] (□31). However, grouped images cannot be ungrouped during individual playback.
- In [ mode, the simultaneous display after step 2 in "Enjoying" a Variety of Images from Each Shot (Creative Shot)" (\$\infty\$59) is only shown immediately after you shoot.



You can also view group images individually by touching [SET] on the screen in steps 1 and 2.

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

#### Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





## **Editing Face ID Information**

If you notice that a name is incorrect during playback, you can change it or erase it.


However, you cannot add names for people who are not detected by Face ID (names are not displayed), and for people whose names have been erased.

## **Changing Names**



#### 1 Access the setting screen.

- Press the [MENU] button and choose [Face ID Info] on the [►3] tab (□31).
- Press the [▲][▼] buttons or turn the [♣] dial to choose [Edit ID Info], and then press the [♣] button.

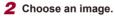

- Following the procedure in "Checking People Detected in Face ID" ( 110), choose an image and press the [ 10] button.
- An orange frame is displayed around the selected face. When multiple names are displayed in an image, press the [◀][▶] buttons or turn the [♠] dial to choose the name to change, and then press the [♠] button.



#### **3** Choose the editing option.

 Press the [▲][▼][◀][▶] buttons or turn the [♣] dial to choose [Overwrite], and then press the [♣] button.

# 4 Choose the name of the person to overwrite with.

 Follow step 2 in "Overwriting and Adding Face Information" (Alpha 51) to choose the name of the person you want to overwrite with.



- You can also access the [Edit ID Info] screen by touching an image on the screen in step 2, touching [SET] to display the orange frame, and then touching the face to overwrite its name.
- You can also choose editing options by touching them in step 3.

## Erasing Names

- On the screen displayed in step 3 in "Changing Names" (Q114), choose [Erase] and press the (B) button.
- After [Erase?] is displayed, press the [◀][▶] buttons or turn the [♣] dial to choose [OK], and then press the [♣] button.



 You can also erase names by touching [OK] after [Erase?] is displayed. Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories


Appendix





## Image Viewing Options

## Magnifying Images

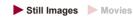





Magnify an image.


- Moving the zoom lever toward [Q] will zoom in and magnify the image. You can magnify images up to about 10x by continuing to hold the zoom lever.
- The approximate position of the displayed area (1) is shown for reference.
- To zoom out, move the zoom lever toward [ ]. You can return to singleimage display by continuing to hold it.
- 2 Move the display position and switch images as needed.
- To move the display position, press the [▲][▼][◀][▶] buttons.
- To switch to other images while zoomed. turn the [ ) dial.



- You can return to single-image display from magnified display by pressing the [MFNI] button.
- You can check the focus when [SET 13] is displayed by pressing the [ button to show the position in focus (Focus Check). When multiple positions are in focus, press the [ button repeatedly to switch to other positions.

#### **Touch-Screen Operations**



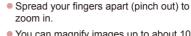

- You can magnify images up to about 10x by repeating this action.
- To move the display position, drag across the screen.
- Pinch in to zoom out.
- Touch [MENU] to restore single-image display.



## Viewing Slideshows

► Still Images ► Movies

Automatically play back images from a memory card as follows.



- Press the [MENU] button, and then choose [Slideshow] on the [▶1] tab  $(\square 31).$
- Press the [▲][▼] buttons or turn the [♣] dial to choose [Start], and then press the ( button.
- The slideshow will start after [Loading image] is displayed for a few seconds.
- Press the [MENU] button to stop the slideshow



The camera's power-saving functions (QQ27) are deactivated during slideshows.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 







- To pause or resume slideshows, press the [ button.
- You can switch to other images during playback by pressing the [4][ ] buttons or turning the [ ] dial. For fast-forward or fastrewind, hold the [◀][▶] buttons down.
- You can configure slideshow repetition, display time per image, and the transition between images on the screen accessed by choosing [Set up] and pressing the [ button ( 31).



You can also stop slideshows by touching the screen.

## **Protecting Images**





Protect important images to prevent accidental erasure (118).



- Press the [ ] button, choose [ ] in the menu, and then choose [Om] (either press the [4][ >] buttons or turn the [\*) dial). [ is displayed.
- To cancel protection, choose [OFF]. [ is no longer displayed.



Protected images on a memory card will be erased if you format the card ( 160).




Protected images cannot be erased using the camera's erasure function. To erase them this way, first cancel protection.

## Using the Menu



- Access the setting screen.
- Press the [MENU] button and choose [Protect] on the [ 1] tab ( 31).

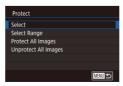

- 2 Choose a selection method.
- Choose an option as desired (\$\sum\_31\$).
- To return to the menu screen, press the [MENU] button.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





## Choosing Images Individually

#### 1 Choose [Select].

 Following the procedure in "Using the Menu" (116), choose [Select] and press the (a) button.



#### 2 Choose an image.

- Press the [◀][▶] buttons or turn the [∰] dial to choose an image, and then press the [⑥] button. [➡] is displayed.
- To cancel selection, press the [<sup>®</sup>] button again. [<sup>™</sup>] is no longer displayed.
- Repeat this process to specify other images.



#### 3 Protect the image.

- Press the [MENU] button. A confirmation message is displayed.
- Press the [◀][▶] buttons or turn the [♣] dial to choose [OK], and then press the [♠] button.



Images will not be protected if you switch to Shooting mode or turn the camera off before finishing the setup process in step 3.



- You can also select or clear images by touching the screen in step 2, and you can access the confirmation screen by touching (MANU).
- You can also protect images by touching [OK] on the screen in step 3.

### Selecting a Range

#### 1 Choose [Select Range].

 Following the procedure in "Using the Menu" (116), choose [Select Range] and press the [8] button.



# Choose a starting image.Press the ( ) button.

 Press the [◀][▶] buttons or turn the [♠] dial to choose an image, and then press the [♠] button.



#### **3** Choose an ending image.

Press the [▶] button to choose [Last image], and then press the [♠] button.





- Press the [◀][▶] buttons or turn the [∰] dial to choose an image, and then press the [∰] button.
- Images before the first image cannot be selected as the last image.

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







#### Protect the images.

 Press the [▼] button to choose [Protect]. and then press the [4] button.



- You can also choose the first or last image by turning the [ dial when the top screen in steps 2 and 3 is displayed.
- To cancel protection for groups of images, choose [Unlock] in step 4.




- You can also display the screen for choosing the first or last image by touching an image on the top screen in steps 2 or 3.
- You can also protect images by touching [Protect] on the screen in step 4.

## Protecting All Images at Once

### Choose [Protect All Images].

 Following the procedure in "Using the Menu" ( 116), choose [Protect All Images] and press the [ ] button.

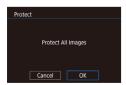

#### 2 Protect the images.

 Press the [◀][▶] buttons or turn the [♠] dial to choose [OK], and then press the ( button.

#### Clearing All Protection at Once

You can clear protection from all images at once.

To clear protection, choose [Unprotect All Images] in step 1 of "Protecting All Images at Once", and then complete step 2.

## **Erasing Images**





You can choose and erase unneeded images one by one. Be careful

when erasing images, because they cannot be recovered. However, protected images (116) cannot be erased.

#### Choose an image to erase.

Press the [◀][▶] buttons or turn the [♠] dial to choose an image.



#### Erase the image.

- Press the f前 button.
- After [Erase?] is displayed, press the [4][1] buttons or turn the [1] dial to choose [Erase], and then press the [@] button
- The current image is now erased.
- To cancel erasure, press the [◀][▶] buttons or turn the [ dial to choose [Cancel], and then press the [4] button.



For images captured in both RAW and JPEG format, pressing the button while the image is displayed gives you the option of choosing [Erase ]], [Erase ]PEG], or [Erase ]]+JPEG].



- You can also erase the current image by touching [Erase] on the screen in step 2.
- Images can also be erased by using Touch Actions (Q123).

Refore Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix








## Erasing Multiple Images at Once

You can choose multiple images to erase at once. Be careful when erasing images, because they cannot be recovered. However, protected images (\(\superscript{116}\)) cannot be erased.

#### **Choosing a Selection Method**

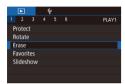

1 Access the setting screen.

 Press the [MENU] button, and then choose [Erase] on the [▶1] tab (□31).



2 Choose a selection method.

- Press the [▲][▼] buttons or turn the [♣] dial to choose a selection method, and then press the [♣] button.
- To return to the menu screen, press the [MFNU] button.

#### **Choosing Images Individually**



• Following the procedure in "Choosing a Selection Method" (\$\sum 119\), choose [Select] and press the [\$\mathbb{@}\$] button.



2 Choose an image.

- Once you choose an image following step 2 in "Choosing Images Individually" (☐117), [✓] is displayed.
- To cancel selection, press the [<sup>®</sup>] button again. [✓] is no longer displayed.
- Repeat this process to specify other images.



3 Erase the images.

- Press the [MENU] button. A confirmation message is displayed.
- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [ℍ] button.



Choosing an image captured in both RAW and JPEG format will erase both versions

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

**Other Shooting Modes** 

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### Selecting a Range

#### Choose [Select Range].

 Following the procedure in "Choosing a Selection Method" (2119), choose [Select Range] and press the [8] button.

#### 2 Choose images.

Follow steps 2 – 3 in "Selecting a Range"
 (117) to specify images.



#### 3 Erase the images.

 Press the [▼] button to choose [Erase], and then press the [♣] button.

#### Specifying All Images at Once

#### 1 Choose [Select All Images].

 Following the procedure in "Choosing a Selection Method" (☐119), choose [Select All Images] and press the [⑧] button.




#### 2 Erase the images.

 Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [ℯ] button.

## **Rotating Images**



Change the orientation of images and save them as follows.

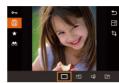

#### 1 Choose [Q].

Press the [<sup>®</sup>] button, and then choose
 [a] in the menu (A30).



#### 2 Rotate the image.

 Press the [◀] or [▶] button, depending on the desired direction. Each time you press the button, the image is rotated 90°. Press the [ℯ] button to complete the setting.



Rotation is not possible when [Auto Rotate] is set to [Off] ( 121).

## Using the Menu



#### 1 Choose [Rotate].

 Press the [MENU] button and choose [Rotate] on the [▶ 1] tab (□31). Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







#### 2 Rotate the image.


- Press the [◀][▶] buttons or turn the [♠] dial to choose an image.
- The image is rotated 90° each time you press the [ ] button.
- To return to the menu screen, press the [MFNI] button.



On the screen in step 2, you can also touch [SET] to rotate images or touch [MENU] to return to the menu screen.

## **Deactivating Auto Rotation**

Follow these steps to deactivate automatic image rotation, which rotates images based on the current camera orientation.

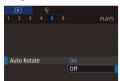

• Press the [MENU] button, choose [Auto Rotate] on the [ 5] tab, and then choose [Off] (Q31).



Images cannot be rotated (Q120) when you set [Auto Rotate] to [Off]. Additionally, images already rotated will be displayed in the original orientation.

## **Tagging Images as Favorites**





You can organize images by tagging them as favorites. By choosing a category in filtered playback, you can restrict the following operations to all of those images.

• "Viewing" (Q106), "Viewing Slideshows" (Q115), "Protecting Images" (2116), "Erasing Images" (2118), "Adding Images to the Print List (DPOF)" (183). "Adding Images to a Photobook" (4185)



- Press the ( button, and then choose  $[\bigstar]$  in the menu ( $\square$ 30).
- To untag the image, repeat this process and choose [OFF], and then press the ( button.

## Using the Menu



#### Choose [Favorites].

• Press the [MENU] button and choose [Favorites] on the [ 11 tab ( 31).



#### 2 Choose an image.

- Press the [◀][▶] buttons or turn the [●] dial to choose an image, and then press the [♣] button. [★] is displayed.
- To untag the image, press the [R] button again. [ 1 is no longer displayed.
- Repeat this process to choose additional images.

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

Appendix







#### 3 Finish the setup process.

- Press the [MENU] button. A confirmation message is displayed.
- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [∰] button.



Images will not be tagged as favorites if you switch to Shooting mode or turn the camera off before finishing the setup process in step 3.



- Tagging images as favorites makes it easier to add them when creating albums (\$\sum\_130\$).
- Favorite images will have a three-star rating (★★★☆☆)
  when transferred to computers running Windows 8 or Windows 7.
  (Does not apply to movies or RAW images.)



- You can also select or clear current images by touching the screen in step 2.
- Images can also be tagged as favorites by using Touch Actions (\( \subseteq 123 \)).

## **Convenient Control: Assigned Buttons**

You can quickly and easily activate functions that you assign to the [ ] button.



- 1 Choose [Set Shortcut button].
- Press the [MENU] button, and then choose [Set Shortcut button] on the [ 6] tab ( 31).
- 2 Configure the setting.
- Press the [◀][▶] buttons or turn the [♣] dial to choose a function to assign, and then press the [♠] button.
- 3 Use the assigned function as needed.
- Press the [
   |S] button to activate the assigned function.



- To restore default settings, choose [ 5]
- Pressing the [5] button with [1] assigned when the camera is not connected to a printer adds the image to the print list. When the camera is connected to a printer, pressing the button starts printing.

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

**Other Shooting Modes** 

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



## **Convenient Control: Touch Actions**

► Still Images ► Movies

You can guickly and easily activate functions that you have assigned to four touch gestures (Touch Actions), in single-image display.

## **Using Touch Actions Functions**



- Drag across the screen as shown.
- The function assigned to [←] is now activated.



- Similarly, you can also activate functions assigned to [→], [←], and [→] by dragging across the screen.
- Customize functions assigned to Touch Actions as desired.

## **Changing Touch Actions Functions**

Simplify your preferred camera operations by reassigning dragging patterns to them as desired.

#### Access the setting screen.

• Press the [MENU] button, and then choose [Set Touch Actions] on the [16] tab (QQ31).



#### 2 Assign a function to a Touch Action.

- Press the [▲][▼] buttons or turn the [♣] dial to choose a dragging pattern, and then press the [P] button.
- Press the [▲][▼] buttons or turn the [♣] dial to choose a function to assign.

#### **Assignable Functions**

Tag images as favorites, or untag the image.		
Switch to displaying the next image tagged as a favorite.		
Switch to displaying the previous image tagged as a favorite.		
Switch to displaying the first image with the next shooting date.		
Switch to displaying the first image with the previous shooting date.		
Access the Wi-Fi connection screen. For Wi-Fi details, see "Wi-Fi Functions"		
	( <u>(</u> 133).	
Erase an image.		
Protect an image or cancel protection.		
Rotate an image.		

Refore Use

**Basic Guide** 

#### Advanced Guide

#### **Camera Basics**

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





## **Editing Still Images**



Image editing ( 124 – 127) is only available when the memory card has sufficient free space.



- To access the screen for each kind of editing, choose the editing function with [MENU], touch an image, and then touch [SET]
- When [MENU] is shown on an editing screen, you can touch [MENU] instead of pressing the [MENU] button, if you prefer.
- When [SET] is shown on an editing screen, you can touch [SET] instead of pressing the [ ] button, if you prefer.

## **Resizing Images**





Save a copy of images at a lower number of recording pixels.



Choose an image size.

- Press the [ B ] button, choose [ in the menu, and choose an image size  $(\square 30).$



2 Save the new image.

- After [Save new image?] is displayed. press the [◀][▶] buttons or turn the [♠] dial to choose [OK], and then press the [ button.
- The image is now saved as a new file.



3 Review the new image.

- Press the [◀][▶] buttons or turn the [♠] dial to choose [Yes], and then press the (A) button.
- The saved image is now displayed.



- Editing is not possible for images shot at a recording pixel setting of [S]
- RAW images cannot be edited.



Images cannot be resized to a higher number of recording pixels



You can also view saved images by touching [Yes] on the screen in step 3.

## Using the Menu



1 Choose [Resize].

- Press the [MENU] button and choose [Resize] on the [ $\triangleright$ 3] tab ( $\square$ 31).
- 2 Choose an image.
- Press the [◀][▶] buttons or turn the [♠] dial to choose an image, and then press the [ button.

Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 








Choose an image size.

 Press the [◀][▶] buttons or turn the [♠] dial to choose the size, and then press the ( ) button.

#### Save as a new image and review.

- Follow step 2 in "Resizing Images" (124).
- Press the [MFNI] button, and then follow step 3 in "Resizing Images" (124).


### Cropping

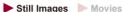

You can specify a portion of an image to save as a separate image file.

#### Access the setting screen.

- Press the [இ] button, choose [九] in the menu, and then press the [4] button
- (230).

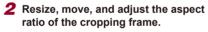

- To resize the frame, move the zoom. lever
- To move the frame, press the [▲][▼][◀][▶] buttons.
- To change the frame orientation, turn the i dial to choose [17], and then press the [ ] button.
- To change the frame aspect ratio, turn the [ dial to choose [ ]. To switch between aspect ratios ([3:2], [16:9] [4:3], and [1:1]), press the [1:1] button repeatedly.







#### 3 Preview the cropped image.

- Turn the (♣) dial to choose □
- To switch display between the cropped image and the cropping frame, press the ( button repeatedly.

#### Save as a new image and review.

- Turn the [♠] dial to choose [♠], and then press the [ ] button.
- Follow steps 2 3 in "Resizing Images" (LLL 124).



- Editing is not possible for images shot at a recording pixel setting of [S] or resized to [S] ( $\square$ 124).
- RAW images cannot be edited.
- Cropped images cannot be cropped again.
- Cropped images cannot be resized



- Cropped images will have a lower number of recording pixels than uncropped images.
- While previewing the cropped image in step 3, you can resize, move, and adjust the aspect ratio of the cropping frame.
- Operations in step 2 are also possible by pressing the [MENU] button, choosing [▶ 3] tab ▶ [Cropping], pressing the [♣] button, choosing an image, and pressing the [P] button again.
- If you crop still images shot using Face ID (Q48), only the names of the people left in the cropped image will remain.



- You can also move the cropping frame in step 2 by dragging it. You can also resize frames by pinching in or out (115) on the
- Operations are also possible by touching [□→], [□→], [□→], and on the top of the screen in step 2.

Refore Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix






## **Changing Image Color Tones (My Colors)**

► Still Images ► Movies




You can adjust image colors and then save the edited image as a separate file. For details on each option, see "Changing Image Color Tones (My Colors)" (Q85).

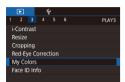

#### Choose [My Colors].

• Press the [MENU] button, and then choose [My Colors] on the [▶3] tab (M31).

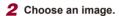

 Press the [◀][▶] buttons or turn the [♣] dial to choose an image, and then press the ( and button.



#### 3 Choose an option.

 Press the [◀][▶] buttons or turn the [♠] dial to choose an option, and then press the [ ] button.

#### Save as a new image and review.

Follow steps 2 – 3 in "Resizing Images" (2124).



- Image quality of pictures you repeatedly edit this way will be a little lower each time, and you may not be able to obtain the desired color.
- Colors of RAW images cannot be edited



The color of images edited using this function may vary slightly from the color of images shot using My Colors (\$\subset\$85).



You can also configure this setting by touching an option to select it on the screen in step 3 and then touching it again.

## **Correcting Image Brightness (i-Contrast)**

Excessively dark image areas (such as faces or backgrounds) can be detected and automatically adjusted to the optimal brightness. Insufficient

overall image contrast is also automatically corrected, to make subjects

stand out better. Choose from four correction levels, and then save the

► Still Images ► Movies



**Hybrid Auto Mode** Other Shooting Modes

Camera Basics

Auto Mode /

P Mode

Refore Use

Basic Guide

Advanced Guide

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix

Index



Face ID Info

image as a separate file.

#### Choose [i-Contrast].

• Press the [MENU] button, and then choose [i-Contrast] on the [▶3] tab (231).

#### 2 Choose an image.

Press the [◀][▶] buttons or turn the [♣] dial to choose an image, and then press the ( button.



#### Choose an option.

Press the [◀][▶] buttons or turn the [♣] dial to choose an option, and then press the [ button.

#### 4 Save as a new image and review.

Follow steps 2 – 3 in "Resizing Images"  $(\Box \Box 124).$ 





- For some images, correction may be inaccurate or may cause images to appear grainy.
- Images may look grainy after repeated editing using this function.
- RAW images cannot be edited this way.



If [Auto] does not produce the expected results, try correcting images using [Low], [Medium], or [High].



You can also configure this setting by touching [◀][▶] on the screen in step 3.

## **Correcting Red-Eye**





Automatically corrects images affected by red-eye. You can save the corrected image as a separate file.



- Choose [Red-Eye Correction].
  - Press the [MENU] button, and then choose [Red-Eye Correction] on the [**1**3] tab (**4**31).
- 2 Choose an image.
- Press the [◀][▶] buttons or turn the [♠] dial to choose an image.
- Correct the image.
- Press the [ B ] button.
- Red-eve detected by the camera is now corrected, and frames are displayed around corrected image areas.
- Enlarge or reduce images as needed. Follow the steps in "Magnifying Images" (III 115).



Save as a new image and review.

- Press the [▲][▼][◀][▶] buttons or turn the [ dial to choose [New File], and then press the [ ] button.
- The image is now saved as a new file.
- Press the [MENU] button, and then follow step 3 in "Resizing Images" (124).



- Some images may not be corrected accurately.
- To overwrite the original image with the corrected image, choose [Overwrite] in step 4. In this case, the original image will be erased
- Protected images cannot be overwritten.
- RAW images cannot be edited this way.
- Red-eye correction can be applied to JPEG images also captured in RAW format, but the original image cannot be overwritten.



You can save images by touching [New File] or [Overwrite] on the screen in step 4.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





## **Editing Movies**

► Still Images ► Movies

You can remove unneeded portions from the beginning and end of movies (excluding digest movies, \$\infty\$37).



#### 1 Choose [%].

- Following steps 1 5 in "Viewing"
  (☐ 106), choose [※] and press the [※]
  button.
- The movie editing panel and editing bar are now displayed.



#### 2 Specify portions to cut.

- (1) is the movie editing panel, and (2) is the editing bar.
- Press the [▲][▼] buttons to choose [¾Ţ]
  or [Ţ½].
- To view the portions you can cut (identified by [※] on the screen), press the [◀][▶] buttons or turn the [♣] dial to move [¶]. Cut the beginning of the movie (from [※]) by choosing [※], and cut the end of the movie by choosing [ৄ※].

#### 3 Review the edited movie.

- Press the [▲][▼] buttons to choose
   [▶], and then press the [⊕] button. The edited movie is now played.
- To edit the movie again, repeat step 2.
- To cancel editing, press the [MENU] button, choose [OK] (either press the [◀][▶] buttons or turn the [♠] dial), and then press the [♠] button.



### 4 Save the edited movie.

- Press the [▲][▼] buttons to choose [⚠], and then press the [♣] button.
- Press the [♠][▼][♠] buttons or turn the [♠] dial to choose [New File], and then press the [♠] button.
- Choose [Save w/o Comp.], and then press the [<sup>®</sup>] button.
- The movie is now saved as a new file.





P Mode

Refore Use

Basic Guide

Advanced Guide

Camera Basics

**Hybrid Auto Mode** 

Other Shooting Modes

Auto Mode /

Playback Mode

Setting Menu

Accessories

Appendix

Index



- To overwrite the original movie with the cut one, choose [Overwrite] in step 4. In this case, the original movie will be erased
- If the memory card lacks sufficient space, only [Overwrite] will be available.
- Movies may not be saved if the battery pack runs out while saving is in progress.
- When editing movies, you should use a fully charged battery pack or an AC adapter kit (sold separately, \$\infty\$168).



 You can also edit movies by touching the movie editing panel or editing bar.



Tv. Av. M. C1. and C2 Mode





### Reducing File Sizes

Movie file sizes can be reduced by compressing movies as follows.



- On the screen in step 2 of "Editing" Movies", choose [12]. Choose [New File], and then press the [ ] button.
- Choose [Compress & Sav.], and then press the [ ] button.

#### **Image Quality of Compressed Movies**

Before Compression	After Compression
□FHD 59.94P, □FHD 29.97P	EHD 29,97P
EFHD 23.98P	□TD 23.98P
町D 50.00P, 町D 25.00P	□HD 25.00P



- [EVGA 29.97P][EVGA 25.00P] movies cannot be compressed.
- Edited movies cannot be saved in compressed format when you choose [Overwrite].
- Compressing movies to [EHD 29.97P] or [EHD 25.00P] reduces the file size while maintaining the same image quality.

## **Editing Digest Movies**





Individual chapters (clips) ( 37) recorded in mode can be erased, as needed. Be careful when erasing clips, because they cannot be recovered.



#### Select the clip to erase.

- Plav a movie recorded in [ mode as described in "Viewing Short Movies Created When Shooting Still Images (Digest Movies)" ( 109), and then press the [ ] button to access the movie control panel.
- Press the [◀][▶] buttons or turn the [♣] dial to choose [ or [ I, and then press the [ button.

#### 2 Choose [#].

- Press the [◀][▶] buttons or turn the [♣] dial to choose [4], and then press the [4] button.
- The selected clip is played back repeatedly.



#### 3 Confirm erasure.

- Press the [◀][▶] buttons or turn the [●] dial to choose [OK], and then press the ( button.
- The clip is erased, and the short movie is overwritten



is not displayed if you select a clip when the camera is connected to a printer.

Before Use

**Basic Guide** 

#### Advanced Guide

#### Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

#### Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





## Viewing Albums (Story Highlights)

► Still Images ► Movies

You can choose themes such as a date or person's name to create an album of automatically selected images that match the theme. These images are combined into a slideshow that can be saved as a short movie of about 2-3 minutes.

Before using this feature, make sure the battery pack is fully charged. Creating albums also requires free space on the memory card. As a guideline, use a memory card with a capacity of 16 GB or higher, and ensure at least 1 GB of free space.

#### **Choosing Themes for Albums**

Press the [▼] button to access the home screen and choose themes for the camera to use when selecting album elements. Note that the camera is more likely to add images tagged as favorites (□121) to albums.

	<u> </u>
Date	Creates an album of images shot on the same day. Images are selected from those shot on the same day as the image displayed before you access the home screen.
Person's name	Can be used to create monthly albums of people, such as albums of children as they grow up. Subjects whose Face ID information you registered before shooting may be selected for albums. Images selected are those that have the same subject shot during the same month as the image displayed before you access the home screen.
Event	A good choice for albums of vacations, parties, or other events.  Images are selected from those shot during the event before and after the image displayed before you access the home screen.
Custom	Includes images based on your specified images, dates, or people registered in Face ID.









#### 1 Choose an image.

- Choose an image in single-image display.
- Themes available in step 3 will vary depending on image shooting date and Face ID information.

#### 2 Access the home screen.

- Press the [▼] button.
- After [Busy] is displayed, the home screen is displayed.

#### 3 Preview an album.

- Press the [◀][▶] buttons to choose a person or [Date] or [Event] as the album theme, and then press the [♠] button.
- After [Loading] is displayed for a few seconds, the album is played.

#### 4 Save the album.

- Press the [▲][▼] buttons to choose [Save Album as Movie], and then press the [♠] button.
- Once the album is saved, [Saved] is displayed.
- **5** Play the album (106).

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







- Albums can include following images captured by the camera: Still images
  - Digest movies (QQ 37)
  - Short clips with a playback time of two seconds or more (476)



- Albums cannot be saved unless there is enough space on the memory card
- You can specify the color effect in step 4 by choosing [Change Color Effect] and pressing the [ ] button. To preview how the album looks with your selected effect applied, choose [Preview Album Again] on the screen in step 4 after pressing the [◀][▶] buttons to choose a color effect and pressing the [3] button.
- To play saved albums, choose [List of Albums] on the Story Highlights home screen, press the [ ] button, choose a listed album, and press the [ ] button again.

## **Adding Background Music to Albums**

► Still Images ► Movies

Choose from three kinds of background music to play during album playback.

- Register background music to a memory card.
- Following steps 1 − 4 in "Viewing Albums (Story Highlights)" ( 130), choose [Music Settings] and press the [4] button.



- The screen at left is displayed when you use a new or recently formatted memory card. Choose [OK] (either press the [◀][▶] buttons or turn the [♠] dial), press the P button, and wait about a minute and a half until the three types of music are registered to the card.
- When using a memory card with music already registered to it, go to step 2.

#### Create the album.

● Follow steps 1 – 3 in "Viewing Albums (Story Highlights)" ( 130) to create an alhum



- 3 Configure background music settings.
  - Press the [▲][▼] buttons or turn the [♣] dial to choose the desired item, press the [♠] button, and then press the [♠][▼] buttons or turn the [ all dial to choose an option (QQ31).

#### Save the album.

 Follow step 4 in "Viewing Albums (Story Highlights)" ( 130) to save albums.



- Once albums are saved, background music cannot be added later. Background music in albums cannot be removed or changed.
- Chapters of albums with background music cannot be edited  $(\Box 129).$

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





Custom

Image Selection

Date Selection

Person Selection

- If you prefer not to add background music, set [Add BGM] to [No] on the screen in step 3.
- To use only background music instead of movie audio, set [Audio Mixer] to [BGM only] on the screen in step 3.
- To listen to a sample of the background music selected in [Track], choose [Sample BGM] on the screen in step 3 and press the [and press the press of the screen in step 3.

## Creating Your Own Albums

MENU 🗢



Create your own albums by choosing desired images.

#### 1 Choose to create a Custom album.

 Following steps 1 – 3 in "Viewing Albums (Story Highlights)" (1130), choose [Custom] and press the [ button.

#### 2 Choose a selection method.

 Choose [Image Selection], [Date Selection], or [Person Selection], and then press the [
 ] button.

#### 3 Choose album elements.

- Once you select the elements for your album and press the [<sup>®</sup>] button, your selected elements are labeled with [✓].
- Press the [MENU] button after you are finished selecting still images, digest movies, or short clips in [Image Selection], dates in [Date Selection], or people in [Person Selection].
- Press the [◀][▶] buttons or turn the [♠] dial to choose [Preview], and then press the [♠] button.





#### 4 Choose background music.

 When the screen at left is displayed, choose [Music Settings]. Add background music as described in "Adding Background Music to Albums" (2131), and then press the [MENU] button.

#### 5 Choose a color effect.

- On the screen in step 4 of "Viewing Albums (Story Highlights)" (1130), choose [Change Color Effect].
- Press the [◀][▶] buttons to choose a color effect, and then press the [⑥] button.

#### Save the album.

 Follow step 4 in "Viewing Albums (Story Highlights)" ( 130) to save albums.



- Up to 40 images can be selected if you choose [Image Selection]. The second time you create a custom album, [Select images based on previous settings?] is displayed. To use previously selected images as the basis, choose [Yes]. The previous images are labeled with [√], and multiple images are displayed at once.
- Up to 15 dates can be selected if you choose [Date Selection].
- The color effect may not be applied to some images.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





## Wi-Fi Functions

Send images wirelessly from the camera to a variety of compatible devices, and use the camera with Web services

## Available Wi-Fi Features

You can send and receive images and control the camera remotely by connecting it to these devices and services via Wi-Fi.

- Smartphones and Tablets
   Send images to smartphones and tablet computers that have Wi-Fi functions. You can also shoot remotely and geotag your shots from a smartphone or tablet.
  - For convenience in this manual, smartphones, tablets, and other compatible devices are collectively referred to as "smartphones".
- Computer
   Use software to save camera images to a computer connected via Wi-Fi
- Web Services
   Add your account information to the camera for CANON iMAGE
   GATEWAY online photography service or other Web services to
   send camera images to the services. Unsent images on the camera
   can also be sent to a computer or Web service via CANON iMAGE
   GATEWAY
- Printers
   Send images wirelessly to a PictBridge-compatible printer (supporting DPS over IP) to print them.
- Another Camera
   Send images wirelessly between Wi-Fi-compatible Canon cameras.

**Basic Guide** Advanced Guide Camera Basics Auto Mode / **Hybrid Auto Mode** Other Shooting Modes P Mode Tv. Av. M. C1. and C2 Mode Playback Mode Wi-Fi Functions **Setting Menu** Accessories **Appendix** Index

Refore Use



## **Sending Images to a Smartphone**

There are several ways to connect the camera to a smartphone and send images.

- Connect to a device assigned to the ☐ button (☐136)
   Simply press the ☐ button to connect the devices. This simplifies sending images to a smartphone (☐136). Note that only one smartphone can be assigned to the ☐ button.
- Connect via the Wi-Fi menu (1138)
   You can connect the camera to a smartphone as you would connect it to a computer or other device. Multiple smartphones can be added.

Before connecting to the camera, you must install the free dedicated Camera Connect app on the smartphone. For details on this application (supported smartphones and included functions), refer to the Canon website.



 Canon Wi-Fi-compatible camera users who connect their camera to a smartphone via Wi-Fi should consider switching from the CameraWindow mobile app to the Camera Connect mobile app.

# Sending Images to an NFC-Compatible Smartphone

Use an Android (OS version 4.0 or later) smartphone's NFC to simplify the process of installing Camera Connect and connecting to the camera. Operation once the devices are connected via NFC varies depending on the camera mode when the devices are touched together.

- If the camera is off or in Shooting mode when the devices are touched together, you can choose and send images on the image selection screen. Once the devices are connected, you can also shoot remotely and geotag your shots ("Using a Smartphone to View Camera Images and Control the Camera" (L155)). It's easy to reconnect to recent devices, which are listed in the Wi-Fi menu.
- If the camera is in Playback mode when the devices are touched together, you can choose and send images from the index display shown for image selection. The connection is ended automatically after image transfer.

Follow the instructions in the following section for NFC-initiated connection to a camera that is off or in Shooting mode.

# Connecting via NFC When Camera Is Off or in Shooting Mode



#### Install Camera Connect.

 Activate NFC on the smartphone and touch the devices N-Mark (N) together to start Google Play on the smartphone automatically. Once the Camera Connect download page is displayed, download and install the app. Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



#### 2 Establish the connection.

- Make sure the camera is off or in Shooting mode.
- Touch the N-Mark (1) on the smartphone with Camera Connect installed against the camera's N-Mark.
- The camera starts up automatically.
- If the [Device Nickname] screen is displayed, press the [▲][▼] buttons or turn the [♠] dial to choose [OK], and then press the [♠] button.



Enter a nickname for this camera

OK

MENU Cancel

Device Nickname

XXXXX

- Camera Connect is started on the smartphone.
- The devices are connected automatically.



#### 3 Adjust the privacy setting.

- After this screen is displayed, press the
   [◀][▶] buttons or turn the [♣] dial to
   choose [Yes], and then press the [♣]
   button.
- You can now use the smartphone to browse, import, or geotag images on the camera or shoot remotely.



#### 4 Send an image.

- Turn the (♣) dial to choose an image to send, press the [◄][▶] buttons to choose [Send this image], and then press the [♣) button.
- Image transfer will begin. The screen darkens during image transfer.
- [Transfer completed] is displayed after the image is sent, and the image transfer screen is displayed again.
- To end the connection, press the [MENU] button, choose [OK] on the confirmation screen (either press the [◀][▶] buttons or turn the [∰] dial), and then press the [∰] button. You can also use the smartphone to end the connection.



- . When using NFC, keep the following points in mind.
- Avoid strong impact between the camera and smartphone. This
  may damage the devices.
- Depending on the smartphone, the devices may not recognize each other immediately. In this case, try holding the devices together in slightly different positions. If connection is not established, keep the devices together until the camera screen is updated.
- If you attempt connection when the camera is off, a message may be displayed on the smartphone reminding you to turn on the camera. If so, turn the camera on and touch the devices together again.
- Do not place other objects between the camera and smartphone. Also, note that camera or smartphone covers or similar accessories may block communication.
- All images in the camera can be viewed from the connected smartphone when you choose [Yes] in step 3. To keep camera images private, so that they cannot be viewed from the smartphone, choose [No] in step 3.
- Once you have registered a smartphone, you can change privacy settings for it on the camera (2157).

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







- Connections require that a memory card be in the camera.
- You can also change the camera nickname on the screen in step 2 (
  134).
- Not all NFC-compatible smartphones have an N-Mark (1). For details, refer to the smartphone user manual.
- You can also send multiple images at once and change the image size before sending (\$\infty\$151).
- To disable NFC connections, choose MENU (□31) ► [¶4] tab
   [Wi-Fi Settings] ► [NFC] ► [Off].

#### Connecting via NFC When Camera Is in Playback Mode



- Press the [ ] button to turn the camera on
- Touch the smartphone with Camera Connect installed (☐134) against the camera's N-Mark (►1).
- Press the [▲][▼][♠] buttons to choose an image to send, and then press the [⊕] button. [√] is displayed.
- To cancel selection, press the [<sup>®</sup>] button again. [✓] is no longer displayed.
- Repeat this process to choose additional images.
- After you finish choosing images, press the [MFNU] button.
- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [♠] button.
- Press the [◀][▶] buttons to choose [Send], and then press the [♣] button.
- The images are now sent. The connection is ended automatically after the image is sent.



- If during connection a message on the camera requests you to enter the nickname, follow step 2 in "Sending Images to an NFC-Compatible Smartphone" (\$\sum\_134\$) to enter it.
- The camera does not keep a record of smartphones you connect to via NFC in Playback mode.
- You can preset images to transfer at your desired size (Q151).

# Sending to a Smartphone Assigned to the Button

Once you have connected to a smartphone initially by pressing the Dutton, you can simply press the Dutton after that to connect again for viewing and saving camera images on your connected device. These steps show how to use the camera as an access point, but you can also use an existing access point (D139).



#### 1 Install Camera Connect.

- For an iPhone or iPad, find Camera Connect in the App Store and download and install the app.
- For Android smartphones, find Camera Connect in Google Play and download and install the app.



Device Nickname

Enter a nickname for this camera

XXXXX

OK

DESTU Cancel

#### **2** Press the [] button.

Press the [] button.

 If the [Device Nickname] screen is displayed, press the [▲][▼] buttons or turn the [♣] dial to choose [OK], and then press the [♣] button. Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







Waiting to connect

Connect target device to this access point and start app

SSID: XXXX\_XXXXX\_XXXXX

Cancel Switch Network



 Press the [◀][▶] buttons or turn the [♣] dial to choose [☐], and then press the [♣] button.

• The camera's SSID is displayed.



4 Connect the smartphone to the network.

 In the smartphone's Wi-Fi setting menu, choose the SSID (network name) displayed on the camera to establish a connection.



#### 5 Start Camera Connect.

- Start Camera Connect on the smartphone.
- After the camera recognizes the smartphone, a device selection screen is displayed.



6 Choose the smartphone to connect to.

- Choose the smartphone (either by pressing the [▲][▼] buttons or by turning the [♣] dial), and then press the [♣] button.
- After a connection is established with the smartphone, the smartphone name is displayed on the camera. (This screen will close in about one minute.)



#### 7 Import images.

- Use the smartphone to import images from the camera to the smartphone.
- Use the smartphone to end the connection; the camera will automatically turn off



- Connections require that a memory card be in the camera.
- You can also change the camera nickname on the screen in step 2 (
  136).
- For better security, you can display a password on the screen in step 3 by accessing MENU (□31) and choosing [¶4] tab
   [Wi-Fi Settings] ► [Password] ► [On]. In this case, in the password field on the smartphone in step 4, enter the password displayed on the camera.
- One smartphone can be registered to the □ button. To assign
  a different one, first clear the current one in MENU (□31) ►
   □41 tab ► [Mobile Device Connect Button].
- Not all NFC-compatible smartphones have an N-Mark (1). For details, refer to the smartphone user manual.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix






## Adding a Smartphone Using the Wi-Fi Menu

These steps show how to use the camera as an access point, but you can also use an existing access point (\$\sumsymbol{Q}\$139).



#### Install Camera Connect.

- For an iPhone or iPad, find Camera Connect in the App Store and download and install the app.
- For Android smartphones, find Camera Connect in Google Play and download and install the app.

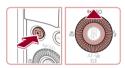

#### 2 Access the Wi-Fi menu.

- Press the [] button to turn the camera on.
- Press the [A] button.
- If the [Device Nickname] screen is displayed, choose [OK] (\$\sum\_136\$).



#### 3 Choose [\_].

 Press the [◀][▶] buttons or turn the [♠] dial to choose [☐], and then press the [♠] button.



#### 4 Choose [Add a Device].

 Press the [▲][▼] buttons or turn the [♣] dial to choose [Add a Device], and then press the [♣] button.







- The camera's SSID is displayed.
- Choose the smartphone to connect to, as described in steps 4 – 6 of "Sending to a Smartphone Assigned to the Button" (\$\overline{\omega}\$136).

#### 5 Adjust the privacy setting.

- Press the [◀][▶] buttons or turn the [♠] dial to choose [Yes], and then press the [♠] button.
- You can now use the smartphone to browse, import, or geotag images on the camera or shoot remotely.

#### 6 Send an image.

- Turn the [♠] dial to choose an image to send, press the [♠][▶] buttons to choose [Send this image], and then press the [♠] button.
- Image transfer will begin. The screen darkens during image transfer.
- [Transfer completed] is displayed after the image is sent, and the image transfer screen is displayed again.
- To end the connection, press the [MENU] button, choose [OK] on the confirmation screen (either press the [◀][▶] buttons or turn the [♣] dial), and then press the [♣] button. You can also use the smartphone to end the connection
- To add multiple smartphones, repeat the above procedure starting from step 1.

Before Use

Basic Guide

#### Advanced Guide

#### Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

#### Wi-Fi Functions

Setting Menu

Accessories

Appendix







- All images in the camera can be viewed from the connected smartphone when you choose [Yes] in step 5. To keep camera images private, so that they cannot be viewed from the smartphone, choose [No] in step 5.
- Once you have registered a smartphone, you can change privacy settings for it on the camera (Q157).



- . Connections require that a memory card be in the camera.
- Once you have connected to devices via the Wi-Fi menu, recent destinations will be listed first when you access the Wi-Fi menu. You can easily connect again by pressing the [♣] ▼] buttons to choose the device and then pressing the [♣] button. To add a new device, display the device selection screen by pressing the [♣] I ▶] buttons, and then configure the setting.
- If you prefer not to display recent target devices, choose MENU
   (□31) ► [¶4] tab ► [Wi-Fi Settings] ► [Target History] ►
   (Offi.

## **Using Another Access Point**

When connecting the camera to a smartphone with the [ ] button or through the Wi-Fi menu, you can also use an existing access point.

#### 1 Prepare for the connection.

- Access the [Waiting to connect] screen by either following steps 1 – 3 in "Sending to a Smartphone Assigned to the Button" (\$\sum 136\$) or steps 1 – 4 in "Adding a Smartphone Using the Wi-Fi Menu" (\$\sum 138\$).
- **2** Connect the smartphone to the access point.







- 3 Choose [Switch Network].
- Press the [◀][▶] buttons or turn the [♣] dial to choose [Switch Network], and then press the [♣] button.
- A list of detected access points will be displayed.
- 4 Connect to the access point and choose the smartphone.
- For WPS-compatible access points, connect to the access point and choose the smartphone as described in steps
   5 − 8 in "Using WPS-Compatible Access Points" (☐ 142).
- For non-WPS access points, follow steps 2 – 4 in "Connecting to Listed Access Points" (2144) to connect to the access point and choose the smartphone.

Before Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode /
Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





# 5 Configure the privacy settings and send images.

 Follow steps 5 – 6 in "Adding a Smartphone Using the Wi-Fi Menu" (1138) to configure the privacy settings and send images.

#### Previous Access Points

To reconnect to a previous access point automatically, follow step 3 in "Sending to a Smartphone Assigned to the Button" (\$\infty\$136) or step 4 in "Adding a Smartphone Using the Wi-Fi Menu" (\$\infty\$138).

- To use the camera as an access point, choose [Switch Network] on the screen displayed when you establish a connection, and then choose [Camera Access Point Mode].
- To reconnect to a previous access point, follow the procedure from step 5 in "Using Another Access Point" (\$\sumsymbol{\text{\$\subset\$}}\$139).
- To switch access points, choose [Switch Network] on the screen displayed when you establish a connection, and then follow the procedure in "Using Another Access Point" (2139) from step 4.

## Saving Images to a Computer

## Preparing to Register a Computer

#### **Checking Your Computer Environment**

The camera can connect via Wi-Fi to computers running the following operating systems. For detailed system requirements and compatibility information, including support in new operating systems, visit the Canon website.

- Windows 8/8.1
- Windows 7 SP1
- Mac OS X 10.9
- Mac OS X 10.8.2 or later



- Windows 7 Starter and Home Basic editions are not supported.
- Windows 7 N (European version) and KN (South Korean version) require a separate download and installation of Windows Media Feature Pack.

For details, check the following website. http://go.microsoft.com/fwlink/?LinkId=159730

#### Installing the Software

Windows 7 and Mac OS X 10.8 are used here for the sake of illustration.

#### Download the software.

- With a computer connected to the Internet, access http://www.canon.com/ icpd/.
- Access the site for your country or region.
- Download the software.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

Appendix





# Canon DIGITAL CAMERA Specimen Inform Lasy Institution Cons Production Cons Prod Const. Cons Prod Const. Experiment Const. Cons Prod Const. Co

#### 2 Begin the installation.

- Click [Easy Installation] and follow the on-screen instructions to complete the installation process.
- Installation may take some time, depending on computer performance and the Internet connection.
- Click [Finish] or [Restart] on the screen after installation



 Internet access is required, and any ISP account charges and access fees must be paid separately.



- To uninstall the software, follow these steps.
  - Windows: Select [Start] menu ► [All Programs] ► [Canon Utilities], and then choose the software for uninstallation.
  - Mac OS: In the [Canon Utilities] folder within the [Applications] folder, drag the folder of the software for uninstallation to the Trash, and then empty the Trash.

# Configuring the Computer for a Wi-Fi Connection (Windows Only)

On a computer running Windows, configure the following settings before connecting the camera to the computer wirelessly.



# Confirm that the computer is connected to an access point.

 For instructions on checking your network connection, refer to the computer user manual

#### 2 Configure the setting.

- Click in the following order: [Start] menu
   ▶ [All Programs] ▶ [Canon Utilities] ▶
   [CameraWindow] ▶ [Wi-Fi connection setup].
- In the application that opens, follow the on-screen instructions and configure the setting.



- The following Windows settings are configured when you run the utility in step 2.
- Turn on media streaming.
   This will enable the camera to see (find) the computer to access via Wi-Fi.
- Turn on network discovery.
- This will enable the computer to see (find) the camera.
- Turn on ICMP (Internet Control Message Protocol).
   This allows you to check the network connection status.
- Enable Universal Plug & Play (UPnP).
   This will enable network devices to detect each other automatically.
- Some security software may prevent you from completing the settings as described here. Check the settings of your security software.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

#### Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





## Saving Images to a Connected Computer

Connect to your access point via Wi-Fi as follows. Also refer to the access point user manual.

#### **Confirming Access Point Compatibility**

Confirm that the Wi-Fi router or base station conforms to the Wi-Fi standards in "Wi-Fi" (211).

Connection methods vary depending on whether the access point supports Wi-Fi Protected Setup (WPS, \(\subseteq 142\)) or not (\(\subseteq 144\)). For non-WPS access points, check the following information.

- Network name (SSID/ESSID)
   The SSID or ESSID for the access point you use. Also called the "access point name" or "network name".
- Network authentication / data encryption (encryption method / encryption mode)
   The method for encrypting data during wireless transmission. Check which security setting is used: WPA2-PSK (AES), WPA2-PSK (TKIP), WPA-PSK (AES), WPA-PSK (TKIP), WEP (open system authentication), or no security.
- Password (encryption key / network key)
   The key used when encrypting data during wireless transmission. Also called the "encryption key" or "network key".
- Key index (transmit key)
   The key set when WEP is used for network authentication / data encryption. Use "1" as the setting.




- If system administrator status is needed to adjust network settings, contact the system administrator for details.
- These settings are very important for network security. Exercise adequate caution when changing these settings.



- For information on WPS compatibility and for instructions on checking settings, refer to the access point user manual.
- A router is a device that creates a network (LAN) structure for connecting multiple computers. A router that contains an internal Wi-Fi function is called a "Wi-Fi router".
- This guide refers to all Wi-Fi routers and base stations as "access points".
- If you use MAC address filtering on your Wi-Fi network, be sure to add the camera's MAC address to your access point. You can check your camera's MAC address by choosing MENU (□31)
   ► [ 41 tab ► [Wi-Fi Settings] ► [Check MAC Address].

#### **Using WPS-Compatible Access Points**

WPS makes it easy to complete settings when connecting devices over Wi-Fi. You can use either Push Button Configuration Method or PIN Method for settings on a WPS supported device.

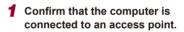

 For instructions on checking the connection, refer to the device and access point user manuals.





#### 2 Access the Wi-Fi menu.

- Press the [] button to turn the camera on.
- Press the [▲] button.
- If the [Device Nickname] screen is displayed, press the [▲][▼] buttons or turn the [♣] dial to choose [OK], and then press the [♣] button.

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







#### **3** Choose [□].

 Press the [▲][▼][◀][▶] buttons or turn the [♠] dial to choose [□], and then press the [♠] button.



#### 4 Choose [Add a Device].

 Press the [▲][▼] buttons or turn the [♣] dial to choose [Add a Device], and then press the [♣] button.



#### 5 Choose [WPS Connection].

 Press the [▲][▼] buttons or turn the [♣] dial to choose [WPS Connection], and then press the [♣] button.



#### 6 Choose [PBC Method].

 Press the [▲][▼] buttons or turn the [⊕] dial to choose [PBC Method], and then press the [⊕] button.



Push and hold the access point

Next

MENU 🗢

button, then proceed

WPS Connection

#### 7 Establish the connection.

- On the access point, hold down the WPS connection button for a few seconds.
- The camera connects to the access point and lists devices connected to it on the [Select a Device] screen.



#### 8 Choose the target device.

 Choose the target device name (either press the [▲][▼] buttons or turn the [♣] dial), and then press the [♣] button.



# 9 Install a driver (first Windows connection only).

 When this screen is displayed on the camera, click the Start menu on the computer, click [Control Panel], and then click [Add a device].




7 Hardware and Sound

- Double-click the connected camera icon.
- Driver installation will begin.
- After driver installation is complete, and the camera and computer connection is enabled, the AutoPlay screen will be displayed. Nothing will be displayed on the camera screen.



#### **10** Display CameraWindow.

- Windows: Access CameraWindow by clicking [Downloads Images From Canon Camera].
- Mac OS: CameraWindow is automatically displayed when a Wi-Fi connection is established between the camera and computer.

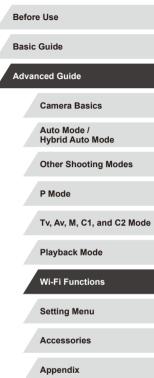





#### 11 Import images.

- Click [Import Images from Camera], and then click [Import Untransferred Images].
- Images are now saved to the Pictures folder on the computer, in separate folders named by date.
- Click [OK] in the screen that is displayed after image import is complete.
- Use Digital Photo Professional to view images you save to a computer. To view movies, use preinstalled or commonly available software compatible with movies recorded by the camera.



- Once you have connected to devices via the Wi-Fi menu, recent destinations will be listed first when you access the Wi-Fi menu. You can easily connect again by pressing the [♠][▼] buttons to choose the device and then pressing the [♠] button. To add a new device, display the device selection screen by pressing the [♠][▶] buttons, and then configure the setting.
- If you prefer not to display recent target devices, choose MENU
   (□31) ► [¶4] tab ► [Wi-Fi Settings] ► [Target History] ►
   [Offi.
- You can also change the camera nickname on the screen in step 2 (\(\subseteq\) 142).
- When the camera is connected to a computer, the camera screen is blank.
- Mac OS: If CameraWindow is not displayed, click the [CameraWindow] icon in the Dock.
- To disconnect from the camera, turn off the camera.
- If you chose [PIN Method] in step 6, a PIN code will be displayed on the screen. Be sure to set this code in the access point.
   Choose a device in the [Select a Device] screen. For further details, refer to the user manual included with your access point.

#### **Connecting to Listed Access Points**

#### View the listed access points.

 View the listed networks (access points) as described in steps 1 – 4 of "Using WPS-Compatible Access Points" (
142).



#### 2 Choose an access point.

 Press the [▲][▼] buttons or turn the [⊕] dial to choose a network (access point), and then press the [ℙ] button.




#### 3 Enter the access point password.

- Press the (a) button to access the keyboard, and then enter the password (32).
- Press the [▲][▼] buttons or turn the [♠] dial to choose [Next], and then press the [♠] button.



#### 4 Choose [Auto].

- Press the [▲][▼] buttons or turn the [⊕] dial to choose [Auto], and then press the [♠] button.
- To save images to a connected computer, follow the procedure from step 8 in "Using WPS-Compatible Access Points" ( 142).

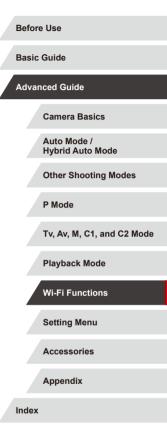





- To determine the access point password, check on the access point itself or refer to the user manual.
- Up to 16 access points will be displayed. If no access points are detected even after you choose [Refresh] in step 2 to update the list, choose [Manual Settings] in step 2 to complete access point settings manually. Follow on-screen instructions and enter an SSID, security settings, and a password.
- When you use an access point that you have already connected to for connecting to another device, [\*] is displayed for the password in step 3. To use the same password, choose [Next] (either press the [▲][▼] buttons or turn the [♣] dial) and press the [♣] button.

#### **Previous Access Points**

You can reconnect to any previous access points automatically by following step 4 in "Using WPS-Compatible Access Points" (1142).

- To connect to a device via an access point, confirm that the target device is already connected to the access point, and then follow the procedure from step 8 in "Using WPS-Compatible Access Points" (\$\sum\_142\$).
- To switch access points, choose [Switch Network] on the screen displayed when you establish a connection, and then either follow the procedure in "Using WPS-Compatible Access Points" (Q142) from step 5 or the procedure in "Connecting to Listed Access Points" (Q144) from step 2.

# Sending Images to a Registered Web Service

# Registering Web Services

Use a smartphone or computer to add to the camera Web services that you want to use.

- A smartphone or computer with a browser and Internet connection is required to complete camera settings for CANON iMAGE GATEWAY and other Web services.
- Check the CANON iMAGE GATEWAY website for details on browser (Microsoft Internet Explorer, etc.) requirements, including settings and version information
- For information on countries and regions where CANON iMAGE GATEWAY is available, visit the Canon website (http://www.canon.com/cig/).
- You must have an account with Web services other than CANON iMAGE GATEWAY if you desire to use them. For further details, check the websites for each Web service you want to register.
- Separate ISP connection and access point fees may be applicable.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### **Registering CANON iMAGE GATEWAY**

After linking the camera and CANON iMAGE GATEWAY, add CANON iMAGE GATEWAY as a destination Web service on the camera.




- 1 Log in to CANON iMAGE GATEWAY and access the camera link settings page.
  - From a computer or smartphone, access http://www.canon.com/cig/ to visit
     CANON iMAGE GATEWAY
  - Once the login screen is displayed, enter your user name and password to log in. If you do not have a CANON iMAGE GATEWAY account, follow the instructions to complete member registration (free of charge).



## 2 Choose the type of camera.

- On this camera model, [ is displayed in the Wi-Fi menu.
- Once you choose [ ], a page is displayed for entering the authentication code. On this page in step 7, you will enter the authentication code displayed on the camera after steps 3 – 6.

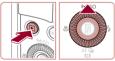



#### 3 Access the Wi-Fi menu.

- Press the [] button to turn the camera on.
- Press the [▲] button.
- If the [Device Nickname] screen is displayed, press the [▲][▼] buttons or turn the [♠] dial to choose [OK], and then press the [♠] button.











## 4 Choose [ ].

 Press the [▲][▼][♠] buttons or turn the [♠] dial to choose [♠], and then press the [♠] button.

## 5 Choose [Authenticate].


 Press the [◀][▶] buttons or turn the [♠] dial to choose [Authenticate], and then press the [♠] button.

# 6 Establish a connection with an access point.

- Connect to the access point as described in steps 5 – 7 in "Using WPS-Compatible Access Points" (\$\infty\$142) or in steps 2 – 4 in "Connecting to Listed Access Points" (\$\infty\$144).
- Once the camera is connected to CANON iMAGE GATEWAY via the access point, an authentication code is displayed.
- Keep this screen displayed until you are finished with step 7.

#### 7 Enter the authentication code.

- On the smartphone or computer, enter the authentication code displayed on the camera and go to the next step.
- A six-digit confirmation number is displayed.

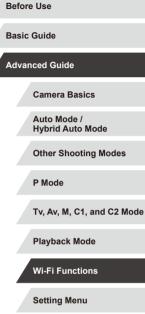



Appendix







#### R Check the confirmation number and complete the setup process.

- Check the confirmation number on the second screen in step 6 (displayed after vou pressed the [◀][▶] buttons or turned the [ dial to choose [OK], and then pressed the [@] button).
- Make sure the confirmation number on the camera matches the number on the smartphone or computer.
- Press the [◀][▶] buttons or turn the [♠] dial to choose [OK], and then press the (A) button.
- Complete the setup process on the smartphone or computer.



- [□] (□ 153) and CANON iMAGE
   GATEWAY are now added as destinations, and the [ ] icon changes to [63].
- A message is displayed on the smartphone or computer to indicate that this process is finished. You can add other Web services, as needed. In this case, follow the instructions from step 2 in "Registering Other Web Services"  $(\Box \Box 147).$



- Connections require that a memory card with saved images be in
- You can also change the camera nickname on the screen in step 3 (Q146).
- Once you have connected to devices via the Wi-Fi menu, recent destinations will be listed first when you access the menu. Press the [4][ >] buttons to access the device selection screen and then configure the setting.

#### **Registering Other Web Services**

You can also add Web services besides CANON iMAGE GATEWAY to the camera. Note that CANON iMAGE GATEWAY must be registered on the camera first (QQ 146).



#### 1 Access the Web service settings screen

Follow step 1 in "Registering CANON iMAGE GATEWAY" (1146) to log in to CANON iMAGE GATEWAY, and then access the Web service settings screen.



- 2 Configure the Web service you want to use.
- Follow the instructions displayed on the smartphone or computer to set up the Web service



## 3 Choose [ ].

- In Playback mode, press the [▲] button to access the Wi-Fi menu.
- Press the [▲][▼][◀][▶] buttons or turn the [ and then ] press the [ ] button.
- The Web service settings are now updated.



If any configured settings change, follow these steps again to update the camera settings.

Refore Use **Basic Guide** Advanced Guide Camera Basics Auto Mode / **Hybrid Auto Mode** Other Shooting Modes P Mode Tv. Av. M. C1. and C2 Mode Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





## Uploading Images to Web Services



a

**L** 



# 1 Access the Wi-Fi menu.

- Press the [] button to turn the camera on.
- Press the [▲] button.

#### 2 Choose the destination.

- Choose the icon of the Web service to connect to (either press the [▲][▼] buttons or turn the [♠] dial), and then press the [♠] button.
- If multiple recipients or sharing options are used with a Web service, choose the desired item on the [Select Recipient] screen (either press the [▲][▼] buttons or turn the [♣] dial), and then press the [♠] button.



#### 3 Send an image.

- Turn the (♣) dial to choose an image to send, press the [◄][▶] buttons to choose [Send this image], and then press the [♣) button.
- When uploading to YouTube, read the terms of service, choose [I Agree], and press the [
   ] button.
- Image transfer will begin. The screen darkens during image transfer.
- After the image is sent, [OK] is displayed.
   Press the (B) button to return to the playback screen.



- Connections require that a memory card with saved images be in the camera.
- You can also send multiple images at once, resize images, and add comments before sending (2151).
- To view images uploaded to CANON iMAGE GATEWAY on a smartphone, try the dedicated Canon Online Photo Album app.
   Download and install the Canon Online Photo Album app for iPhones or iPads from the App Store or for Android devices from Google Play.

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





# Printing Images Wirelessly from a Connected Printer

Connect the camera to a printer via Wi-Fi to print as follows.

These steps show how to use the camera as an access point, but you can also use an existing access point (\$\infty\$139).

#### 1 Access the Wi-Fi menu.

 Access the Wi-Fi menu as described in step 2 in "Adding a Smartphone Using the Wi-Fi Menu" (2138).



## 2 Choose [凸].

 Press the [▲][▼][◀][▶] buttons or turn the [♣] dial to choose [♣], and then press the [♣] button.



#### 3 Choose [Add a Device].

 Press the [▲][▼] buttons or turn the [⊕] dial to choose [Add a Device], and then press the [⊕] button.



• The camera's SSID is displayed.



#### 4 Connect the printer to the network.

 In the printer's Wi-Fi setting menu, choose the SSID (network name) displayed on the camera to establish a connection.



## 5 Choose the printer.

Choose the printer name (either press the [▲][▼] buttons or turn the [♠] dial), and then press the [♠] button.



#### 6 Choose an image to print.

- Press the [◀][▶] buttons or turn the [♣] dial to choose an image.
- Press the [ B ] button.
- Press the [▲][▼] buttons to choose [Print], and then press the [♣] button.
- For detailed printing instructions, see "Printing Images" ( 180).
- To end the connection, press the [▲] button, choose [OK] on the confirmation screen (either press the [◀][▶] buttons or turn the [♠] dial), and then press the [♣] button.



- Connections require that a memory card with saved images be in the camera.
- Once you have connected to devices via the Wi-Fi menu, recent destinations will be listed first when you access the Wi-Fi menu. You can easily connect again by pressing the [♠][♥] buttons to choose the device and then pressing the [∯] button. To add a new device, display the device selection screen by pressing the [◀][▶] buttons, and then configure the setting.
- If you prefer not to display recent target devices, choose MENU
   (□31) ► [¶4] tab ► [Wi-Fi Settings] ► [Target History] ►
   [Off].
- To use another access point, follow steps 3 4 in "Using Another Access Point" (☐139).

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





# **Sending Images to Another Camera**

Connect two cameras via Wi-Fi and send images between them as follows.

 Only Canon-brand cameras equipped with a Wi-Fi function can be connected to wirelessly. You cannot connect to a Canon-brand camera that does not have a Wi-Fi function, even if it supports Eye-Fi cards.

#### 1 Access the Wi-Fi menu.

 Access the Wi-Fi menu as described in step 2 in "Adding a Smartphone Using the Wi-Fi Menu" (2138).



## 2 Choose [

 Press the [▲][▼][◀][▶] buttons or turn the [♠] dial to choose [♠], and then press the [♠] button.



#### 3 Choose [Add a Device].

- Press the [▲][▼] buttons or turn the [♣] dial to choose [Add a Device], and then press the [♣] button.
- Follow steps 1 3 on the target camera too
- Camera connection information will be added when [Start connection on target camera] is displayed on both camera screens.



#### 4 Send an image.

- Turn the (♣) dial to choose an image to send, press the [◄][▶] buttons to choose [Send this image], and then press the [♣) button.
- Image transfer will begin. The screen darkens during image transfer.
- [Transfer completed] is displayed after the image is sent, and the image transfer screen is displayed again.
- To end the connection, press the [MENU] button, choose [OK] on the confirmation screen (either press the [◀][▶] buttons or turn the [♠] dial), and then press the [♠] button.



- Connections require that a memory card be in the camera.
- Once you have connected to devices via the Wi-Fi menu, recent destinations will be listed first when you access the Wi-Fi menu. You can easily connect again by pressing the [▲][▼] buttons to choose the device and then pressing the [∰] button. To add a new device, display the device selection screen by pressing the [◀] ▶] buttons, and then configure the setting.
- If you prefer not to display recent target devices, choose MENU
   (□31) ► [¶4] tab ► [Wi-Fi Settings] ► [Target History] ►
   [Offi.
- You can also send multiple images at once and change the image size before sending (\$\infty\$153).

Before Use

Basic Guide

#### Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





# Image Sending Options

You can choose multiple images to send at once and change the image recording pixel setting (size) before sending. Some Web services also enable you to annotate the images you send.

## **Sending Multiple Images**



#### 1 Choose [Select and send].

 On the image transfer screen, press the [◀][▶] buttons to choose [Select and send], and then press the [♣] button.



#### 2 Choose a selection method.

Press the [▲][▼] buttons or turn the [♣]
 dial to choose a selection method.

#### **Choosing Images Individually**

## 1 Choose [Select].

 Following step 2 in "Sending Multiple Images" (1151), choose [Select] and press the (11) button.



#### 2 Choose an image.

- Press the [▲][▼][◀][▶] buttons to choose an image to send, and then press the [⊕] button. [✓] is displayed.
- To cancel selection, press the [♠] button again. [✓] is no longer displayed.
- Repeat this process to choose additional images.
- After you finish choosing images, press the [MENU] button.
- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [ℍ] button.

## 3 Send the images.

 Press the [◀][▶] buttons or turn the [♠] dial to choose [Send], and then press the [♠] button.



 You can also choose images in step 2 by moving the zoom lever twice toward [Q] to access single-image display and then pressing the [◀][▶] buttons or turning the [♣] dial.

#### Selecting a Range

#### Choose [Select Range].

• Following step 2 in "Sending Multiple Images" (\$\sum\_151\$), choose [Select Range] and press the [\$\mathbb{R}\$] button.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





#### 2 Choose images.

- Follow steps 2 3 in "Selecting a Range" (
  117) to specify images.
- To include movies, press the
   [▲][▼][♠][▶] buttons to choose [Incl.

   Movies], and then press the [♠] button to mark the option as selected (√).
- Press the [▲][▼][◀][▶] buttons to choose [OK], and then press the [♠] button.

#### 3 Send the images.

 Press the [◀][▶] buttons or turn the [♠] dial to choose [Send], and then press the [♠] button.

#### **Sending Favorite Images**

Send only images tagged as favorites (Q121).

#### Choose [Favorite Images].

- Following step 2 in "Sending Multiple Images" (\$\bigsigma\$151), choose [Favorite Images] and press the [\$\bigsigma\$] button.
- An image selection screen for favorites is displayed. If you prefer not to include an image, choose the image and press the [ℯ] button to remove [√].
- After you finish choosing images, press the [MENU] button.
- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [ℍ] button.

## 2 Send the images.

 Press the [◀][▶] buttons or turn the [♠] dial to choose [Send], and then press the [♠] button.



In step 1, [Favorite Images] is not available unless you have tagged images as favorites.

# Notes on Sending Images

- Keep your fingers or other objects off the Wi-Fi antenna area (A). Covering this may decrease the speed of your image transfers
- Depending on the condition of the network you are using, it may take a long time to send movies. Be sure to keep an eye on the camera battery level.
- Web services may limit the number of images or length of movies you can send.
- For movies that you do not compress (Q129), a separate, compressed file is sent instead of the original file. Note that this may delay transmission, and the file cannot be sent unless there is enough space for it on the memory card.
- When sending movies to smartphones, note that the supported image quality varies depending on the smartphone. For details, refer to the smartphone user manual.
- On the screen, wireless signal strength is indicated by the following icons.
   [Y.I] high, [Y.I] medium. [Y.I] low. [Y] weak
- Sending images to Web services will take less time when resending images you have already sent that are still on the CANON iMAGE GATEWAY server.

**Before Use** 

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





# Choosing the Number of Recording Pixels (Image Size)

On the image transfer screen, choose  $[\ \ \ ]$  by pressing the  $[\ \ \ ]$  buttons, and then press the  $[\ \ \ ]$  button. On the screen displayed, choose the recording pixel setting (image size) by pressing the  $[\ \ \ \ ]$  buttons, and then press the  $[\ \ \ \ ]$  button.

- To send images at original size, select [No] as the resizing option.
- Choosing [M2] will resize images that are larger than the selected size before sending.
- Movies cannot be resized.



Image size can also be configured in MENU (□31) ► [¶4] tab
 [Wi-Fi Settings] ► [Resize for Sending].

# Adding Comments

Using the camera, you can add comments to images that you send to e-mail addresses, social networking services, etc. The number of characters and symbols that can be entered may differ depending on the Web service.



- 1 Access the screen for adding comments.
- On the image transfer screen, choose
   [□] by pressing the [▲][▼][◀][▶] buttons, and then press the [⑥] button.
- 2 Add a comment (Q 32).
- 3 Send the image.



- When a comment is not entered, the comment set in CANON iMAGE GATEWAY is automatically sent.
- You can also annotate multiple images before sending them. The same comment is added to all images sent together.

# Sending Images Automatically (Image Sync)

Images on the memory card that have not been transferred already can be sent to a computer or Web services via CANON iMAGE GATEWAY. Note that images cannot be sent only to Web services.

## Initial Preparations

#### **Preparing the Camera**

Register [ ] as the destination. You can also assign [ ] to the [ ] button, so that you can simply press the [ ] button to send any unsent images on the memory card to a computer via CANON iMAGE GATEWAY.



## 1 Add [🖳] as a destination.

- Add as a destination, as described in "Registering CANON iMAGE GATEWAY" ( 146).
- To include a Web service as the destination, log in to CANON iMAGE GATEWAY (☐ 145), select your camera model, access the Web service settings screen, and choose the destination Web service in Image Sync settings. For details, refer to CANON iMAGE GATEWAY Help.
- 2 Choose the type of images to send (only when sending movies with images).
- Press the [▲][▼] buttons to choose [Image Sync], and then press the [▲][▼] buttons to choose [Stills/Movies].

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





# 3 Assign [♣] to the ♠ button (only when sending images by pressing the ♠ button).

- Clear the button setting if a smartphone is already assigned to the button (136).
- Press the ☐ button to access the mobile connection screen, choose ☐ (either press the [◄][▶] buttons or turn the [♣] dial), and then press the [♣] button.

#### **Preparing the Computer**

Install and configure the software on the destination computer.



#### 1 Install the software.

 Install the software on a computer connected to the Internet (A140).

## Register the camera.

- Windows: In the taskbar, right-click [-], and then click [Add new camera].
- Mac OS: In the menu bar, click [], and then click [Add new camera].
- A list of cameras linked to CANON iMAGE GATEWAY is displayed. Choose the camera from which images are to be sent
- Once the camera is registered and the computer is ready to receive images, the icon changes to [A].

## Sending Images

Images sent from the camera are automatically saved to the computer. If the computer that you intend to send images to is turned off, the images will be stored temporarily on the CANON iMAGE GATEWAY server. Stored images are regularly erased, so make sure to turn on the computer and save the images.

## Send images.

- If you have already assigned [1] to the
   button, press the button.
- If you have not assigned the button this way, choose [1] as described in steps 1 2 in "Uploading Images to Web Services" (1148).
- Sent images are labeled with a [1] icon.

#### 2 Save the images to the computer.

- Images are automatically saved to the computer when you turn it on.
- Images are automatically sent to Web services from the CANON iMAGE GATEWAY server, even if the computer is off.



 When sending images, you should use a fully charged battery pack or an AC adapter kit (sold separately, A168).



- Even if images were imported to the computer through a different method, any images not sent to the computer via CANON iMAGE GATEWAY will be sent to the computer.
- Sending is faster when the destination is a computer on the same network as the camera, because images are sent via the access point instead of CANON iMAGE GATEWAY. Note that images stored on the computer are sent to CANON iMAGE GATEWAY, so the computer must be connected to the Internet.

Before Use

Basic Guide

#### Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





#### Viewing Images Sent via Image Sync on a Smartphone

By installing the Canon Online Photo Album (Canon OPA) app, you can use your smartphone to view and download images sent via Image Sync while they are stored temporarily on the CANON iMAGE GATEWAY server.

In preparation, enable smartphone access as follows.

- Make sure you have completed the settings described in "Preparing the Computer" (\$\infty\$154).
- Download and install the Canon Online Photo Album app for iPhones or iPads from the App Store or for Android devices from Google Play.
- Log in to CANON iMAGE GATEWAY (\$\sum145\$), select your camera model, access the Web service settings screen, and enable viewing and downloading from a smartphone in the Image Sync settings. For details, refer to CANON iMAGE GATEWAY Help.



- Once images stored temporarily on the CANON iMAGE GATEWAY server have been deleted, they can no longer be viewed.
- Images you sent before enabling smartphone viewing and downloading in Image Sync settings cannot be accessed this way.



 For Canon Online Photo Album instructions, refer to Canon Online Photo Album Help.

# Using a Smartphone to View Camera Images and Control the Camera

You can do the following with the dedicated smartphone app Camera Connect.

- Browse images on the camera and save them to the smartphone
- Geotag images on the camera (Q 155)



 Privacy settings must be configured in advance to allow image viewing on the smartphone (\$\Pma\$136, \$\Pma\$138, \$\Pma\$157).

# **Geotagging Images on the Camera**

GPS data recorded on a smartphone using the dedicated Camera Connect application can be added to images on the camera. Images are tagged with information including the latitude, longitude, and elevation.



- Before shooting, make sure the date and time and your home time zone are set correctly, as described in "Setting the Date and Time" (21). Also follow the steps in "World Clock" (162) to specify any shooting destinations in other time zones.
- Others may be able to locate or identify you by using location data in your geotagged still images or movies. Be careful when sharing these images with others, as when posting images online where many others can view them.

**Before Use** 

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



## Shooting Remotely

As you check a shooting screen on your smartphone, you can use it to shoot remotely.

#### 1 Choose a shooting mode.

Turn the mode dial to choose [P], [Tv], [Av], [M], [C1], or [C2] as the mode.

#### 2 Secure the camera.

- Once remote shooting begins, the camera lens will come out. Lens motion from zooming may also move the camera out of position. Keep the camera still by mounting it on a tripod or taking other measures.
- 3 Connect the camera and smartphone (1136, 1138).
  - In the privacy settings, choose [Yes].

#### 4 Choose remote shooting.

- In Camera Connect on the smartphone, choose remote shooting.
- The camera lens will come out. Do not press near the lens, and make sure no objects will obstruct it.
- Once the camera is ready for remote shooting, a live image from the camera will be displayed on the smartphone.
- At this time, a message is displayed on the camera, and all operations except pressing the ON/OFF button are disabled.

#### 5 Shoot.

Use the smartphone to shoot.



- [P] mode is used for shooting in modes other than [P], [Tv], [Av], [M], [C1], and [C2]. However, some Quick Set and MENU settings you have configured in advance may be changed automatically.
- Movie shooting is not available.



- Any jerky subject motion shown on the smartphone due to the connection environment will not affect recorded images.
- Captured images are not transferred to the smartphone. Use the smartphone to browse and import images from the camera.

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

#### Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





# **Editing or Erasing Wi-Fi Settings**

Edit or erase Wi-Fi settings as follows.

## Editing Connection Information



- 1 Access the Wi-Fi menu and choose a device to edit.
- Press the [] button to turn the camera on.
- Press the [A] button.
- Press the [▲][▼][◀][▶] buttons or turn the [♠] dial to choose the icon of a device to edit, and then press the [♣] button.



#### 2 Choose [Edit a Device].

 Press the [▲][▼] buttons or turn the [⊕] dial to choose [Edit a Device], and then press the [ℙ] button.



#### 3 Choose the device to edit.

- Press the [▲][▼] buttons or turn the [\*] dial to choose the device to edit, and then press the [\*] button.
- Choose the item to edit.
  - Press the [▲][▼] buttons or turn the [⊕] dial to choose the item to edit, and then press the [⊕] button.
  - The items you can change depend on the device or service.

Configurable Items		Connection						
			旦	Ф	Web Services			
[Change Device Nickname] (\(\homega\) 157)	0	0	0	0	-			
[View Settings] (Q136)	_	0	_	_	-			
[Erase Connection Info] (Q157)	0	0	0	0	_			

O : Configurable — : Not configurable

#### **Changing a Device Nickname**

You can change the device nickname (display name) that is displayed on the camera



- Following step 4 in "Editing Connection Information" (\$\sum 157\$), choose [Change Device Nickname] and press the [\$\tilde{\mathbb{B}}\$] button.

## **Erasing Connection Information**

Erase connection information (information about devices that you have connected to) as follows.



- Following step 4 in "Editing Connection Information" (\$\sum 157\$), choose [Erase Connection Info] and press the [\$\mathbb{B}\$] button.
- After [Erase?] is displayed, press the [◀][▶] buttons or turn the [♣] dial to choose [OK], and then press the [♣] button.
- The connection information will be erased.

Before Use
Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





#### **Changing the Camera Nickname**

Change the camera nickname (displayed on connected devices) as desired.



### 1 Choose [Wi-Fi Settings].



## 2 Choose [Change Device Nickname].

 Press the [▲][▼] buttons or turn the [♣] dial to choose [Change Device Nickname], and then press the [♣] button.



#### 3 Change the nickname.

 Press the (\*\*) button to access the keyboard (\*\*)32), and then enter a nickname.



- A message is displayed if the nickname you enter begins with a symbol or space. Press the [a] button and enter a different nickname.
- You can also change the nickname from the [Device Nickname] screen displayed when you first use Wi-Fi. In this case, select the text box, press the [\*\*] button to access the keyboard, and then enter a new nickname.

## Returning the Wi-Fi Settings to Default

Return the Wi-Fi settings to default if you transfer ownership of the camera to another person, or dispose of it.

Resetting the Wi-Fi settings will also clear all Web service settings. Be sure that you want to reset all Wi-Fi settings before using this option.



## 1 Choose [Wi-Fi Settings].



## 2 Choose [Reset Settings].

- Press the [▲][▼] buttons or turn the [♠] dial to choose [Reset Settings], and then press the [♠] button.
- 3 Restore the default settings.
- Press the [◀][▶] buttons or turn the [♠] dial to choose [OK], and then press the [♠] button.
- The Wi-Fi settings are now reset.



To reset other settings (aside from Wi-Fi) to defaults, choose [Reset All] on the [♥4] tab (□165).

Before Use **Basic Guide** Advanced Guide **Camera Basics** Auto Mode / **Hybrid Auto Mode** Other Shooting Modes P Mode Tv. Av. M. C1. and C2 Mode Playback Mode Wi-Fi Functions **Setting Menu** 

Accessories

Appendix



# **Setting Menu**

Customize or adjust basic camera functions for greater convenience

# Adjusting Basic Camera Functions

MENU ( $\square$ 31) settings on the [ $\P$ 1], [ $\P$ 2], [ $\P$ 3], and [ $\P$ 4] tabs can be configured. Customize commonly used functions as desired, for greater convenience.

# Date-Based Image Storage

Instead of saving images in folders created each month, you can have the camera create folders each day you shoot to store shots taken that day.



- Images will now be saved in folders created on the shooting date.

# File Numbering

Your shots are automatically numbered in sequential order (0001 - 9999) and saved in folders that store up to 2,000 images each. You can change how the camera assigns file numbers.



Images are numbered consecutively (until the 9999th shot is taken/saved) even if you switch memory cards.
Image numbering is reset to 0001 if you switch memory cards, or when a new folder is created.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







 Regardless of the option selected in this setting, shots may be numbered consecutively after the last number of existing images on newly inserted memory cards. To start saving shots from 0001, use an empty (or formatted, \$\sum\_{160}\$) memory card.

# Formatting Memory Cards

Before using a new memory card or a card formatted in another device, you should format the card with this camera.

Formatting erases all data on a memory card. Before formatting, copy images on the memory card to a computer, or take other steps to back them up.

## 1 Access the [Format] screen.



## 2 Choose [OK].

- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [ℍ] button.
- The memory card is now formatted.



Formatting or erasing data on a memory card only changes file
management information on the card and does not erase the data
completely. When transferring or disposing of memory cards,
take steps to protect personal information if necessary, as by
physically destroying cards.



 The total card capacity indicated on the formatting screen may be less than the advertised capacity.

#### **Low-Level Formatting**

Perform low-level formatting in the following cases: [Memory card error] is displayed, the camera is not working correctly, card image reading/writing is slower, continuous shooting is slower, or movie recording suddenly stops. Low-level formatting erases all data on a memory card. Before low-level formatting, copy images on the memory card to a computer, or take other steps to back them up.



- On the screen in step 2 of "Formatting Memory Cards" (☐160), press the [DISP] button to choose [Low Level Format]. A [✓] icon is displayed.
- Follow step 2 in "Formatting Memory Cards" (2160) to continue with the formatting process.



- Low-level formatting takes longer than "Formatting Memory Cards" (\(\subseteq\) 160), because data is erased from all storage regions of the memory card.
- You can cancel low-level formatting in progress by choosing [Stop]. In this case, all data will be erased, but the memory card can be used normally.

## Changing the Video System

Set the video system of any television used for display. This setting determines the image quality (frame rate) available for movies.



**Before Use** 

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





#### **Electronic Level Calibration**

Calibrate the electronic level if it seems ineffective in helping you level the camera.

For greater calibration accuracy, display grid lines (\$\infty\$102) to help you level the camera in advance

#### Make sure the camera is level.

 Place the camera on a flat surface, such as a table.



#### 2 Calibrate the electronic level.

- Choose [Electronic Level] on the [♥1] tab. and then press the [ ] button.
- Choose [Calibrate] and press the ( button. A confirmation message is displayed.
- Choose [OK], and then press the [@] button.

#### Resetting the Electronic Level

Restore the electronic level to its original state as follows. Note that this is not possible unless you have calibrated the electronic level.



- Choose [Electronic Level] on the [\$\psi\$1] tab. and then press the [ B ] button.
- Choose [Reset], and then press the [@] button.
- Choose [OK], and then press the [@] button

## **Switching the Color of Screen Information**

► Still Images ► Movies



Information displayed on the screen and menus can be changed to a color suitable for shooting under low-light conditions. Enabling this setting is useful in modes such as [12] (170).



 Choose [Night Display] on the [♥2] tab, and then choose [On] (231).

# **Using Eco Mode**

This function allows you to conserve battery power in Shooting mode. When the camera is not in use, the screen quickly darkens to reduce battery consumption.



#### Configure the setting.

- then choose [On].
- [F(O)] is now shown on the shooting screen (1193).
- The screen darkens when the camera is not used for approximately two seconds: approximately ten seconds after darkening, the screen turns off. The camera turns off after approximately three minutes of inactivity.

#### Shoot.

To activate the screen and prepare for shooting when the screen is off but the lens is still out, press the shutter button halfway.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



## Power-Saving Adjustment

Adjust the timing of automatic camera and screen deactivation (Auto Power Down and Display Off, respectively) as needed (27).



- Choose an item, press the [⊕] button, and then press the [▲][▼] buttons or turn the [⊕] dial to configure the setting.



 To conserve battery power, you should normally choose [On] for [Auto Power Down] and [1 min.] or less for [Display Off].



- The [Display Off] setting is applied even if you set [Auto Power Down] to [Off].
- These power-saving functions are not available when you have set Eco mode (\(\sum\_{161}\)) to [On].

## **Screen Brightness**

Adjust screen brightness as follows.



 Choose [♠2] tab ► [LCD Brightness], press the [♣] button, and then press the [♠][▶] buttons or turn the [♠] dial to adjust the brightness.



For maximum brightness, press and hold the [DISP] button for at least one second when the shooting screen is displayed or when in single-image display. (This will override the [LCD Brightness] setting on the [¶2] tab.) To restore the original brightness, press and hold the [DISP] button again for at least one second or restart the camera.

#### World Clock

To ensure that your shots will have the correct local date and time when you travel abroad, simply register the destination in advance and switch to that time zone. This convenient feature eliminates the need to change the Date/Time setting manually.

Before using the world clock, be sure to set the date and time and your home time zone, as described in "Setting the Date and Time" (21).



#### Specify your destination.

- Press the [▲][▼] buttons or turn the [♣] dial to choose [⋠ World], and then press the [♣] button.
- Press the [◀][▶] buttons to choose the destination.
- To set daylight saving time (1 hour ahead), choose [※] by pressing the [▲][▼] buttons or turning the [※] dial, and then choose [※] by pressing the [﴿][▶] buttons.
- Press the [ B ] button.



#### 2 Switch to the destination time zone.

- Press the [♠][▼] buttons or turn the [♠] dial to choose [⊀ World], and then press the [MENU] button.
- [⋠] is now shown on the shooting screen (☐193).



Adjusting the date or time while in [★] mode (□21) will automatically update your [♣ Home] time and date.







## Changing the Date and Time

Adjust the date and time as follows.



- Press the [◀][▶] buttons to choose an option, and then adjust the setting, either by pressing the [▲][▼] buttons or turning the [♣] dial.

## Lens Retraction Timing

The lens is normally retracted for safety about one minute after you press the  $[\begin{tabular}{l} \blacksquare\end{tabular}]$  button in Shooting mode  $(\begin{tabular}{l} \square\end{tabular}26)$ . To have the lens retracted immediately after you press the  $[\begin{tabular}{l} \blacksquare\end{tabular}]$  button, set the retraction timing to  $[0\ sec.]$ .



 Choose [Lens Retraction] on the [♥2] tab, and then choose [0 sec.].

## Display Language

Change the display language as needed.




- Choose [Language ☒] on the [¥3] tab, and then press the [☒] button.
- Press the [▲][▼][◀][▶] buttons or turn the [♣] dial to choose a language, and then press the [♣] button.



 You can also access the [Language] screen in Playback mode by pressing and holding the [ button and immediately pressing the [MENU] button.

# Silencing Camera Operations

Silence camera sounds and movies as follows.

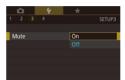



- Operation can also be silenced by holding down the [DISP] button as you turn the camera on.
- Sound is not played during movies (□106) if you mute camera sounds. To restore sound during movies, press the [▲] button or drag up across the screen. Adjust volume as needed by pressing the [▲][▼] buttons or by dragging up or down quickly.

# Adjusting the Volume

Adjust the volume of individual camera sounds as follows.



- Choose an item, and then press the
   [◀][▶] buttons to adjust the volume.

**Before Use** 

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





## Customizing Sounds

Customize camera operating sounds as follows.



- Choose an item, and then press the [▲][▼] buttons to change the sound.



The shutter sound in digest movies recorded in [ ] mode ( ) cannot be changed.

## Start-Up Screen

Customize the start-up screen shown after you turn the camera on as follows.



- Choose [Start-up Image] on the [

  ¶

  1] tab, and then press the [

  ¶

  ] button.
- Press the [◀][▶] buttons or turn the [♠] dial to choose an option.

## Hiding Hints and Tips

Hints and tips are normally shown when you choose Quick Set menu (230) items. If you prefer, you can deactivate this information.



## Adjusting the Touch-Screen Panel

Sensitivity of the touch-screen panel can be increased to respond to a lighter touch, or you can disable touch control.



- Choose [ 4] tab ► [Touch Operation], and then choose the desired option.
- To increase touch-screen panel sensitivity, choose [Sensitive], and to disable touch control, choose [Disable].

# Metric / Non-Metric Display

Change the unit of measurement shown in the zoom bar (\$\infty\$35), the MF indicator (\$\infty\$86), and elsewhere from m/cm to ft/in as needed.



# **Checking Certification Logos**

Some logos for certification requirements met by the camera can be viewed on the screen. Other certification logos are printed in this guide, on the camera packaging, or on the camera body.



 Choose [Certification Logo Display] on the [4] tab, and then press the [3] button. Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



# Setting Copyright Information to Record in Images

To record the author's name and copyright details in images, set this information beforehand as follows.



- Press the [▲][▼] buttons or turn the [♠] dial to choose [Enter Author's Name] or [Enter Copyright Details]. Press the [♠] button to access the keyboard, and enter the name (△32).
- Press the [MENU] button. When [Accept changes?] is displayed, choose [Yes] (either press the [◄][▶] buttons or turn the [♣] dial), and then press the [♣] button.
- The information set here will now be recorded in images.



 To check the information entered, choose [Display Copyright Info] on the screen above, and then press the ( ) button.

#### **Deleting All Copyright Information**

You can delete both the author's name and copyright details at the same time as follows.



- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [♠] button.



The copyright info already recorded in images will not be deleted.


# Adjusting Other Settings

The following settings can also be adjusted.

- • 「
   • 41 tab setting 「Wi-Fi Settings」 (□ 133)

# Restoring Default Camera Settings

If you accidentally change a setting, you can restore default camera settings.

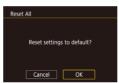

- 1 Access the [Reset All] screen.
- 2 Restore default settings.
- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [ὧ] button.
- Default settings are now restored.



- The following functions are not restored to default settings.
- Information registered using Face ID (Q48)
- [♥1] tab setting [Video system] (□160)
- [♥2] tab settings [Time Zone] (□162), [Date/Time] (□163), and [♥3] tab setting [Language [□] (□163)
- Custom white balance data you have recorded (Q84)
- Shooting mode chosen in [SCN] (\$\times61\$) and [\$\tilde{\Q}\$] (\$\tilde{\Lambda}\$62) modes
- Exposure compensation (Q79) setting
- Movie mode (QQ74)
- Wi-Fi settings (QQ 133)
- Calibrated value for the electronic level (Q161)
- Copyright information (Q 165)

**Before Use** 

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



# **Accessories**

Enjoy the camera in more ways with optional Canon accessories and other compatible accessories sold separately

#### Use of genuine Canon accessories is recommended.


This product is designed to achieve excellent performance when used with genuine Canon accessories.

Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Before Use **Basic Guide** Advanced Guide Camera Basics Auto Mode / **Hybrid Auto Mode** Other Shooting Modes P Mode Tv, Av, M, C1, and C2 Mode Playback Mode Wi-Fi Functions Setting Menu Accessories **Appendix** Index





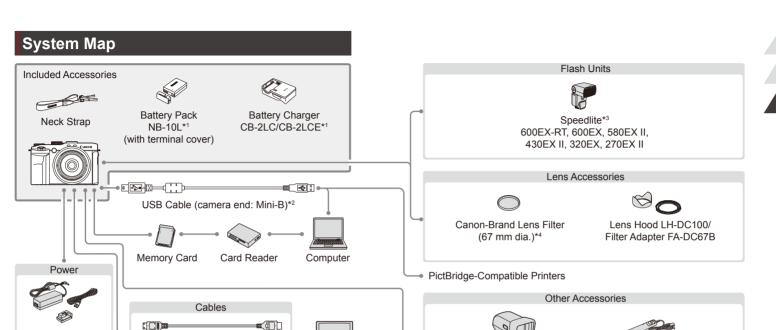

TV/Video

System

\*1 Also available for purchase separately.

AC Adapter Kit

ACK-DC80

\*2 A genuine Canon accessory is also available (Interface Cable IFC-400PCU).

HDMI Cable HTC-100

- \*3 The following accessories are also supported: Speedlite 580EX, 430EX, 270EX, and 220EX, Speedlite Transmitter ST-E2, ST-E3-RT, Speedlite Bracket SB-E2, and Off-Camera Shoe Cord OC-E3.
- \*4 Requires Filter Adapter FA-DC67B.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 

Index

Remote Switch

RS-60E3

Electronic Viewfinder


EVF-DC1



# **Optional Accessories**

The following camera accessories are sold separately. Note that availability varies by area, and some accessories may no longer be available.

## Power Supplies

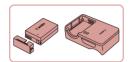


#### **Battery Pack NB-10L**

Rechargeable lithium-ion battery

#### Battery Charger CB-2LC/CB-2LCE

Charger for Battery Pack NB-10L

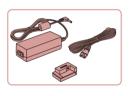

#### AC Adapter Kit ACK-DC80

 For powering the camera using household power. Recommended when using the camera over extended periods, or when connecting the camera to a printer or computer. Cannot be used to charge the battery pack in the camera.



- The battery charger and AC adapter kit can be used in areas with 100 – 240 V AC power (50/60 Hz).
- For power outlets in a different format, use a commercially available adapter for the plug. Never use an electrical transformer designed for traveling, which may damage the battery pack.

#### **Flash Units**



#### Speedlite 600EX-RT/600EX/ 580EX II/430EX II/320EX/270EX II

 Shoe-mounted flash unit that enables many styles of flash photography.
 Speedlite 580EX, 430EX, 270EX, and 220EX are also supported.



#### Speedlite Bracket SB-E2

 Prevents unnatural shadows next to subjects during vertical shooting. Includes Off-Camera Shoe Cord OC-E3.



#### Speedlite Transmitter ST-E2, ST-E3-RT


 Enables wireless control of slave Speedlite flash units (except Speedlite 220EX/270EX).

#### Other Accessories



#### Interface Cable IFC-400PCU

 For connecting the camera to a computer or printer.

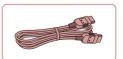

#### HDMI Cable HTC-100

 For connecting the camera to an HDMI input of a high-definition TV. Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







#### Remote Switch RS-60F3

 Enables remote shutter button operation (pressing the button halfway or all the wav down).



#### Lens Hood LH-DC100/Filter Adapter FA-DC67B

- Prevents extraneous light outside the angle of view from entering the lens and causing flares or ghosting, which reduce image guality.
- Adapter required when mounting a 67 mm filter.

#### Canon Lens Filter (67 mm dia.)

 Protects the lens and enables a variety of shooting effects.

## **Printers**



#### Canon-Brand PictBridge-Compatible **Printers**

 Even without using a computer, you can print images by connecting the camera directly to a printer.

For details, visit your nearest Canon retailer

# **Using Optional Accessories**

Still Images Movies



Advanced Guide

Before Use

**Basic Guide** 


Playback on a TV

► Still Images ► Movies

Connecting the camera to an HDTV with the HDMI Cable HTC-100 (sold separately) enables you to view your shots on the larger screen of the TV. Movies shot at an image quality of [FHD 59.94P], [FHD 29.97P] [#FHD 23.98P], [#HD 29.97P], [#FHD 50.00P], [#FHD 25.00P], or [#HD 25.00P] can be viewed in high definition.


For details on connection or how to switch inputs, refer to the TV manual.

Make sure the camera and TV are

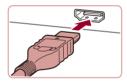

#### **2** Connect the camera to the TV.

On the TV, insert the cable plug fully into the HDMI input as shown.

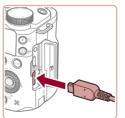

On the camera, open the terminal cover and insert the cable plug fully into the camera terminal.

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





#### 3 Turn the TV on and switch to external input.

 Switch the TV input to the external input you connected the cable to in step 2.



#### Turn the camera on.

- Press the [ ] button to turn the camera
- Images from the camera are now displayed on the TV. (Nothing is displayed on the camera screen.)
- When finished, turn off the camera and TV before disconnecting the cable.



Touch-screen operations are not supported while the camera is connected to a television.



- Some information may not be displayed when viewing images on a TV ( 194).
- Camera operating sounds are not played while the camera is connected to an HDTV.
- When the camera and TV are connected, you can also shoot while previewing shots on the larger screen of the TV. To shoot, follow the same steps as when using the camera screen. However, AF-Point Zoom (\$\infty\$55), MF-Point Zoom (\$\infty\$86), MF Peaking (\$\infty\$88) and Night Display (\$\infty\$161) are not available

## **Powering the Camera with Household Power**

► Still Images ► Movies




Powering the camera with AC Adapter Kit ACK-DC80 (sold separately) eliminates the need to monitor the remaining battery level.

Make sure the camera is off.



2 Open the cover.

Follow step 1 in "Inserting the Battery Pack and Your Memory Card" (20) to open the memory card/battery cover. and then open the coupler cable port cover as shown.

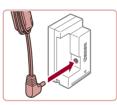

Connect the adapter to the coupler.

• Insert the adapter plug fully into the coupler.



4 Insert the coupler.

• Insert the coupler as shown until it locks into place.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 








#### 5 Close the cover.

Lower the cover (1) and hold it down as you slide the switch, until it clicks into the closed position (2).

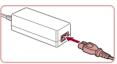

#### 6 Connect the power cord.

- Insert one end of the power cord into the compact power adapter, and then plug the other end into a power outlet.
- Turn the camera on and use it as desired.
- When finished, turn the camera off and unplug the power cord from the outlet.



- Do not disconnect the adapter or unplug the power cord while the camera is still on. This may erase your shots or damage the camera.
- Do not attach the adapter or adapter cord to other objects. Doing so could result in malfunction or damage to the product.

## **Using Lens Filters (Sold Separately)**

► Still Images ► Movies




Attaching a lens filter to the camera protects the lens and allows you to shoot with various effects. To attach a lens filter, you will need Filter Adapter FA-DC67B, which is included with Lens Hood LH-DC100 (sold separately).



#### Attach the filter adapter.

- Make sure the camera is off
- Align the notches on the camera and the filter adapter and turn the adapter in the direction of the arrow until locked.
- To remove the filter adapter, turn it in the opposite direction.

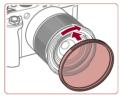

#### Attach a filter.

- Turn the filter in the direction of the arrow to attach it to the camera
- Make sure not to attach the filter too tightly. Doing so could prevent removal of the filter and damage the camera.



- We recommend the use of genuine Canon filters (67 mm dia.).
- When not using auto focus to shoot, set the manual focus option [Safety MF] to [On].
- If you use the built-in flash with the filter adapter attached, portions of the image may appear darker.
- When using the filter adapter, be sure to use only one filter at a time. Attaching multiple filters, or accessories such as a heavy lens, may cause the attachments to fall off and become damaged.
- Do not grip the filter adapter tightly.
- Remove the filter adapter when not using a filter or a hood.

Refore Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

#### Accessories

**Appendix** 






## **Using a Lens Hood (Sold Separately)**

Still Images Movies




For wide-angle shots of backlit subjects without using the flash, attach optional Lens Hood LH-DC100/Filter Adapter FA-DC67B to prevent light outside the angle of view from entering the lens. To attach a hood, you will need Filter Adapter FA-DC67B, which is included with the lens hood.

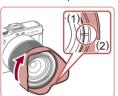


Make sure the camera is off.

- Attach the filter adapter as described in step 1 of "Using Lens Filters (Sold Separately)" (Q171).
- Align the lens hood mark (2) with the filter adapter mark (1), and turn the lens hood in the direction of the arrow until it locks in place.

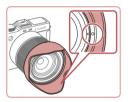

 To remove the hood, hold down the hood release button (3) and turn the hood in the opposite direction.

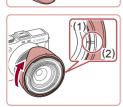

 To attach the lens hood inverted (as shown) when the hood is not used, align the lens hood mark (2) with the filter adapter mark (1), and turn the lens hood in the direction of the arrow until it locks in place.



Vignetting may occur if you use the built-in flash when the lens hood is attached.

# **Using a Remote Switch (Sold Separately)**

► Still Images ► Movies



An optional Remote Switch RS-60E3 can be used to avoid camera shake that may otherwise occur when pressing the shutter button directly. This optional accessory is convenient when shooting at slow shutter speeds.



1 Connect the remote switch.

- Make sure the camera is off
- Open the terminal cover and insert the remote switch plug.



2 Shoot.

To shoot, press the release button on the remote switch.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





## **Using the Hot Shoe**

Still Images Movies



Use the hot shoe to attach an optional electronic viewfinder or external flash.



#### Remove the hot shoe cap.

- Pull off the cap as shown.
- To avoid losing the cap after removal, store it in the viewfinder or flash case.



#### 2 Attaching the Hot Shoe Cap

- After removing a viewfinder or flash, reattach the hot shoe cap to protect the hot shoe.
- Insert the cap as shown.



Prevent the built-in flash from rising when you attach accessories other than an electronic viewfinder to the hot shoe. Otherwise, the flash may strike the accessory. Note that the built-in flash will not fire.



To avoid contact between the screen and any viewfinder or flash on the hot shoe, do not tilt the screen up when these accessories are attached

## **Using an Electronic Viewfinder** (Sold Separately)

► Still Images ► Movies




Shooting is easier with an optional electronic viewfinder, which helps you concentrate on keeping subjects in focus.

Note that fewer shots and less recording time are available than when using the screen (LCD monitor) on the back of the camera. For guidelines on the number of shots and recording time available, see "Number of Shots/Recording Time. Playback Time" (212).

Make sure the camera is off.



- 2 Attach the electronic viewfinder to the hot shoe.
  - Remove the viewfinder cover.

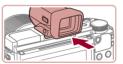

 Insert the viewfinder's connection. component into the hot shoe ( 173) as shown until it clicks into place.



- 3 Adjust the electronic viewfinder to the desired angle.
- You can adjust the angle of the viewfinder up to about 90° to suit the scene or how you are shooting.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories


**Appendix** 





#### Turn the camera on and switch between using the screen and viewfinder as needed.

- Moving the viewfinder near your eye will activate its display and deactivate the camera screen.
- Moving the viewfinder away from your eye will deactivate its display and activate the camera screen

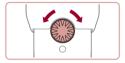

## 5 Adjust the diopter.

 Turn the dial to bring viewfinder images into sharp focus.



# 6 When finished, remove the electronic viewfinder.

- To remove the viewfinder from the camera, turn the camera off and hold down the viewfinder's [UNLOCK] button as you remove it.
- Remove and store the viewfinder when you are not using it.



- The viewfinder display and camera screen cannot be activated at the same time.
- Touch operations on the camera screen are not possible while the viewfinder display is in use.



- Although the viewfinder is produced under extremely highprecision manufacturing conditions and more than 99.99% of the pixels meet design specifications, in rare cases some pixels may be defective or may appear as red or black dots. This does not indicate camera damage or affect recorded images.
- Some aspect ratio settings (\$\sum\_52\$) will cause black bars to be displayed on the top and bottom or left and right edges of the screen. These areas will not be recorded.
- You can switch between viewfinder and screen display by pressing the viewfinder's in it button.
- If you have selected MENU (△31) ► [♣1] tab ► [Display Control] ► [Manual], the screen will not be activated when you move your eye away from the viewfinder. To activate the screen, press the viewfinder's [□] button.
- Motion is displayed more smoothly (whether on the viewfinder or on the screen) in [AUTO], [P], [AV], [TV], or [M] mode when a viewfinder is used. If you prefer normal display and longer battery life, choose MENU (□31) ► [□1] tab ► [Display Mode] ► [Power Saving].
- Display will switch to the camera screen during Wi-Fi communication (\$\Pi\$133) or when the on-screen keyboard (\$\Pi\$32) or Story Highlights home screen (\$\Pi\$130) is displayed.
- You can configure display brightness (\$\infty\$162) for the viewfinder and camera screen separately.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





## **Using an External Flash (Sold Separately)**

► Still Images ► Movies

More sophisticated flash photography is possible with an optional Speedlite EX series flash. For movie shooting using an LED light, the optional Speedlite 320EX flash is available.



- This camera does not support some Speedlite EX series functions
- Non-EX series Canon flash units may not fire correctly or may not fire at all, in some cases.
- Use of non-Canon flash units (especially high-voltage flash units) or flash accessories may prevent normal camera operation and may damage the camera.



Also refer to the Speedlite EX series manual for additional information.

#### Speedlite EX Series

► Still Images ► Movies




These optional flash units can provide bright lighting and meet a variety of flash photography needs.



#### Attach the flash.

- Make sure the camera is off, and then attach the flash unit to the hot shoe.
- Turn the flash on, and then turn the camera on.
  - A red [4] icon is now displayed.
  - The flash pilot lamp will light up when the flash is ready.

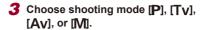

 Flash settings can only be configured in these modes. In other modes, the flash is adjusted and fired automatically, as needed



Configure the external flash.

- Press the [MENU] button, choose [Flash Controll on the [65] tab, and then press the [ button.
- Options already set on the flash itself are displayed.
- Press the [▲][▼] buttons or turn the [♣] dial to choose an item, and then set the desired option.
- Available items vary depending on the shooting mode and the flash attached  $(\Box 176).$



- Settings for the built-in flash cannot be configured while a Speedlite EX series flash is attached, because that setting screen is no longer accessible.
- You can also access the setting screen by pressing the [ ] button for at least one second.
- 600EX-RT/580EX II only: [Flash Control] is not available if the external flash has been set up for stroboscopic flash.
- 320EX only: Auto LED lighting is only available in low-light movie recording or in Movie mode. In this case, the start icon is shown.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 






#### Using Speedlite Bracket SB-E2 (Sold Separately)





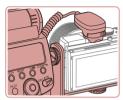

- Using the optional Speedlite Bracket SB-E2 can help prevent unnatural shadows next to subjects during vertical shooting.
- To keep the LCD screen out of the way of the bracket, use the screen closed and facing outward.

#### Camera Settings Available with an External Flash (Sold Separately)





The following items are available in [P], [Tv], [Av], or [M] mode. In other shooting modes, only [Red-Eye Corr.] can be configured. (With autoflash control, the flash always fires.) However, external flash units do not fire in modes that the built-in flash does not fire (195)

	Options		Shooting Mode				
Item			Tv	Αv	М		
Flash Mode	Auto*1	0	0	0	0		
	Manual*2	0	0	0	0		
Flash Exp. Comp*3	-3 to +3	0	0	0	0		
Flash Output*4	1/128*5 to 1/1 (in 1/3-stop increments)	0	0	0	0		
Shutter Sync.	1st-curtain/2nd-curtain/ Hi-speed	0	0	0	0		
Wireless Func.*6	Off/Optical/Radio	0	0	0	0		
Red-Eye Lamp	On/Off	0	0	0	0		
Safety FE*7	On	0	0	0	_		
	Off	0	0	0	0		
Clear Flash Settings*8		0	0	0	0		

- E-TTL mode is used for the flash.
- \*2 M mode is used for the flash.
  - In [M] shooting mode, E-TTL mode is also available for the flash. In this case, when the flash fires, flash exposure compensation set on the flash is applied to the flash output level set on the camera.
- \*3 Can be configured only when [Flash Mode] is [Auto] and flash exposure compensation set on the flash is [+0]. When you adjust flash exposure compensation on 600EX-RT, 600EX, 580EX II, or 430EX II Speedlites, the camera display will be updated accordingly.
- \*4 Can be configured when [Flash Model is [Manual], Linked to settings on the flash unit.
- \*5 1/64 for Speedlite 430EX II/430EX/320EX/270EX II/270EX.
- Configure other options on the flash unit itself. Available with Speedlite 580EX II/600EX-RT/600EX/90EX. When this item is not set to [Off], [Shutter Sync.] cannot be set to [2nd-curtain]. (If [Shutter Sync.] is set to [2nd-curtain], it will be changed to [1st-curtain].)
- \*7 Can only be configured when [Flash Mode] is [Auto].
- \*8 Restores all default settings. You can also restore defaults for [Safety FE] and [Red-Eve Lamp] by using [Reset All] on the [\$\frac{4}{4}\$] tab on the camera (\$\mathbb{Q}\$] 165).



In [AUTO] shooting mode, icons representing Smiling, Sleeping, Babies (Smiling), Babies (Sleeping), and Children shooting scenes determined by the camera are not displayed, and the camera does not shoot continuously (40).

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





## **Using an External Microphone**

An external microphone with a mini plug (3.5 mm diameter) can be connected to the external microphone IN terminal (Q4) for use in recording. Note that the built-in microphone is not used for recording when an external microphone is connected.



Open the cover and connect the external microphone.



- Any attenuator settings you have configured are also applied to recording with the external microphone (\$\mathbb{Q}\$76).
- Connecting an external microphone will deactivate [Wind Filter] (476).

## **Using Headphones (Sold Separately)**

Still Images Movies



Headphones can be used to listen to audio as the camera captures it when you shoot, or when you play back movies.



#### Connect the headphones.

Open the cover and connect the headphones.



## Configure the setting.

- Press the [MENU] button, choose [♥3] tab ► [Headphones], press the [♠] button, and then press the [♠][▼] buttons to set the volume to [0].
- Put the headphones on and press the [▲][▼] buttons to adjust the volume.



Audio will no longer be recorded in movies you are recording if you accidentally connect headphones to the external microphone IN terminal during recording.



- In shooting modes other than Movie mode, audio is only sent to headphones during movie recording and when you are adjusting the volume for [Headphones] (Q177) or [Level] (Q176).
- No audio is sent to headphones during remote shooting (Q156) or during other Wi-Fi connections.
- Audio is not sent to headphones connected to the external microphone IN terminal. Connect headphones to the headphone jack.

Before Use

**Basic Guide** 

#### Advanced Guide

**Camera Basics** 

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

#### Accessories

**Appendix** 





# Using the Software

To utilize the features of the following software, download the software from the Canon website and install it on your computer.

- CameraWindow
- Import images to your computer
- Image Transfer Utility
  - Set up Image Sync (Q153) and receive images
- Map Utility
  - Use a map to view GPS information that has been added to images
- Digital Photo Professional
- Browse, process and edit RAW images



 To view and edit movies on a computer, use preinstalled or commonly available software compatible with movies recorded by the camera.

## Computer Connections via a Cable

#### **Checking Your Computer Environment**

The software can be used on the following computers. For detailed system requirements and compatibility information, including support in new operating systems, visit the Canon website.

- Windows 8/8.1
- Windows 7 SP1
- Mac OS X 10.9
- Mac OS X 10.8


When sending images to a computer via Wi-Fi, check the system requirements in "Checking Your Computer Environment" (\$\sum\_140\$).

#### Installing the Software

For software installation instructions, see "Installing the Software" (140).

# Saving Images to a Computer

Using a USB cable (sold separately; camera end: Mini-B), you can connect the camera to the computer and save images to the computer.

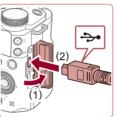

# 1 Connect the camera to the computer.

- With the camera turned off, open the cover (1). With the smaller plug of the USB cable in the orientation shown, insert the plug fully into the camera terminal (2).

 Insert the larger plug of the USB cable in the computer's USB port. For details about USB connections on the computer, refer to the computer user manual.



# 2 Turn the camera on to access CameraWindow.

- Press the [] button to turn the camera on.
- Mac OS: CameraWindow is displayed when a connection is established between the camera and computer.
- Windows: Follow the steps introduced below.
- In the screen that is displayed, click the change program link of [ ].

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix







 Choose [Downloads Images From Canon Camera] and then click [OK].



Double-click [



3 Save the images to the computer.

- Click [Import Images from Camera], and then click [Import Untransferred Images].
- Images are now saved to the Pictures folder on the computer, in separate folders named by date.
- After images are saved, close
   CameraWindow, press the [] button to
   turn the camera off, and unplug the cable.
- To view images you save to a computer, use preinstalled or commonly available software compatible with images captured by the camera.



- Windows 7: If the screen in step 2 is not displayed, click the icon in the taskbar.
- Mac OS: If CameraWindow is not displayed after step 2, click the [CameraWindow] icon in the Dock.
- Although you can save images to a computer simply by connecting your camera to the computer without using the software, the following limitations apply.
  - It may take a few minutes after you connect the camera to the computer until camera images are accessible.
  - Images shot in vertical orientation may be saved in horizontal orientation.
  - RAW images (or JPEG images recorded with RAW images) may not be saved.
  - Image protection settings may be cleared from images saved to a computer.
  - Some problems may occur when saving images or image information, depending on the operating system version, the software in use, or image file sizes.

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



# Printing Images

► Still Images ► Movies

Your shots can easily be printed by connecting the camera to a printer. On the camera, you can specify images to set up batch printing, prepare orders for photo development services, and prepare orders or print images for photobooks.

A Canon SELPHY CP series compact photo printer is used here for the sake of illustration. Screens displayed and available functions vary by printer. Also refer to the printer manual for additional information.

## Easy Print

► Still Images ► Movies

Print your shots by connecting the camera to a PictBridge-compatible printer with a USB cable (sold separately; camera end: Mini-B).

Make sure the camera and printer are off.



- Open the terminal cover. Holding the smaller cable plug in the orientation shown, insert the plug fully into the camera terminal.
- Connect the larger cable plug to the printer. For other connection details, refer to the printer manual.

3 Turn the printer on.



4 Turn the camera on.

Press the [] button to turn the camera on.

#### 5 Choose an image.

 Press the [◀][▶] buttons or turn the [♣] dial to choose an image.



6 Access the printing screen.

● Press the [♣] button, choose [♣], and press the [♣] button again.



SET Print

**7** Print the image.

- Press the [▲][▼] buttons or turn the [♠] dial to choose [Print], and then press the [♠] button.
- Printing now begins.
- To print other images, repeat the above procedures starting from step 5 after printing is finished.
- When you are finished printing, turn the camera and printer off and disconnect the cable.



- For Canon-brand PictBridge-compatible printers (sold separately), see "Printers" (\(\sum\_169\)).
- RAW images cannot be printed.

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





# **Configuring Print Settings**

Still Images Movies





# Access the printing screen.

■ Follow steps 1 – 6 in "Easy Print" (180) to access this screen.

# 2 Configure the settings.

 Press the [▲][▼] buttons or turn the [♣] dial to choose an item, and then press the [ button. On the next screen, choose an option (either press the [A][V] buttons or turn the [A] dial), and then press the [ ] button to return to the printing screen.

Default		Matches current printer settings.	
	Date	Prints images with the date added.	
 	File No.	Prints images with the file number added.	
\ \frac{1}{2}	Both	Prints images with both the date and file number added.	
	Off	_	
	Default	Matches current printer settings.	
	Off	_	
	On	Uses information from the time of shooting to print under optimal settings.	
	Red-Eye 1	Corrects red-eye.	
Qj	No. of Copies	Choose the number of copies to print.	
Cropping	<ul> <li>Specify a desired image area to print (\( \infty \) 181).</li> </ul>		
Paper Settings			

# **Cropping Images before Printing**

► Still Images ► Movies



By cropping images before printing, you can print a desired image area instead of the entire image.



# Choose [Cropping].

- After following step 1 in "Configuring Print" Settings" (181) to access the printing screen, choose [Cropping] and press the ( button.
- A cropping frame is now displayed, indicating the image area to print.



# 2 Adjust the cropping frame as needed.

- To resize the frame, move the zoom lever or turn the [ ) dial.
- To move the frame, press the [▲][▼][◀][▶] buttons.
- To rotate the frame, press the IDISP1 button.
- When finished, press the [4] button.

# 3 Print the image.

 Follow step 7 in "Easy Print" ( 180) to print.



Cropping may not be possible at small image sizes, or at some aspect ratios.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

#### Accessories

**Appendix** 





# Choosing Paper Size and Layout before Printing

Still Images Movies





# Choose [Paper Settings].

 After following step 1 in "Configuring Print" Settings" (181) to access the printing screen, choose [Paper Settings] and press the [ ] button.



# 2 Choose a paper size.

 Press the [▲][▼] buttons or turn the [♣] dial to choose an option, and then press the [ ] button.



# 3 Choose a type of paper.

 Press the [▲][▼] buttons or turn the [♣] dial to choose an option, and then press the [ ] button.



# 4 Choose a lavout.

- Press the [▲][▼] buttons or turn the [♣] dial to choose an option.
- When choosing [N-up], press the [@] button. On the next screen, choose the number of images per sheet (either press the [▲][▼] buttons or turn the [♣] dial), and then press the [4] button.
- Print the image.

# **Available Lavout Options**

Default	Matches current printer settings.
Bordered	Prints with blank space around the image.
Borderless	Borderless, edge-to-edge printing.
N-up	Choose how many images to print per sheet.
ID Photo	Prints images for identification purposes. Only available for images with a recording pixel setting of L and an aspect ratio of 3:2.
Fixed Size	Choose the print size. Choose from 3.5 x 5 in., postcard, or wide-format prints.

# **Printing ID Photos**

Still Images Movies



# Choose [ID Photo].

 Following steps 1 – 4 in "Choosing" Paper Size and Layout before Printing" (182), choose IID Photol and press the ( button.



# 2 Choose the long and short side lenath.

Press the [▲][▼] buttons or turn the [♣] dial to choose an item, and then press the [ ] button. On the next screen. choose the length (either press the [▲][▼] buttons or turn the [♠] dial), and then press the P button.



## Choose the printing area.

- Follow step 2 in "Cropping Images before Printing" (181) to choose the printing area.
- Print the image.

Before Use **Basic Guide** Advanced Guide Camera Basics Auto Mode / **Hybrid Auto Mode** Other Shooting Modes P Mode Tv. Av. M. C1. and C2 Mode Playback Mode Wi-Fi Functions **Setting Menu** 

Accessories

**Appendix** 





# **Printing Movie Scenes**

Still Images Movies





# Access the printing screen.

Follow steps 1 – 6 in "Easy Print" (180) to choose a movie. This screen is displayed.

# Choose a printing method.

 Press the [▲][▼] buttons to choose [♣]. and then press the [ ] button. On the next screen, choose an option (either press the [] buttons or turn the [] dial), and then press the [ ] button to return to the printing screen.

Print the image.

# **Movie Printing Options**

Single	Prints the current scene as a still image.	
Sequence	Prints a series of scenes, a certain interval apart, on a single sheet of paper. You can also print the folder number, file number, and elapsed time for the frame by setting [Caption] to [On].	



- To cancel printing in progress, press the [P] button, choose [OK], and then press the P button again.
- IID Photol and [Sequence] cannot be chosen on Canon-brand PictBridge-compatible printers from CP720/CP730 and earlier models

# Adding Images to the Print List (DPOF)

► Still Images ► Movies

**Basic Guide** 

Advanced Guide

Before Use

Camera Basics

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 

Index



Batch printing (\$\infty\$185) and ordering prints from a photo development service can be set up on the camera. Choose up to 998 images on a memory card and configure relevant settings, such as the number of copies, as follows. The printing information you prepare this way will conform to DPOF (Digital Print Order Format) standards.



Print Settings

Print Type

Date

File No

Clear DPOF data

Print Type

Date

File No Clear DPOF data RAW images cannot be included in print list.

Specify the printing format, whether to add the date or file number, and

other settings as follows. These settings apply to all images in the print list.

(231).

per sheet.

the [ button.

One image is printed per sheet.

# **Configuring Print Settings**

Standard

Standard

Index

Both

On

Off

On

Off On

Off

MENU 5

► Still Images ► Movies

• Press the [MENU] button, choose [Print

Press the [▲][▼] buttons or turn the [♣]

dial to choose [Print Settings], and then press the [3] button. On the next screen,

choose and configure items as needed

Smaller versions of multiple images are printed

All image print list settings are cleared after printing.

Both standard and index formats are printed.

Images are printed with the shooting date.

Images are printed with the file number.

settings] on the [ ] 4] tab, and then press

Playback Mode









- Not all of your DPOF settings may be applied in printing by the printer or photo development service, in some cases.
- may be displayed on the camera to warn you that the memory card has print settings that were configured on another camera. Changing the print settings using this camera may overwrite all previous settings.



- Specifying [Index] will prevent you from choosing [On] for both [Date] and [File No.] at the same time.
- Index printing is not available on some Canon-brand PictBridgecompatible printers (sold separately).
- The date is printed in a format matching setting details in [Date/ Time] on the [42] tab (21).

# **Setting Up Printing for Individual Images**





# Choose [Select Images & Qtv.].

- Press the [MFNI] button, choose [Print] settings] on the [ 4] tab, and then press the [ B ] button.
- Press the [▲][▼] buttons or turn the [♣] dial to choose [Select Images & Qty.], and then press the [P] button (231).

# Choose an image.

- Press the [◀][▶] buttons or turn the [♣] dial to choose an image, and then press the [ ] button.
- You can now specify the number of copies.
- If you specify index printing for the image. it is labeled with a [ ] icon. To cancel index printing for the image, press the [4] button again. [ ] is no longer displayed.



Select Range

Select All Images

3 images

Set 1 copy per image

Cancel OK

# Specify the number of prints.

- Press the [▲][▼] buttons or turn the [♣] dial to specify the number of prints (up to 99).
- To set up printing for other images and specify the number of prints, repeat steps 2 - 3
- Printing quantity cannot be specified for index prints. You can only choose which images to print, by following step 2.
- When finished, press the [MENU] button to return to the menu screen

# Setting Up Printing for a Range of Images





- Following step 1 in "Setting Up Printing for Individual Images" (\$\iint\_184\), choose [Select Range] and press the [4] button.
- Follow steps 2 3 in "Selecting a Range" (117) to specify images.
- Press the [▲][▼] buttons to choose [Order], and then press the [A] button.

# Setting Up Printing for All Images

MENU 5

► Still Images ► Movies



 Following step 1 in "Setting Up Printing" for Individual Images" (1184), choose [Select All Images] and press the [@] button

Press the [◀][▶] buttons or turn the [♣] dial to choose [OK], and then press the ( button.

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 







# Clearing All Images from the Print List



- Following step 1 in "Setting Up Printing" for Individual Images" (1184), choose [Clear All Selections] and press the [4] button
- Press the [◀][▶] buttons or turn the [♠] dial to choose [OK], and then press the ( button.

# Printing Images Added to the Print List (DPOF)





- When images have been added to the print list (183 – 184), this screen is displayed after you connect the camera to a PictBridge-compatible printer. Press the [▲][▼] buttons to choose [Print now], and then simply press the [4] button to print the images in the print list.
- Any DPOF print job that you temporarily stop will be resumed from the next image.


# Adding Images to a Photobook



► Still Images ► Movies

Photobooks can be set up on the camera by choosing up to 998 images on a memory card and importing them into the software on your computer, where they are stored in their own folder. This is convenient when ordering printed photobooks online or printing photobooks with your own printer.

# **Choosing a Selection Method**

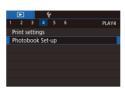

• Press the [MENU] button, choose [Photobook Set-up] on the [114] tab. and then choose how you will select images.



Photobook Set-up

Select All Images

No. of images: 0

Clear All Selections

Select

[1] may be displayed on the camera to warn you that the memory card has print settings that were configured on another camera. Changing the print settings using this camera may overwrite all previous settings.

# Adding Images Individually

MENU 🗢

Still Images Movies



Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 

Index



2 Choose an image.

Choose [Select].

Press the [◀][▶] buttons or turn the [♠] dial to choose an image, and then press the [ ] button.

Following the procedure in "Choosing

[Select] and press the [ ] button.

a Selection Method" (185), choose

- [✓] is displayed.
- To remove the image from the photobook, press the [A] button again. [ ] is no longer displayed.
- Repeat this process to specify other images.
- When finished, press the [MFN] button to return to the menu screen

Before Use

**Basic Guide** 

Advanced Guide

**Camera Basics** 

Auto Mode / **Hvbrid Auto Mode** 

Other Shooting Modes

P Mode


Tv. Av. M. C1. and C2 Mode





# Adding All Images to a Photobook



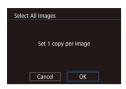

- Following the procedure in "Choosing a Selection Method" (☐ 185), choose [Select All Images] and press the [⊕] button.
- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [∰] button.

# Removing All Images from a Photobook





- Following the procedure in "Choosing a Selection Method" ( 185), choose [Clear All Selections] and press the Button.
- Press the [◀][▶] buttons or turn the [∰] dial to choose [OK], and then press the [∰] button.

Before Use **Basic Guide** Advanced Guide Camera Basics Auto Mode / Hybrid Auto Mode Other Shooting Modes P Mode Tv, Av, M, C1, and C2 Mode Playback Mode Wi-Fi Functions Setting Menu Accessories Appendix Index



# **Appendix**

Helpful information when using the camera

# Troubleshooting

If you think there is a problem with the camera, first check the following. If the items below do not solve your problem, contact a Canon Customer Support Help Desk.

#### Power

Nothing happens when the ON/OFF button is pressed.

- Confirm that the battery pack is charged (\$\mathbb{\math}
- Confirm that the battery pack is inserted facing the correct way (20).
- Dirty battery terminals reduce battery performance. Try cleaning the terminals with a cotton swab and reinserting the battery pack a few times.

The battery pack runs out of power quickly.

- Battery performance decreases at low temperatures. Try warming the battery pack a little by putting it in your pocket, for example, ensuring that the terminals do not touch any metal objects.
- Dirty battery terminals reduce battery performance. Try cleaning the terminals with a cotton swab and reinserting the battery pack a few times.
- If these measures do not help and the battery pack still runs out of power soon after charging, it has reached the end of its life. Purchase a new battery pack.

The lens is not retracted.

• Do not open the memory card/battery cover while the camera is on. Close the cover, turn the camera on, and then turn it off again (220).

The battery pack is swollen.

Battery swelling is normal and does not pose any safety concerns. However, if battery swelling prevents the battery pack from fitting in the camera, contact a Canon Customer Support Help Desk.

#### Display on a TV

Camera images look distorted or not displayed on a TV (2169).

Refore Use **Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

**Setting Menu** 

Accessories

**Appendix** 





#### Shooting

#### Cannot shoot.

• In Playback mode (\$\infty\$106), press the shutter button halfway (\$\infty\$27).

Strange display on the screen under low light (\$\mathbb{Q}\$29).

Strange display on the screen when shooting.

- Note that the following display problems are not recorded in still images but are recorded in movies.
  - The screen may flicker and horizontal banding may appear under fluorescent or LED lighting.

Full-screen display is not available while shooting (Q96).

[4] flashes on the screen when the shutter button is pressed, and shooting is not possible (\$\infty\$38).

[9] is displayed when the shutter button is pressed halfway (138).

- Set [IS Mode] to [Continuous] (\$\sum\_56\$).
- Raise the flash and set the flash mode to [4] (493).
- Increase the ISO speed (\$\sum\_80\$).
- Mount the camera on a tripod or take other measures to keep it still. Additionally, you should set [IS Mode] to [Off] when using a tripod or other means to secure the camera (\$\subseteq\$56).

#### Shots are out of focus.

- Press the shutter button halfway to focus on subjects before pressing it all the way down to shoot (\$\infty\$27).
- Make sure subjects are within focusing range (Q213).
- Set [AF-assist Beam] to [On] (\$\overline{\bullet}\$57).
- Confirm that unneeded functions such as macro are deactivated.
- Try shooting with focus lock or AF lock (\$\subseteq\$89, \$\supseteq\$93).

# Shots are blurry.

 Blurring may occur more often when Touch Shutter is used to shoot, depending on shooting conditions. Hold the camera still when shooting.

No AF frames are displayed and the camera does not focus when the shutter button is pressed halfway.

 To have AF frames displayed and the camera focus correctly, try composing the shot with higher-contrast subject areas centered before you press the shutter button halfway. Otherwise, try pressing the shutter button halfway repeatedly. Subjects in shots look too dark.

- Raise the flash and set the flash mode to [\$] ( 93).
- Adjust brightness by using exposure compensation (\$\sup\$79).

Use AE lock or spot metering (□79, □79).

Subjects look too bright, highlights are washed-out.

- Lower the flash and set the flash mode to [3] (235).
- Adjust brightness by using exposure compensation (\$\tilde{\mathbb{Q}}\$79).
- Use AE lock or spot metering (\$\sum\_79\$, \$\sum\_79\$).
- Reduce the lighting on subjects.

Shots look too dark despite the flash firing (238).

- Shoot within flash range (Q213).
- Adjust brightness by using flash exposure compensation or changing the flash output level (\$\infty\$94, \$\infty\$101).
- Increase the ISO speed (\$\overline{\text{\text{\$\sigma}}}\$80).

Subjects in flash shots look too bright, highlights are washed-out.

- Shoot within flash range (Q213).
- Lower the flash and set the flash mode to [3] ( 35).
- Adjust brightness by using flash exposure compensation or changing the flash output level (\$\infty\$94, \$\infty\$101).

White spots appear in flash shots.

This is caused by light from the flash reflecting off dust or airborne particles.

#### Shots look grainy.

- Lower the ISO speed (\$\sum\_80\$).
- High ISO speeds in some shooting modes may cause grainy images (\$\sup\$61).

Subjects are affected by red-eye.

- Set [Red-Eye Lamp] to [On] (\$\subseteq\$57). The red-eye reduction lamp (\$\subseteq\$4\) will light up for flash shots. For best results, have subjects look at the red-eye reduction lamp. Also try increasing the lighting in indoor scenes and shooting at closer range.
- Edit images using red-eye correction (Q 127).

Recording to the memory card takes too long, or continuous shooting is slower.

Use the camera to perform low-level formatting of the memory card (\$\sum\_{160}\$).

Shooting settings or Quick Set menu settings are not available.

Available setting items vary by shooting mode. Refer to "Functions Available
in Each Shooting Mode", "Quick Set Menu", and "Shooting Tab" (195 –
1200).

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





#### The Babies or Children icon does not display.

 The Babies and Children icons will not display if the birthday is not set in face information (\(\subseteq 48\)). If the icons still do not display even when you set the birthday, re-register face information (\(\subseteq 48\)), or make sure that the date/time are set correctly (\(\subseteq 163\)).

#### Touch AF or Touch Shutter does not work.

Touch AF or Touch Shutter will not work if you touch the edges of the screen.
 Touch closer to the center of the screen.

#### **Shooting Movies**

The elapsed time shown is incorrect, or recording is interrupted.

 Use the camera to format the memory card, or switch to a card that supports high-speed recording. Note that even if the elapsed time display is incorrect, the length of movies on the memory card corresponds to the actual recording time (\$\sum\_{1}\$160. \$\sum\_{2}\$13).

[1] is displayed and shooting stops automatically.

- The camera's internal memory buffer filled up as the camera could not record to the memory card quickly enough. Try one of the following measures.
  - Use the camera to perform low-level formatting of the memory card (Q160).
  - Lower the image quality (\$\square\$54).
  - Switch to a memory card that supports high-speed recording (Q213).

#### Zooming is not possible.

- Zooming is not possible in [ mode ( 70).
- Zooming is not possible when shooting movies in [4] mode (4).

#### Subjects look distorted.

 Subjects that pass in front of the camera quickly may look distorted. This is not a malfunction

#### Playback

Playback is not possible.

 Image or movie playback may not be possible if a computer is used to rename files or alter the folder structure. Playback stops, or audio skips.

- Switch to a memory card that you have performed low-level formatting on with the camera (160).
- There may be brief interruptions when playing movies copied to memory cards that have slow read speeds.
- When movies are played on a computer, frames may be dropped and audio may skip if computer performance is inadequate.

#### Sound is not played during movies.

- Adjust the volume (\$\infty\$24) if you have activated [Mute] (\$\infty\$163) or the sound in the movie is faint.
- No sound is played for movies shot in [4] (\$\limin\$) (\$\limin\$) or [\$\frac{1}{27}\$] (\$\limin\$) mode because audio is not recorded in these modes.

Cannot access the Story Highlights home screen by pressing the [▼] button

- Home screen display is not possible when connected to a printer. Disconnect the camera from the printer.
- Home screen display is not possible during Wi-Fi connections. End the Wi-Fi connection.

A desired subject icon for an album is not displayed on the Story Highlights home screen.

 In simple information display mode (Q108), choose an image that shows the name of the person for the album before accessing the Story Highlights home screen (Q130).

#### Memory Card

The memory card is not recognized.

• Restart the camera, with the memory card in it (Q26).

#### Computer

Cannot transfer images to a computer.

- When attempting to transfer images to the computer via a cable, try reducing the transfer speed as follows.
  - Press the [▶] button to enter Playback mode. Hold the [MENU] button down as you press the [♠] and [♠] buttons at the same time. On the next screen, press the [♠] buttons to choose [B], and then press the [♠] button.

Before Use

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



#### Wi-Fi

Cannot access the Wi-Fi menu by pressing the [▲] button.

- The Wi-Fi menu is not available in Shooting mode. Switch to Playback mode and
- In Playback mode, the Wi-Fi menu cannot be accessed during magnified display or index display. Switch to single-image display and try again. Similarly, the Wi-Fi menu cannot be accessed during group playback or filtered image display according to specified conditions. Cancel group or filtered image playback.
- The Wi-Fi menu cannot be accessed while the camera is connected to a printer. computer, or TV via a cable. Disconnect the cable.

#### Cannot add a device/destination.

- A total of 20 items of connection information can be added to the camera. Frase unneeded connection information from the camera first, and then add new devices/destinations (\$\infty\$157).
- Use a computer or smartphone to register Web services (\$\iii\)145).
- To add a smartphone, first install the dedicated application Camera Connect on your smartphone (1136).
- To add a computer, first install the software CameraWindow on your computer. Also check your computer and Wi-Fi environment and settings (\$\iii\)140.
- Do not use the camera near sources of Wi-Fi signal interference, such as microwave ovens. Bluetooth devices, or other equipment operating on the 2.4 GHz band.
- Bring the camera closer to the other device you are trying to connect to (such as the access point), and make sure there are no objects between the devices.

#### Cannot connect to the access point.

Confirm that the access point channel is set to a channel supported by the camera (Q211). Note that instead of auto channel assignment, it is advisable to specify a supported channel manually.

#### Cannot send images.

- The destination device has insufficient storage space. Increase the storage space on the destination device and resend the images.
- The write-protect switch of the memory card in the destination camera is set to the locked position. Slide the write-protect switch to the unlocked position.
- RAW images cannot be sent. For images captured in both JPEG and RAW format, only the JPEG version is sent. However, RAW images can be sent using Image Sync.
- Images are not sent to CANON iMAGE GATEWAY or other Web services if you move or rename image files or folders on the computer that received images sent using Image Sync via an access point (\$\subseteq\$153). Before moving or renaming these image files or folders on the computer, make sure the images have already been sent to CANON iMAGE GATEWAY or other Web services.

#### Cannot resize images for sending.

- Images cannot be resized to be bigger than the recording pixel setting of their original size
- Movies cannot be resized.

Images take a long time to send./The wireless connection is disrupted.

- Multiple images may take a long time to send. Try resizing the image to reduce sending time (\$\Pi\$153).
- Movies may take a long time to send.
- Do not use the camera near sources of Wi-Fi signal interference, such as microwave ovens. Bluetooth devices, or other equipment operating on the 2.4 GHz band. Note that images may take a long time to send even when [\(\begin{aligned} \tau\_1 \\ \tau\_1 \end{aligned}\)] is displayed.
- Bring the camera closer to the other device you are trying to connect to (such as the access point), and make sure there are no objects between the devices.

Want to erase Wi-Fi connection information before disposing of the camera or giving it to someone else.

Reset the Wi-Fi settings (\$\infty\$158).

Refore Use

Basic Guide

Advanced Guide

Camera Basics

Auto Mode / **Hybrid Auto Mode** 

Other Shooting Modes

P Mode

Tv. Av. M. C1. and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





# **On-Screen Messages**

If an error message is displayed, respond as follows.

#### Shooting or Playback

#### No memory card

 The memory card may be inserted facing the wrong way. Reinsert the memory card facing the correct way (220).

#### Memory card locked

 The write-protect switch of the memory card is set to the locked position. Switch the write-protect switch to the unlocked position (\$\subseteq\$20).

#### Cannot record!

Shooting was attempted without a memory card in the camera. To shoot, insert a
memory card facing the correct way (\$\subseteq\$20).

## Memory card error ( 160)

 If the same error message is displayed even after you have formatted a supported memory card (\$\infty\$2) and have inserted it facing the correct way
 \$\infty\$20), contact a Canon Customer Support Help Desk.

#### Insufficient space on card

There is not enough free space on the memory card to shoot (\$\infty\$35, \$\infty\$59,
 \$\infty\$78, \$\infty\$98) or edit images (\$\infty\$124). Either erase unneeded images (\$\infty\$118) or insert a memory card with enough free space (\$\infty\$20).

#### Touch AF unavailable

Touch AF is not available in the current shooting mode (Q195).

#### Touch AF canceled

• The subject selected for Touch AF can no longer be detected (492).

Charge the battery (Q19)

#### No Image.

The memory card does not contain any images that can be displayed.

## Protected! (Q116)

Unidentified Image/Incompatible JPEG/Image too large./Cannot play back MOV/Cannot play back MP4

- Unsupported or corrupt images cannot be displayed.
- It may not be possible to display images that were edited or renamed on a computer, or images shot with another camera.

Cannot magnify!/Cannot rotate/Cannot modify image/Cannot modify/ Cannot assign to category/Unselectable image./No identification information

The following functions may be unavailable for images that were renamed or already edited on a computer, or images shot with another camera. Note that starred (\*) functions are not available for movies.
 Edit ID Info\* (\(\Omega\)114), Magnify\* (\(\Omega\)115), Rotate\* (\(\Omega\)120), Favorites (\(\Omega\)121), Edit\* (\(\Omega\)124), Print List\* (\(\Omega\)183), and Photobook Set-up\*

#### Invalid selection range

When specifying a range for image selection (

117, 

120, 

184), you attempted to choose an initial image that was after the final image, or vice-versa.

#### Exceeded selection limit

- More than 998 images were selected for Print List (\$\sum\_183\$) or Photobook Set-up (\$\sum\_185\$). Choose 998 images or less.
- Print List (\$\infty\$183) or Photobook Set-up (\$\infty\$185) settings could not be saved correctly. Reduce the number of selected images and try again.
- You attempted to choose more than 500 images in Protect (116), Erase (118), Favorites (121), Print List (183), or Photobook Set-up (185).

#### Naming error!

• The folder could not be created or images could not be recorded, because the highest supported folder number (999) for storing images on the card has been reached and the highest supported image number (9999) for images in folders has been reached. On the [♥1] tab, change [File Numbering] to [Auto Reset] (□ 159), or format the memory card (□ 160).

#### Lens Error

- This error may occur if the lens is held while it is moving, or when the camera is used in dusty or sandy locations.
- Frequent display of this error message may indicate camera damage. In this
  case, contact a Canon Customer Support Help Desk.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





#### A camera error was detected (error number)

- If this error message is displayed immediately after a shot, the image may not have been saved. Switch to Playback mode to check for the image.
- Frequent display of this error message may indicate camera damage. In this
  case, write down the error number (Exx) and contact a Canon Customer Support
  Help Desk.

#### File Error

 Correct printing (\$\sum\_{180}\$) may not be possible for photos from other cameras or images that have been altered using computer software, even if the camera is connected to the printer.

#### Print error

 Check the paper size setting (\$\sum\_182\$). If this error message is displayed when the setting is correct, restart the printer and complete the setting on the camera again.

#### Ink absorber full

 Contact a Canon Customer Support Help Desk to request assistance with ink absorber replacement.

#### Wi-Fi

#### Connection failed

- No access points were recognized. Check the access point settings (Q 142).
- A device could not be found. Turn the camera off and on again, and retry the connection.
- Check the device you want to connect to and make sure it is ready for connection.

#### Cannot determine access point

 The WPS buttons on numerous access points were pressed simultaneously. Try reconnecting again.

#### No access points found

- . Check to make sure that the access point is turned on.
- When connecting to an access point manually, make sure that you entered the correct SSID.

# Incorrect password/Incorrect Wi-Fi security settings

Check the access point security settings (
 — 142).

#### IP address conflict

Reset the IP address so that it does not conflict with another.

#### Disconnected/Receiving failed/Sending failed

- You may be in an environment where Wi-Fi signals are obstructed.
- Avoid using the camera's Wi-Fi function around microwave ovens, Bluetooth devices, and other devices that operate on the 2.4 GHz band.
- Bring the camera closer to the other device you are trying to connect to (such as the access point), and make sure there are no objects between the devices.
- Check the connected device to make sure it is not experiencing errors.

#### Sending failed

#### Memory card error

 If the same error message is displayed even when you have inserted a formatted memory card facing the correct way, contact a Canon Customer Support Help Desk.

#### Receiving failed

#### Insufficient space on card

 There is not enough free space on the memory card in the target camera to receive images. Erase images to create space on the memory card, or insert a memory card with sufficient space.

# Receiving failed

#### Memory card locked

 The write-protect switch of the memory card in the camera to receive the images is set to the locked position. Slide the write-protect switch to the unlocked position.

# Receiving failed

# Naming error!

 When the highest folder number (999), and the highest image number (9999) have been reached on the receiving camera, images cannot be received.

#### Insufficient space on server

- Delete unnecessary images uploaded to CANON iMAGE GATEWAY to create space.
- Save the images sent via Image Sync (\$\sum\_153\$) to your computer.

#### Check network settings

 Check to make sure your computer can connect to the Internet with the current network settings.

#### Other Accessories

#### The camera rattles when shaken.

If you shake the camera when it is off, the lens will make a noise as it moves. This
does not indicate damage.

Before Use

**Basic Guide** 

#### **Advanced Guide**

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories


Appendix





# **On-Screen Information**

# Shooting (Information Display)

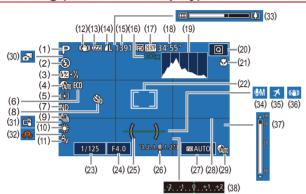

- Shooting mode (☐195), Scene icon (☐39)
- (2) Flash mode (QQ93)
- (3) Flash exposure compensation / Flash output level (494, 4101)
- (4) Shadow correction (Q 83)
- (5) Metering method (\$\bigcap\$79)
- (6) Eco mode (Q161)
- (7) ND filter (\$\infty\$83)
- (8) Self-timer (Q45)
- (9) Drive mode ( 47), AEB shooting ( 81), Focus bracketing ( 88)

- (10) White balance (\$\omega\$83), Mercury lamp correction (\$\omega\$53)
- (11) My Colors (Q 85)
- (12) IS mode icon (QQ40)
- (13) Battery level (QQ 193)
- (14) Still image compression (\$\square\$96), Recording pixel setting (\$\square\$96)
- (15) Recordable shots (QQ212)\*
- (16) Zoom magnification (Q41), Digital tele-converter (Q89)
- (17) Movie quality (QQ 54)
- (18) Remaining time (Q213)
- (19) Histogram (QQ 108)

- (20) Quick Set menu (A30)
- (21) Focus range (\$\infty\$86, \$\infty\$86), AF lock (\$\infty\$93)
- (22) AF frame (\$\infty\$89), Spot AE point frame (\$\infty\$79)
- (23) Shutter speed (\$\infty\$98, \$\infty\$99)
- (24) Aperture value (199, 199)
- (25) Electronic level (\$\sum\_55\$)
- (26) Exposure level (Q99)
- (27) ISO speed (Q 80)
- (28) Grid lines ( 102)

- (29) DR correction (Q82)
- (30) Hybrid Auto mode (Q37)
- (31) Touch Shutter (46)
- (32) Camera shake warning (QQ 38)
- (33) Zoom bar (QQ 35)
- (34) Audio recording mode (QQ 76)
- (35) Time zone (Q162)
- (36) Image stabilization (Q 56)
- (37) MF indicator (Q 86)
- (38) Exposure compensation (\$\square\$79)
- \* In [ $\square$ ]] mode, indicates the number of shots available.

# **Battery Level**

An on-screen icon or message indicates the battery charge level.

Display	Details
•774	Sufficient charge
•///	Slightly depleted, but sufficient
(Blinking red)	Nearly depleted—charge the battery pack soon
[Charge the battery]	Depleted—charge the battery pack immediately

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu


Accessories

**Appendix** 





# Playback (Detailed Information Display)

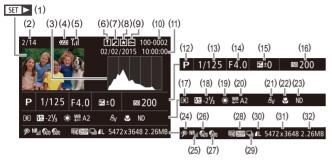

- (1) Movies (Q35, Q106)
- (2) Current image no. / Total no. of images
- (3) Histogram (Q108)
- (4) Battery level (A 193)
- (5) Wi-Fi signal strength (Q152)
- (6) Image Sync (QQ 153)
- (7) Image editing (\$\sum 124\$), Movie compression (\$\sum 129\$)
- (8) Favorites (□121)
- (9) Protection ( 116)
- (10) Folder number File number (\$\mathbb{\pi}\$159)
- (11) Shooting date/time (Q21)
- (12) Shooting mode (Q195)
- (13) Shutter speed (Q98, Q99)
- (14) Aperture value (499, 499)
- (15) Exposure compensation level (\$\square\$79)
- (16) ISO speed (Q80)

- (17) Metering method (Q179)
- (18) Flash (\$\times 93\$), Flash exposure compensation (\$\times 94\$)
- (19) White balance (Q83)
- (20) White balance correction (\$\infty\$84), Mercury lamp correction (\$\infty\$53), Creative Shot effect (\$\infty\$60)
- (21) My Colors (Q85, Q126)
- (22) Focus range (Q86, Q86)
- (23) ND filter (Q 83)
- (24) Red-eye correction (\$\sum 127\$), Short clip playback effect (\$\sup 76\$)
- (25) High ISO NR ( 81)
- (26) DR correction (Q 82)
- (27) Shadow correction (Q83)
- (28) Image quality / Frame rate (movies) (\$\iint\_54\$)
- (29) Group playback (Q113)

- (30) Compression (image quality)
  (\$\infty\$96) / Recording pixel
  setting (\$\infty\$54), Digest movies
  (\$\infty\$37), RAW (\$\infty\$96), MP4
  (movies), Albums (\$\infty\$130)
- (31) Still images: Recording pixel setting (☐212)
  Movies: Playback time (☐213)
- (32) File size



Some information may not be displayed when viewing images on a TV (\$\sum\_{169}\$).

# **Summary of Movie Control Panel**

The following operations are available on the movie control panel, accessed as described in "Viewing" (\$\infty\$106).

- Touch to display the volume panel, and then touch [♠][▼] to adjust the volume. At a volume of 0, [◄] is displayed.
- Play
- Slow Motion (To adjust the playback speed, press the [◀][▶] buttons or turn the [♠] dial. No sound is played.)
- Skip Backward\* or Previous Clip ( 129) (To continue skipping backward, keep holding down the button.)
- Previous Frame (For fast-rewind, keep holding down the [a] button.)
- Next Frame (For fast-forward, keep holding down the [3] button.)
- Skip Forward\* or Next Clip ( 129) (To continue skipping forward, keep holding down the ) button.)
- Erase Clip (displayed when a digest movie is selected, 🛄 129)
- Shown when the camera is connected to a PictBridge-compatible printer (\$\Pi\$180).

<sup>\*</sup> Displays the frame approx. 4 sec. before or after the current frame.



During movie playback, you can skip back or forward (or to the previous or next clip) by pressing the [◀][▶] buttons.

**Before Use** 

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 





# **Functions and Menu Tables**

# Functions Available in Each Shooting Mode

Icons in black, such as **C2**, indicate that the function is available or automatically set in that shooting mode.

Gray icons, such as C2, indicate that the function is unavailable in that shooting mode.

# Exposure Compensation (QQ79)

# ISO Speed (Q 80)

AUTO

C2\*/C1\*/M/Av/Tv/P/遲/AUT0/炒/《/約/①/ ②/③/图/图/图/響/图/響/圖/零/圖/图/®/⑤/過/◎/ □/②/图/門/習/響/圖

125 - 12800

# AF operation (QQ91)

ONE SHOT

C2\*1/C1\*1/M/Av/Tv/P/番!/AUTO\*2/☆/ペ/や/で/ ☆/☆/図/図/ダ/週/\*//※/HM/®/幼/過/で/参/変/ ☑/②/デ/〒/番/艸/畫

**SERVO** 

C2\*/C1\*/M/Av/Tv/P/器/AUTO/(\*)(\*(\*)\*)(\*(\*)\*)(\*)(\*(\*)\*)(\*(\*

#### Drive Mode (Q47)

<u>A</u>]

C2/C1/M/Av/Tv/P/器/AUTO/◇/《/》/℃/③/ ②/因/图/器/图/8/纂/M/8/3/基/◎/基/◎/// ②/图/見/器//

# Flash (📖 93)

**\$**A

C2\*1/C1\*1/M/Ay/Ty/P/番/AUTO/幼/気/物/企/ ※/※/例/図/デ/園/番/※/形/優/新/過/図/本/重/

4

4.\*

3

**Before Use** 

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



#### Flash Exposure Compensation (Q94)

# Flash Output Level (Q101)

C2\*1/C1\*1/M/AV/TV/P/都/AUTO/今/《19/℃/ ※1後/例/都/第1第/第/(歌/18/13/26/15/12/1 2/2/第/第/第/第/第/

# Av/Tv Settings (Q98, Q99)

Aperture Value

Shutter Speed

**Bulb Setting** 

C2\*/C1\*/M/AV/TV/P/配/AUTO/か/火/か/じ/ ②/②/団/図/で/間/8/※/M/9/3/過/で/参/②/ 図/②/デ/〒/電/※/-

## Program Shift (Q79)

# AE Lock/FE Lock in Standby (\$\infty\$79, \$\infty\$95)\*4

#### AE Lock (during recording)/Exposure Compensation (\$\square\$75)

## AF Lock (when assigned to the [5] or movie button) (493)

# Focus Range (🔲 86, 📖 86)

\_ A^

- 5

## Manual Focus Switching When Recording Movies (Q74)

# Move AF Frame ( 89)

Center

Periphery

C2\*1/C1\*1/M/Ay/Ty/P/3\*1/AUTO/ジ/気/物/じ/ ※/後/風\*5/風\*5/過\*5/過/後/※/HR/®/新/息/で/季/ ※/図/後/駅/門/環/呼/電 Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



#### Touch AF (Q 92)

C2\*1/C1\*1/M/Av/Tv/P/番/AUTO/ジョ/&/物/企\*6/ ※\*6/※\*6/※\*6/圏\*5/緑\*5/間/\*8/※/HDR/®/\*\*// 過/

#### Face Select (QQ 92)

#### Touch Shutter (1146)

#### Still Image Shooting When Recording Movies (\$\iint\_74\$)

# Change Display (QQ29)

- \*1 Options vary depending on the assigned shooting mode.
- \*2 [SERVO] when subject movement is detected.
- \*3 Not available, but switches to [42] in some cases.
- \*4 FE lock not available in [3] flash mode.
- \*5 Only when [MF] is selected.
- \*6 Only available when faces are detected.
- \*7 Only available for shooting. Subject designation not available.

# Quick Set Menu

# AF method ( 89)

**L**+Tracking

1-point AF

#### Image quality

For details, see "Shooting Tab" (200).

# Movie Quality (Q 54, Q 54)

When Set to NTSC

59.94P

111) 29.97P

23.98P

HD 29.97P

**Before Use** 

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### ■V(/\ 29.97P

#### When Set to PAL

#### EHID 50.00P

## EFID 25.00P

# □HD 25.00P

# **■VGN 25.00P**

## Self-Timer (Q45)

COFF

# 30130160

#### Self-Timer Settings (46)

Delay\*3

Shots\*4

# ND Filter (Q 83)

ND

MF

#### Still Image Aspect Ratio (Q 52)

16:9

C2\*/C1\*/M/Ay/Tv/P/≥\*/AUT0/◇/兔/菊/℃/ ②/②/图/图/图/窗/窗/窗/窗/。 □/②/图/□/\*\*/臺/

3:2

4:3

**Before Use** 

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



1:1

#### White Balance (\$\infty\$83)

AWB

※/ ♠ / ♣ / 崇 / 崇 / 崇

4

C2\*/C1\*/M/Av/Tv/P/型/AUTO/か/(19/で)で でいない。/ (19/で) (19/で)

**1**/**2** 

# White Balance Correction (Q 84)

# Color Adjustment (QQ 73)

C2/C1/M/Av/Tv/P/器/AUT0/かりをいか/でいる/ ②/图/图/8/※/M/8/3/過/で/季/2/図/ ②/ア/見/で/で My Colors (Q 85)

4∂FF

Av / An / Se\*6 / AW\*6 / Ap / AL / AD / AB / AG / AR / AC\*7

# DR Correction (Q 82)

TOFF

(TAIT

**1**00%

# Shadow Correction (Q 83)

**GOFF** 

C2\*/C1\*/M/AV/TV/P/器/AUTO/炒/《/約/①/ ②/③/图/图/图/8/图/图/图/图/图/图/图/图/ □/②/〒/〒/점/四/□

(fal

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



# Metering Method (QQ 79)

(3)

- \*1 Options vary depending on the assigned shooting mode.
- \*2 Synchronizes with the aspect ratio setting and is automatically set (\$\square\$65).
- \*3 Cannot be set to 0 seconds in modes without selection of the number of shots.
- \*4 One shot (cannot be modified) in modes without selection of the number of shots.
- \*5 Automatically set, matching the aspect ratio specified in [Movie Quality].
- \*6 White balance is not available.
- \*7 Set in a range of 1 5: contrast, sharpness, color saturation, red, green, blue, and skin tone.

# Shooting Tab

# [**1**] Tab

Rec. Mode (261, 262, 274)

Image quality (\$\square\$53, \$\square\$96)

JPEG

RAW

A

4

C2\*/C1\*/M/Av/Tv/P/遲/AUT0/炒/低/約/℃/ ②/②/函/图/圖/圖/圖/圖/圖/圖/圖/圖/圖/回/圖/ □/②/圖/門/圖/圖/圖/圖/圖/圖/

AM1

C2"/C1"/M/Av/Tv/P/&1/AUTO/<a>

**4**M1

AM2

C2<sup>™</sup>/C1<sup>™</sup>/M/Ay/Ty/P/器/AUTO/◇/《/》/() ②/②/図/図/器/图/8/器/HR/9/3/息/◎/8/2/ ☑/②/胃/胃/器/型/

**4**M2

C2<sup>+</sup>/C1<sup>+</sup>/M/Av/Tv/P/器/AUTO/◇/後/物/企/ ②/②/图/图/图/器/图/8/器/HR/8/3/息/◎/多/2/ ☑/②/图/图/图/器/图/

AS

C2\*1/C1\*1/M/Av/Tv/P/型/AUT0/か/や/か/ご/ で/で/図/図/で/図/影/照/8/影/HR/8/3/過/で/多/シ/ 図/と/ア/同/で/で/で

48

**Before Use** 

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### RAW

\_

RAW

#### Still Image Aspect Ratio (\$\square\$52)

For details, see "Quick Set Menu" (Q197).

# Shooting information display (102)

Display switching

#### Grid display

Grid1 ##/Grid2 ###

2.35:1/1.85:1/1.75:1/1.66:1/4:3

C2/C1/M/Av/Tv/P/添!AUT0/かはのでいる/でいる/ ②/因/例/添!後!後!後!版!®!③/参/参/で/参/2/図/ ②|関/門/添!☆!☆!

## Histogram

Brightness/RGB

# Reverse Disp. (28)

On/Off

### Display Mode (Q173)

Power Saving

Smooth

# [**2**] Tab

## Review image after shooting (\$\subseteq 58)

**Display Time** 

Off/Quick

2 sec./4 sec./8 sec.

Hold

 **Before Use** 

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



## Display Info

Off

Detailed

## Touch Shutter (246)

On

Off

# Face ID Settings (Q48)

On/Off

# Function Assignment (Q103)

[()] ring/[: | dial/[: ] dial

#### Shortcut Button

C2\*1/C1\*1/M/AV/TV/P/遲1/AUTO/炒1《/約/℃/ ②/②/图/图/圖/圖/圖/圖/圖/圖/圖/圖/圖/圖/ ☑/②/圖/圖/圖/圖/圖/圖/圖/

#### [ː̇□ːl button

# [ button

#### **IMF**1 button

# Save Settings (QQ 104)

Save to mode: C1

Save to mode: C2

C2\*'/C1\*'/M/Av/Tv/P/器/AUT0/◇/《/乳/①/ ②/②/図/図/影/图/影/图/8/影/HDR/®/③/急/◎/》/』/ ☑/②/影/号/器/影/圖/

# Digital Zoom (Q41)

Standard

C2\*'/C1\*'/M/Av/Tv/P/憑!AUTO/炒/《/物/℃/ ②/②/逐/圖/圖/圖/圖/圖/圖/圖/圖/ ☑/②/圖/門/圖/圖/圖/圖/圖/

Off

 Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



Lock

1.6x/2.0x

C2\*1/C1\*1/M/AV/TV/P/型/AUTO/(() (\* / \*\*) (\* / \*

# AF-Point Zoom ( 55)

On

Off

C2\*/C1\*/M/Av/Tv/P/遲/AUT0/炒/&/物/℃/ ⑥/⑥/圆/圆/圖/霽/圖/豪/圖/像/圖/圖/⑥/麼/ □/②/圖/門/雲/喇/圖

## [ 3] Tab

# AF operation (QQ91)

For details, see "Functions Available in Each Shooting Mode" (\$\sum 195\$).

#### AF method (1189)

For details, see "Quick Set Menu" (Q197).

# AF Frame Size ( 89)\*2

Normal

Small

C2\*'/C1\*'/M/Ay/Ty/P/器/AUTO/◇/《/物/℃/ ②/②/图/图/图/器/图/8/器/HR/8/3/息/◎/4/2/ ☑/②/图/理/器/光/显/

# Continuous AF (QQ 91)

On

Off

# AF+MF (Q 87)

On/Off

# AF-assist Beam (□ 57)

On

Off

 **Before Use** 

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



# [64] Tab

## MF-Point Zoom ( 86)

Off

C2\*/C1\*/M/Av/Tv/P/遲/AUT0/炒/《/約/①/ ②/②/图/图/图/響/图/響/圖/®/◎/過/図/●/ ☑/②/图/图/響/圖/響/圖/

2x/4x

# Safety MF (Q 86)

On

Off

# Recall Zoom/MF Settings (Q104)

#### Zoom Memory

On

C2/C1/M/Av/Tv/P/器/AUTO/幼/《19/℃/念/ ②/图/图/图/8/器/HR/9/3/息/②/条/2/2/ ②/图/图/图/图/8/器/HR/9/3/息/②/条/2/2/

Off

C2\*1/C1\*1/M/AV/TV/P/遲1/AUTO/炒1《1為/①/ ②/②/图/图/圖/響/圖/響/圖/圖/圖/圖/圖/圖/ ☑/②/圖/圖/圖/響/圖/圖/

# MF Memory

On

C2/C1/M/Av/Ty/P/器/AUTO/少/4/多/①/②/ ②/図/図/器/語/8/纂/HR/8/3/急/②/参/2/2/ ②/ア/天/器/光/2/2/

Off

# MF Peaking Settings (Q88)

#### Peaking

On/Off

#### Level

Low/High

C2\*1/C1\*1/M/Av/Tv/P/A\*1/AUTO/◇\*/\*(\*\*)/\*(

#### Color

Red/Yellow/Blue

# IS Settings (QQ 56)

### IS Mode

Off

Refore Use

Basic Guide

#### Advanced Guide

#### Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

#### **Appendix**



On

**Shoot Only** 

# Dynamic IS

Low

C2\*/C1\*/M/Av/Tv/P/憑/AUTO/炒/&/物/企/物/企/ ☆/☆/图/@/憑/圖/圖/圖/圖/圖/圖/圖/面/圖/ □/②/圖/門/圖/圖/圖/圖/圖/圖/

Standard

High

# Bracketing (Q81, Q88)

떈

C2\*1/C1\*1/M/AV/TV/P/型/AUTO/(() (\* / \*) (\* /

₽F,

# [**5**] Tab

# ISO speed (QQ 81)

ISO Speed

For details, see "Functions Available in Each Shooting Mode" (2195).

#### ISO Auto Settings

Max ISO Speed

Rate of Change

# DR Correction (Q 82)

For details, see "Quick Set Menu" (Q197).

Shadow Correct (Q 83)

For details, see "Quick Set Menu" (Q197).

# Light Metering (QQ 79)

For details, see "Quick Set Menu" ( 197).

## ND Filter (Q 83)

For details, see "Quick Set Menu" (Q 197).

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### Flash Control (\$\infty\$57, \$\infty\$94, \$\infty\$95, \$\infty\$101)

Flash Mode

Auto

Manual

#### Flash Exp. Comp

For details, see "Functions Available in Each Shooting Mode" (\$\inf195\$).

#### Flash Output

For details, see "Functions Available in Each Shooting Mode" (\$\infty\$195).

#### Shutter Sync.

1st-curtain

2nd-curtain

#### Red-Eye Lamp

On/Off

#### Safety FE

On

Off

C2\*1/C1\*1/M/AV/TV/P/配/AUTO/(() (\* / \*\*) (\* / \*

# [6] Tab

# WB Correction (Q 84)

For details, see "Quick Set Menu" (Q197)

## My Colors (Q126)

For details, see "Quick Set Menu" (Q197)

# High ISO NR (Q 81)

Low/Standard/High

# Hg Lamp Corr. (\$\sum\_53\$)

On/Off

C2/C1/M/Av/Tv/P/器/AUTO/か/気/も/で/む/ ②/図/図/影/11/8/影/M/8/3/過/回/を/ミ/2/ ②/影/門/器/光/音

# Spot AE Point (Q79)

Center/AF Point

**Before Use** 

Basic Guide

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



# Safety Shift (QQ99)

On

C2\*/C1\*/M/Av/Tv/P/配/AUT0/心/ペパーン/ 心/心/図/図/図/響/11/8/響/版/8/3/過/で/季/型/ 図/2/ア/ディオ/映/電

Off

C2\*/C1\*/M/Av/Tv/P/遲/AUT0/炒/&/物/℃/ ⑥/⑥/图/图/图/響/图/響/圖/零/圖/图/®/⑥/息/⑥/季/重/ □/②/胃/胃/雲/豐/雪

# [ 7] Tab

#### Blink Detection (QQ 56)

On

Off

## 📜 Display Area (📖 42)

Large/Medium/Small

# ː⊏ː Auto Settings (Ⅲ44)

Seek Assist

On

 Off

`,□, Auto Zoom

Face/Upper Body/Whole Body/Manual/Auto

Off

## Save A Stills (Q 71)

On/Off

# Star Emphasis (QQ70)

Sharp/Off/Soft

C2/C1/M/Av/Tv/P/器/AUT0/か/も/か/じ/恋/ 恋/風/例/零/領/\*/ ※/MR/®/ぶ/急/で/季/』/図/

# Star Time-Lapse Movie Setting (Q 71)

Effect

**\*\*** / \$\family | \$\famaily | \$\family | \$\family | \$\family | \$\family | \$\family | \$\

C2/C1/M/AV/TV/P/番/AUTO/か/気/も/で/む/ ②/団/図/菱/領/8/※/HR/9/3/急/で/季/ミ/図/ ②/買/買/器/映/置 Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



#### Shot Interval

15 sec./30 sec./1 min.

C2/C1/M/Av/Tv/P/器/AUT0/幼/兔/幼/℃/幼/ ②/因/图/8/8/8/8/3/息/◎/多/2/2/ ②/图/見/器/照/8/3/8/3/

#### Frame Rate

(PAL) (T3.99 / (T5.90 (PAL))

C2/C1/M/Av/Tv/P/表/AUT0/分/《/为/企/》 ②/因/回/学/如/多/※/HR/9/分/急/回/李/至/回/

#### **Shooting Time**

60 min./90 min./120 min./Unlimited

C2/C1/M/Av/Tv/P/器/AUT0/か/も/か/と/ふ/ ②/因/例/第/領/8/※/HR/8/3/過/②/手/皇/図/ ②/ア/見/で/音/\*\*

# [68] Tab

# Digest Type ( 37)

Include Stills/No Stills

# Movie Quality (QQ 54)

For details, see "Quick Set Menu" ( 197).

## Sound rec. (Q76)

Sound rec.

Auto\*3

C2\*/C1\*/M/Av/Tv/P/憑/AUT0/炒/《/物/℃/ ②/②/图/图/圖/圖/圖/圖/圖/圖/圖/圖/ □/②/图/图/圖/圖/圖/圖/圖/圖/

#### Manual

#### Disable

#### Level

#### Wind filter/Attenuator

Wind Filter: Auto

Wind Filter: Off

C2\*'/C1\*'/M/Av/Tv/P/器/AUTO/かりをいか/でいる/でいる/でいる/器/間/8/器/HR/8/3/過/でいまりまり

Attenuator: On/Off

Attenuator: Auto

- \*1 Options vary depending on the assigned shooting mode.
- \*2 Available when the AF frame is set to [1-point].
- \*3 [Enable] for functions other than Creative Zone and movies.

Before Use

**Basic Guide** 

#### Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



# Set Up Tab

Tab	Item	Reference Page
	Create Folder	<b>159</b>
	File Numbering	<b>159</b>
<b>4</b> 1	Format	<b>160</b>
*'	Video system	<b>160</b>
	Electronic Level	<b>\$\bigsize{1}\biz\bigsize{1}\biz\biz\biz\biz\biz\biz\biz\biz\biz\biz</b>
	Start-up Image	<b>164</b>
	Eco Mode	<b>161</b>
	Power Saving	<b>27</b>
	LCD Brightness	<b>162</b>
<b>4</b> 2	Night Display	<b>161</b>
	Time Zone	<b>162</b>
	Date/Time	<b>163</b>
	Lens Retraction	<b>163</b>
	Language 頃	<b>163</b>
	Mute	<b>163</b>
<b>4</b> 3	Volume	<b>163</b>
**	Sound Options	<b>164</b>
	Headphones	<b>177</b>
	Hints & Tips	<b>164</b>

Tab	Item	Reference Page
	Touch Operation	<b>164</b>
	Units	<b>164</b>
	Wi-Fi Settings	<b>133</b>
<b>4</b> 4	Mobile Device Connect Button	<b>136</b>
	Certification Logo Display	<b>164</b>
	Copyright Info	<b>165</b>
	Reset All	<b>165</b>

# My Menu Tab

Tab	Item	Reference Page
<b>★</b> 1	My Menu settings	<b>105</b>

# Playback Tab

Tab	Item	Reference Page
	Protect	<b>116</b>
	Rotate	<b>120</b>
<b>▶</b> 1	Erase	<b>118</b>
	Favorites	<b>121</b>
	Slideshow	<b>115</b>
<b>2</b>	Album Playback	<b>130</b>
	List/Play Digest Movies	<b>109</b>

Before Use

Basic Guide

# Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



Tab	Item	Reference Page
	i-Contrast	<b>126</b>
	Resize	<u></u> 124
	Cropping	<b>125</b>
▶3	Red-Eye Correction	<b>127</b>
	My Colors	<b>126</b>
	Face ID Info	<b>110</b>
	Print settings	<b>181</b>
▶4	Photobook Set-up	<b>185</b>
	Transition Effect	<b>106</b>
	Index Effect	<b>110</b>
	Scroll Display	<b>106</b>
▶5	Group Images	<b>113</b>
	Auto Rotate	<b>121</b>
	Resume	<b>106</b>
IN 6	Set Shortcut button	<b>122</b>
▶6	Set Touch Actions	<b>123</b>

# Print Tab

Item	Reference Page
Print	_
Select Images & Qty.	<b>184</b>
Select Range	<b>184</b>
Select All Images	<b>184</b>
Clear All Selections	<b>185</b>
Print Settings	<b>183</b>

# **Handling Precautions**

- The camera is a high-precision electronic device. Avoid dropping it or subjecting it to strong impact.
- Never bring the camera near magnets, motors, or other devices that generate strong electromagnetic fields, which may cause malfunction or erase image data.
- If water droplets or dirt adheres to the camera or screen, wipe with a dry soft cloth, such as an eyeglass cloth. Do not rub hard or apply force
- Never use cleaners containing organic solvents to clean the camera or screen.
- Use a blower brush to remove dust from the lens. If cleaning is difficult, contact a Canon Customer Support Help Desk.
- To prevent condensation from forming on the camera after sudden temperature changes (when the camera is transferred from cold to warm environments), put the camera in an airtight, resealable plastic bag and let it gradually adjust to the temperature before removing it from the bag.
- If condensation does form on the camera, stop using it immediately.
   Continuing to use the camera in this state may damage it. Remove the battery pack and memory card, and wait until the moisture has evaporated before resuming use.
- Store unused battery packs in a plastic bag or other container. To
  maintain battery performance if you will not use the battery pack for
  some time, about once a year charge it and then use the camera until
  it runs out of power before storing the battery pack.

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



# Specifications

# Camera Specifications

Camera Effective Pixels (Max.)	Approx. 20.2 million pixels
Lens Focal 25x zoom: 8.8 (W) – 220.0 (T) mm Length (35mm film equivalent: 24 (W) – 600 (T) mm)	
LCD Monitor	8.0 cm (3.2 in.) color TFT LCD Effective Pixels: Approx. 1,620,000 dots
File Format	Design rule for Camera File system, DPOF (version 1.1) compliant
Data Type	Still Images: Exif 2.3 (JPEG), RAW (CR2 (Canon Original)) Movies: MP4 (Video: MPEG-4 AVC/H.264; Audio: MPEG-4 AAC-LC (stereo))
Interface	Hi-speed USB HDMI output Microphone input Headphone output
Power Source	Battery Pack NB-10L AC Adapter Kit ACK-DC80
Dimensions (Based on CIPA Guidelines)	123.3 x 76.5 x 105.3 mm (4.85 x 3.01 x 4.15 in.)
Weight (Based on CIPA Guidelines)	Approx. 733 g (approx. 1.62 lb.; including the battery pack/batteries and memory card) Approx. 690 g (approx. 1.52 lb.; camera body only)

# Wi-Fi

Standards	IEEE 802.11b/g/n* * 2.4 GHz band only
Transmission Methods	OFDM modulation (IEEE 802.11g/n) DSSS modulation (IEEE 802.11b)
Communication Modes	Infrastructure mode*1, Ad hoc mode*2 *1 Supports Wi-Fi Protected Setup *2 Wi-Fi CERTIFIED IBSS
Supported Channels	1 – 11
Security	WEP, WPA-PSK (AES/TKIP), WPA2-PSK (AES/TKIP)

# **Digital Zoom Focal Length (35mm equivalent)**

	24 – 2400 mm (Represents the combined focal length of optical and digital zoom.)
Digital Tele-Converter 1.6x	38.4 – 960 mm
Digital Tele-Converter 2.0x	48.0 – 1200 mm

Before Use

Basic Guide

Advanced Guide

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



# Number of Shots/Recording Time, Playback Time

Number of Shots	Approx. 300
Number of Shots (Eco Mode On)	Approx. 410
Movie Recording Time*1	Approx. 1 hour, 5 minutes
Movie Recording Time (Continuous Shooting*2)	Approx. 2 hours, 5 minutes
Playback Time*3	Approx. 6 hours

- \*1 Time under these conditions.
  - [ mode
  - Quality: [47] 29.97P]
  - With repeated recording, stopping, zooming, and turning the camera on and off
- \*2 Time under these conditions.
  - [ mode
  - Quality: [4] 29.97P]
  - Without zooming or other operations
  - Recording is resumed immediately after stopping automatically at a file size of 4 GB or a time of about 29:59
- \*3 Time when playing back a slideshow of still images.
- The number of shots that can be taken is based on measurement guidelines of the Camera & Imaging Products Association (CIPA).
- Under some shooting conditions, the number of shots and recording time may be less than mentioned above.
- Number of shots/time with a fully charged battery pack.

# **Number of Shots per Memory Card**

The number of shots at an aspect ratio ( $\square$ 52) of 3:2 per memory card is as follows. Note that the number of shots available varies by aspect ratio.

Number of	Compression Ratio	Number of Shots per Memory Card (Approx. shots)
Recording Pixels	Ralio	16 GB
<b>L</b> (Large)	S	1686
20M/5472x3648		2729
<b>M1</b> (Medium 1) 12M/4320x2880	S	2612
		4152
<b>M2</b> (Medium 2)	S	8377
4M/2304x1536	4	14724
<b>S</b> (Small) 0.3M/720x480	S	48592
		69418
RAW Images 5472x3648	_	610

 The values in the table are based on Canon measurement conditions and may change depending on the subject, memory card and camera settings. Before Use **Basic Guide** Advanced Guide Camera Basics Auto Mode / **Hybrid Auto Mode** Other Shooting Modes P Mode Tv. Av. M. C1. and C2 Mode Playback Mode Wi-Fi Functions Setting Menu Accessories Appendix Index



# **Recording Time per Memory Card**

Image Quality	Recording Time per Memory Card
	16 GB
[#FHD 59.94P] [#FHD 50.00P]	59 min. 30 sec.
[#HD 29.97P] [#HD 23.98P]*1 [#HD 25.00P]	1 hr. 26 min. 05 sec.*2
[ <sup>E</sup> HD 29.97P] [ <sup>E</sup> HD 25.00P]	4 hr. 05 min. 15 sec.
[#VGA 29.97P] [#VGA 25.00P]	10 hr. 22 min. 35 sec.

<sup>\*1</sup> Actual frame rate: 23.976 fps.

- The values in the table are based on Canon measurement conditions and may change depending on the subject, memory card and camera settings.
- Recording will automatically stop when the clip file size reaches 4 GB, or when the recording time reaches approximately 29 minutes and 59 seconds when shooting in [新聞 23,937], [新聞 23,937], [新聞 23,937], [新聞 23,937], [新聞 23,937] or [新聞 23,937]
- Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 10 or higher memory cards are recommended.

# Flash Range

Maximum wide angle (•••)	60 cm - 6.8 m (2.0 - 22 ft.)
Maximum telephoto ([♠])	85 cm - 3.1 m (2.8 - 10 ft.)

# **Shooting Range**

	Shooting Mode	Focus Range	Maximum Wide Angle	Maximum Telephoto ([♣])
	AUTO	_	5 cm (2.0 in.) – infinity	85 cm (2.8 ft.) – infinity
	Other	A	5 cm (2.0 in.) – infinity	85 cm (2.8 ft.) – infinity
	modes **	₩*	5 – 50 cm (2.0 in. – 1.6 ft.)	-

<sup>\*</sup> Not available in some shooting modes.

# **Continuous Shooting Speed**

Continuous Shooting Mode	Speed
밀	Approx. 5.9 shots/sec.

 Speed when using an 16 GB UHS-I memory card specified in Canon testing standards. Note that the number of shots varies depending on subjects, the brand of memory card, and other factors. Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



<sup>\*2 52</sup> min. 12 sec. for iFrame movies (\$\infty\$77).

# **Shutter Speed**

[AUTO] mode, automatically set range	1 – 1/2000 sec.
Available values in [ <b>Tv</b> ], [ <b>M</b> ], or [•∰] mode (sec.)*	30, 25, 20, 15, 13, 10, 8, 6, 5, 4, 3.2, 2.5, 2, 1.6, 1.3, 1, 0.8, 0.6, 0.5, 0.4, 0.3, 1/4, 1/5, 1/6, 1/8, 1/10, 1/13, 1/15, 1/20, 1/25, 1/30, 1/40, 1/50, 1/60, 1/80, 1/100, 1/125, 1/160, 1/200, 1/250, 1/320, 1/400, 1/500, 1/640, 1/800, 1/1000, 1/1250, 1/1600, 1/2000

<sup>\*</sup> In [ mode, shutter speeds of 1/25 seconds or slower are not available.

# **Aperture**

f/number	f/2.8 / f/11 (W) – f/5.6 / f/11 (T)
Available values in [Av], [M], or [M] mode*	f/2.8, f/3.2, f/3.5, f/4.0, f/4.5, f/5.0, f/5.6, f/6.3, f/7.1, f/8.0, f/9.0, f/10, f/11

<sup>\*</sup> Depending on the zoom position, some aperture values may not be available.

# **Battery Pack NB-10L**

Type: Rechargeable lithium-ion battery

Nominal Voltage: 7.4 V DC Nominal Capacity: 920 mAh

Charging Cycles: Approx. 300 times Operating Temperatures:  $0-40~^{\circ}\text{C}$  (32  $-104~^{\circ}\text{F}$ )

# **Battery Charger CB-2LC/CB-2LCE**

Rated Input: 100 – 240 V AC (50/60 Hz),

0.18 A (100 V) - 0.12 A (240 V)

Rated Output: 8.4 V DC, 0.7 A

Charging Time: Approx. 1 hr. 50 min. (when using NB-10L)
Charge Indicator: Charging: orange / Fully charged: green

Operating Temperatures: 5 – 40 °C (41 – 104 °F)

**Before Use** 

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix



# Index

CANON iMAGE GATEWAY 145

Α	Clock 34
AC adapter kit 168, 170	Color (white balance) 83
Accessories 168	Compression 96
AEB shooting 81	Connecting via an access point 142
AE lock 79	Continuous shooting 40, 47
AF frames 89	Creative filters (shooting mode) 62
AF lock 93	Creative shot 59
AF method 89	Cropping 125, 181
Aspect ratio 52	Custom white balance 84
Attenuator 76	
Auto mode (shooting mode) 23, 35	D
Av (shooting mode) 99	Date/time
	Changing 21
В	Date/time battery 22
Background defocus	Settings 21
(shooting mode) 66	World clock 162
Batteries	DC coupler 170
→ Date/time (date/time battery)	Defaults → Reset all
Battery charger 2, 168	Digital tele-converter 89
Battery pack	Digital zoom 41
Charging 19	Display language 22
Eco mode 161	DPOF 183
Level 193	Dynamic Range Correction 82
Power saving 27	_
Black and white images 85	<b>E</b>
Blink detection 56	Eco mode 161
	Editing
С	Cropping 125
Camera	i-Contrast 126
Reset all 165	My Colors 126
Camera access point mode 140	Red-eye correction 127
Camera Connect 134	Resizing images 124
CameraWindow 178	Editing or erasing connection
CANON IMAGE GATEWAY 145	information 157

Geotagging images 155 GPS information display 108 Grid lines 102
H Handheld nightscene (shooting mode) 61 HDMI cable 169 High dynamic range (shooting mode) 62 High ISO NR 81 Household power 170 Hybrid Auto (shooting mode) 37
I i-Contrast 126 iFrame movies (movie mode) 77 Image quality → Compression ratio (image quality) Images Display period 58 Erasing 118 Playback → Viewing Protecting 116 Image stabilization 56, 97 Image Sync 153 Indicator 33, 57 ISO speed 80
J Jump display 112
L LCD monitor 28

G

Basic Guide Advanced Guide **Camera Basics** Auto Mode / Hybrid Auto Mode Other Shooting Modes P Mode Tv, Av, M, C1, and C2 Mode Playback Mode Wi-Fi Functions Setting Menu Accessories Appendix Index

Before Use





M	Power 168	Wink self-timer	T	Before Use
M (shooting mode) 99	→ AC adapter kit,	(shooting mode) 68	Terminal 169, 180	
Macro (focus range) 86	→ Battery charger,	Sending images 150	Touch Actions 123	Basic Guide
Magnified display 115	→ Battery pack	Sending images to another camera 150	Touch AF 92	
Manual focus (focus range) 86	Power saving 27		Touch Shutter 46	Advanced Guide
Manual (movie mode) 101	Printing 180 → Printing	Sending images to a smartphone 134	Toy camera effect	Advanced Guide
Memory cards 2 → Memory cards	Program AE 78	Sending images to Web services 145	(shooting mode) 65	
Recording time 213	Protecting 116	Sepia tone images 85	Traveling with the camera 162	Camera Basics
Menu		Servo AF 91	Troubleshooting 187	
Basic operations 31	Q	Shadow correction 83	TV display 169	Auto Mode /
Table 195	Quick Set menu	Shooting	Tv (shooting mode) 98	Hybrid Auto Mode
Mercury lamp correction 53	Table 197	Shooting date/time → Date/time		Other Shooting Modes
Metering method 79		Shooting information 102, 193	V	Other Shooting wodes
Miniature effect (shooting mode) 64	R	Short clips (movie mode) 76	Viewing 24	
Mobile device connection button 136	RAW 96	Slideshow 115	Image search 111	P Mode
Monochrome (shooting mode) 67	Recording pixels (image size) 53, 96	Smart Shutter (shooting mode) 67	Index display 110	
Movies	Red-eye correction 127	Smile (shooting mode) 67	Jump display 112	Tv, Av, M, C1, and C2 Mode
Editing 128	Remote shooting 156	Snow (shooting mode) 61	Magnified display 115	
Image quality (recording pixels/	Reset all 165	Soft focus (shooting mode) 66	Single-image display 24	Dischards Made
frame rate) 54	Resizing images 124	Software	Slideshow 115	Playback Mode
Recording time 213	Rotating 120	Installation 140, 178	TV display 169	
Multi-area White Balance 53		Saving images to		Wi-Fi Functions
My Colors 85, 126	S	a computer 178	W	
	Saving images to a computer 178	Sounds 163	White balance (color) 83	Setting Menu
N	Screen	Sports (shooting mode) 60	Wi-Fi functions 133	3
ND filter 83	Display language 22	Standard (movie mode) 74	Wi-Fi menu 138	Accession
Neck strap → Strap	Icons 193, 194	Star (shooting mode) 70	Wind filter 38, 76	Accessories
Nostalgic (shooting mode) 63	Menu → FUNC. menu, Menu	Star nightscape	Wink self-timer (shooting mode) 68	
	SD/SDHC/SDXC memory cards	(shooting mode) 70	World clock 162	Appendix
P	→ Memory cards	Star time-lapse movie		
P (shooting mode) 78	Searching 111	(shooting mode) 71	Z	Index
Package contents 2	Self-timer 45	Star trails	Zoom 23, 36, 41, 42	
Photobook set-up 185	2-second self-timer 45	(shooting mode) 70		
PictBridge 169 180	Customizing the self-timer 46	Story Highlights 130		

Strap 2

Super vivid (shooting mode) 62

PictBridge 169, 180

Playback → Viewing

Portrait (shooting mode) 61 Poster effect (shooting mode) 62 Customizing the self-timer 46

(shooting mode) 69

Face self-timer



# Wi-Fi (Wireless LAN) Precautions

- Countries and Regions Permitting WLAN Use
- Use of WLAN is restricted in some countries and regions, and illegal use may be punishable under national or local regulations. To avoid violating WLAN regulations, visit the Canon website to check where use is allowed
- Note that Canon cannot be held liable for any problems arising from use in other countries and regions.
- Doing any of the following may incur legal penalties:
  - Altering or modifying the product
  - Removing the certification labels from the product
- According to foreign exchange and foreign trade law regulations, export permission (or service transaction permission) from the Japanese government is necessary to export strategic resources or services (including this product) outside Japan.
- Because this product includes American encryption software, it falls under U.S. Export Administration Regulations, and cannot be exported to or brought into a country under U.S. trade embargo.
- Be sure to make notes of the wireless LAN settings you use.
   The wireless LAN settings saved to this product may change or be erased due to incorrect operation of the product, the effects of radio waves or static electricity, or accident or malfunction. Be sure to make notes of wireless LAN settings as a precaution. Please note that Canon accepts no responsibility for direct or indirect damages or loss of earnings resulting from a degradation or disappearance of content.
- When transferring this product to another person, disposing of it, or sending it for repair, be sure to note the wireless LAN settings and reset the product to its default settings (erase settings) if necessary.
- Canon will not make compensation for damages resulting from loss or theft of the product.
   Canon accepts no responsibility for damages or loss resulting from unauthorized access or use of target devices registered on this product due to loss or theft of the product.

- Be sure to use the product as directed in this guide.
   Be sure to use the wireless LAN function of this product within the guidelines noted in this guide. Canon accepts no responsibility for damages or loss if the function and product are used in ways other than as described in this guide.
- Do not use the wireless LAN function of this product near medical equipment or other electronic equipment.
   Use of the wireless LAN function near medical equipment or other electronic equipment may affect operation of those devices.

# Radio Wave Interference Precautions

 This product may receive interference from other devices that emit radio waves. To avoid interference, be sure to use this product as far away as possible from such devices, or avoid using the devices at the same time as this product.

# Security Precautions

Because Wi-Fi uses radio waves to transmit signals, security precautions more stringent than when using a LAN cable are required. Keep the following points in mind when using Wi-Fi.

Only use networks you are authorized to use.
 This product searches for Wi-Fi networks in the vicinity and displays the results on the screen. Networks you are not authorized to use (unknown networks) may also be displayed. However, attempting to connect to or using such networks could be regarded as unauthorized access. Be sure to use only networks you are authorized to use, and do not attempt to connect to other unknown networks.

Before Use

Basic Guide

**Advanced Guide** 

**Camera Basics** 

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

Appendix





If security settings have not been properly set, the following problems may occur.

- Transmission monitoring
   Third parties with malicious intent may monitor Wi-Fi transmissions and attempt to acquire the data you are sending.
- Unauthorized network access
   Third parties with malicious intent may gain unauthorized access to
  the network you are using to steal, modify, or destroy information.

   Additionally, you could fall victim to other types of unauthorized access
  such as impersonation (where someone assumes an identity to gain
  access to unauthorized information) or springboard attacks (where
  someone gains unauthorized access to your network as a springboard
  to cover their tracks when infiltrating other systems).

To prevent these types of problems from occurring, be sure to thoroughly secure your Wi-Fi network.

Only use this camera's Wi-Fi function with a proper understanding of Wi-Fi security, and balance risk and convenience when adjusting security settings.



The camera can print to PictBridge-compatible printers via Wi-Fi. PictBridge technical standards make it easy to connect digital cameras, printers, and other devices directly. Additionally, a new standard called DPS over IP enables PictBridge connections in network environments, and the camera is also compatible with this standard.

# **Trademarks and Licensing**

- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store, iPhone, and iPad are trademarks of Apple Inc.
- The SDXC logo is a trademark of SD-3C, LLC.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.
- The iFrame logo and the iFrame symbol are trademarks of Apple Inc.
- Wi-Fi®, Wi-Fi Alliance®, WPA™, WPA2™ and Wi-Fi Protected Setup™ are trademarks or registered trademarks of the Wi-Fi Alliance.
- The N-Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
- All other trademarks are the property of their respective owners.
- This device incorporates exFAT technology licensed from Microsoft.
- This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and non-commercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant video. No license is granted or implied for any other use for MPEG-4 standard

**Before Use** 

**Basic Guide** 

**Advanced Guide** 

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 



# Disclaimer

- Unauthorized reproduction of this guide is prohibited.
- All measurements based on Canon testing standards.
- Information subject to change without notice, as are product specifications and appearance.
- Illustrations and screenshots in this guide may differ slightly from the actual equipment.
- The above items notwithstanding, Canon cannot be held liable for any loss arising from the use of this product.

Before Use

**Basic Guide** 

Advanced Guide

Camera Basics

Auto Mode / Hybrid Auto Mode

Other Shooting Modes

P Mode

Tv, Av, M, C1, and C2 Mode

Playback Mode

Wi-Fi Functions

Setting Menu

Accessories

**Appendix** 

