

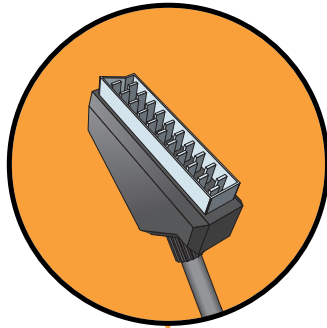
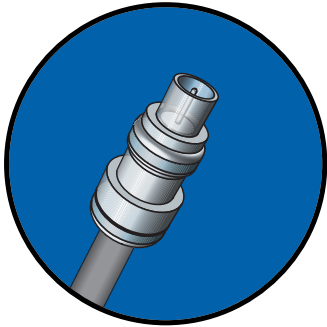


1

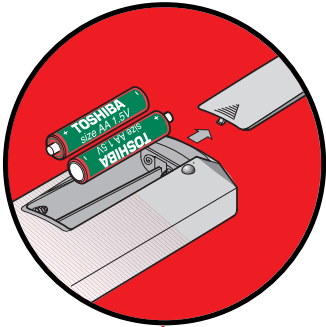

2

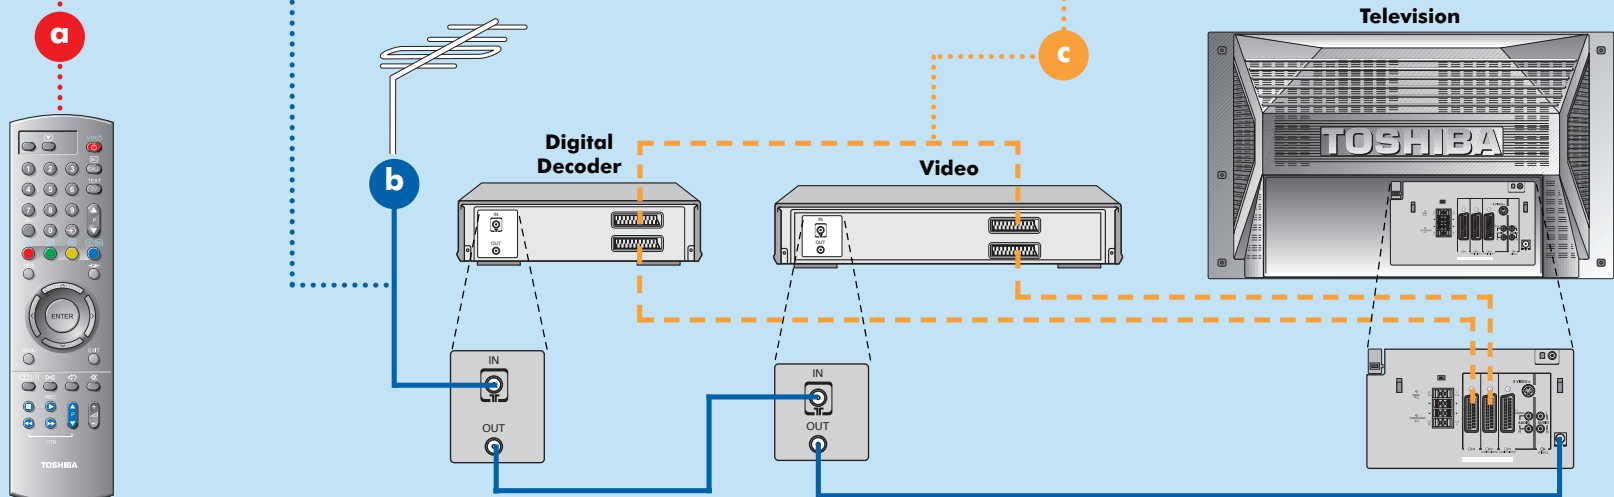

- a** Slide the rear cover upwards to reveal the battery compartment.
- When fitting new batteries take care to observe the correct polarities.

- b** Connect Aerial to **Aerial input** on your Digital Decoder (or Video if no Digital Decoder is to be connected). Then connect from **Aerial output** to **Aerial input** on your Video (VCR).
- Connect **Aerial output** from your Video (VCR) to the **Aerial input** on your Television.

- c** Do not connect any equipment with **Scart leads** as this can prevent successful tuning.
- Remember, to listen in **Stereo** you must connect using **Scart leads, after** you have tuned your TV. See above --- for the correct connections.

3

Simple AUTO TUNE

- 1** Connect the digital decoder to the video recorder, and the video recorder to the television using aerial cables as shown above. If no video recorder or digital receiver is to be connected, plug the aerial directly to AERIAL INPUT (ㄗ) on the television.

NOTE: DO NOT CONNECT ANY EQUIPMENT USING SCART LEADS UNTIL **AFTER** YOU HAVE RUN AUTO TUNE.


- 2** Turn on the digital decoder and select a news channel. Plug in the video recorder and switch it to standby mode.

- 3** Connect the television to the mains, if the power-on light is unlit press the on/off switch on the front of the set. Press button 1 on the remote control to turn the television on.

- 4** Press the **MENU** button, and use either the < or > button to select **SET UP** from the top bar.



- 5** Now press the ▼ button until **Auto tune** is highlighted in the **SET UP** menu options. Press the > button to select the **Auto tune** screen. You will be informed that all previous settings will be lost.

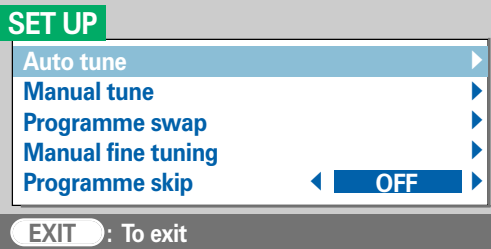

- 6** Press the **ENTER** button to begin the search for available stations. >>>> will flash and each station found will appear in succession on the screen. When the search is complete, the screen will display a list of all the available BBC1 signals.



- 7** If more than one is shown press the ▼ or ▲ button to highlight and view an alternative station. Choose the strongest signal i.e. the best picture and sound.

Prog.	Station	Channel
1	BBC1	22
	BBC1	39

 


- 8** Press the **ENTER** button to store BBC1 to programme position 1. Note: You can only choose one BBC1 station at this stage. Position 2 will appear showing the BBC2 choices. Repeat steps above to allocate the required signal.

Repeat for all the remaining programme positions you wish to store and press **EXIT** to finish.

YOU CAN NOW CONNECT THE SCART LEADS FOR THE SATELLITE RECEIVER AND VIDEO RECORDER.

If you are unable to use **Scart leads**, tune your TV to your video recorder as described 'Manual Tune' of the TV Owner's Manual.



Buttons you will need to Auto tune your TV Set




Dolby Digital Stereo Colour Television with Fastext

S P E A K E R C O N N E C T I O N S

RECEIVING DOLBY SURROUND FROM BROADCAST PROGRAMMES

If you live in an area which receives programmes in NICAM digital stereo you can now benefit from the increasing number of programmes (particularly films) which are broadcast in Dolby Surround. The Owner's Manual will tell you how to obtain Dolby Digital and gives an explanation of the different Dolby modes.

Television to rear surround speakers – Switch off the TV and connect the rear surround speakers using the speaker cable supplied.

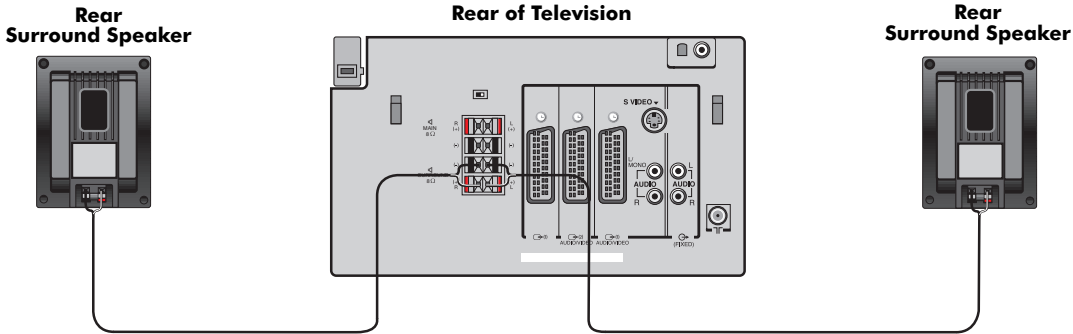

Note: Always connect the striped cable to the red terminal.
Ensure that there are no loose strands.

TOSHIBA

Originated by Kensa Creative Solutions, Saltash, Cornwall
Printed by Penwell Ltd, Callington, Cornwall

2356 3849



QUICK SET UP GUIDE

