

+ 44 (0) 208 920 2306 www.energizer-eu.com

### V-6833B



Dimensions (mm) 46 x 115 x 50 (H x L x W)













 
#### Features:

- Charges two or four AA or AAA batteries. Charges two AA and two AAA batteries.
- 2. Automatic switch off



3. **LED Charging Status** 





**Designation:** Compact Charger

Color: Silver

Charge Capability: AA (2) or (4)

AAA (2) or (4) AA (2) and "AAA" (2)

Charge Time: 3 to 12 hours

AA/HR6 NiCd 700 mAh 3 hours AA/HR6 NIMH 1300 mAh 5 hours AA/HR6 NiMH 1700 mAh 7 hours AA/HR6 NiMH 2300 mAh 10 hours AA/HR6 NIMH 2500 mAh 12 hours AAA/HR3 NiCd 240-300 mAh 3 hours AAA/HR3 NiMH 750-800 mAh 10 hours AAA/HR3 NiMH 850-950 mAh 12 hours

Charging Current: AA = 240-280 mA

AAA = 120-130 mA

Trickle Charge: 35-40 mA

Shutoff Mechanism: 12 hour timer, then trickle charge

Input Rating: AC 220-240V, 50Hz Typical Weight: 212 grams (7.5 oz.) **Dimensions (mm)**: 46 x 115 x 50 (H x L x W)

Rev Polarity Protection: Yes Primary Battery Detection: No

# **Battery Charger**

# **Charging Instructions:**

NOTE: For Nickel Metal Hydride (NiMH) and Nickel Cadmium (NiCd) rechargeable/AA and AAA batteries only. Never charge NiCd and NiMH batteries together. Do use to charge alkaline, carbon zinc, lithium or any other kind of battery not specified by the charger. Charge batteries before use according to charger instructions. Remove the batteries from the unit once they are charged and disconnect the charger from the power outlet. For indoor use only.

- Insert batteries in the charger respecting polarity (+/-). If the polarity is reversed, the charger has safety protection and will not start charging.
- Load either:

AA/HR6/RC6/Mingon 2 or 4 pieces at a time AAA/HR03/RC3/Micro 2 or 4 pieces at a time





If charging AAA batteries, pull down the adjustable contact plate prior to inserting batteries. DO NOT MIX BATTERY SIZES AND CAPACITIES IN THE SAME CHANNEL WHILE CHARGING.

3. Plug the charger into a correct household electric outlet. The red LED will illuminate indicating that charging is in progress.



- 4. After approximately 10-12 hours charging, the red LED will turn off and the charger automatically goes into trickle charge mode.
- 5. After use, disconnect the charger from the outlet and remove the batteries. ALWAYS UNPLUG BETWEEN CHARGES.

## Important Safety Instructions:

- Never use an extension cord or any attachment not recommended by Energizer. This may result in a risk of fire, electric shock or personal injury.
- 2. Never alter the plug provided. If the plug does not fit the outlet, install the proper outlet using a qualified electrician. Improper connection can result in a risk of an electrical shock.
- 3. Do not operate the charger if it has been subjected to shock or damage.
- 4. Do not disassemble the charger. Incorrect reassembly may result in risk of electrical shock of fire hazard.
- 5. During charging, unit may feel warm.
- Never use as a power source for any electrical 6.
- 7. Do not expose charger to rain, snow or excessive moisture.
- 8. Do not charge longer than time specified.
- 9. Overcharging may cause damage to the battery and

#### **Important Notice**

This data sheet contains information specific to products manufactured at the time of its publication. © Energizer Holdings, Inc. - Contents herein do not constitute a warranty.

Form No. EBC - 8855EU Page 1 of 1