

NINJA®

OWNER'S GUIDE

BL488UK



www.ninjakitchen.eu



0800 862 0453


Welcome to the Nutri Ninja® with Auto-iQ® Pro Complete all-purpose, customisable, everyday kitchen assistant. The Nutri Ninja with Auto-iQ Pro Complete features pre-programmed settings that take the guesswork out of drink and meal making. These programs are timed to deliver consistent, delicious results that finish on their own so all you have to do is press a button and enjoy.


Select accessories are included. Additional accessories are available for purchase at www.ninjakitchen.eu. For a list of what is included with this model, refer to the top of the box or online.

If you should have a question about your Nutri Ninja with Auto-iQ Pro Complete, please call the Ninja Customer service line at 0800 862 0453.

THANK YOU!

REGISTER YOUR PURCHASE:

 www.ninjakitchen.eu

 0800 862 0453

RECORD THIS INFORMATION:

Model Number: _____

Date of Purchase (Keep receipt): _____

THIS BOOK COVERS MODEL NUMBER:

BL488UK 30

TECHNICAL SPECIFICATIONS:

Voltage: 220-240V~, 50/60Hz

Power: 1100W

Multi-Serve Cup Capacity: 1.4 L

Nutri Ninja® Cup Capacity: 650ml

Ninja® Double Wall Stainless

Steel Cup Capacity: 650ml

This appliance complies with the WEEE-Directive 2012/19/EU on the disposal of electrical and electronic equipment (WEEE).



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmental safe recycling.

This appliance complies with the European directives for electromagnetic compatibility (EMC) 2014/30/EU and its revisions, as well as Low Voltage Directive (LVD) 2014/35/EU and its revisions.

Guarantee: This product is unconditionally guaranteed for one year against all defects of workmanship and materials. This guarantee does not affect your statutory rights. If this product proves unsatisfactory please contact our customer service department on freephone 0800 862 0453 or by e-mail ukservice@euro-pro.com.



IMPORTANT SAFEGUARDS







When using an electrical appliance, basic safety precautions should always be observed, including the following:

IMPORTANT: This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children shall not use or play with this appliance. Close supervision is necessary to keep appliance and cord out of reach of children during use.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- 1  **WARNING:** Extension cords are not recommended for use with this product.
- 2  **WARNING:** Never leave the appliance unattended while in use.
- 3  **CAUTION:** Blade assembly is sharp, handle with care. When handling the blade assembly, always hold by the top of the blade assembly.
- 4  **CAUTION:** Do not blend hot liquids. Allow liquids and foods to cool to room temperature before blending.
- 5  **CAUTION:** Do not blend dry ingredients unless pulsing for short intervals per the instructions. Continuous blending dry ingredients will overheat the blender.
- 6  **CAUTION:** Never attempt to remove the container while the appliance is still running.
- 7 **IMPORTANT:** Never add ingredients to the containers before inserting the blade assembly first.
- 8 **IMPORTANT:** Do not attempt to operate the container without the lid on.
- 9 **IMPORTANT:** Never run the appliance empty.
- 10 **IMPORTANT:** Make sure that the motor base is plugged in for use.
- 11 **IMPORTANT:** Make sure that the motor base is unplugged when not in use.
- 12 To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
- 13 DO NOT allow young children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used by or near children.
- 14 Never leave the appliance unattended when in use.
- 15 Turn the appliance off and remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts, accessing parts that move while in use and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
- 16 DO NOT abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from the electrical outlet; to unplug, grasp the plug, not the cord.
- 17 DO NOT use with damaged cord or plug.
- 18 DO NOT USE if the appliance is not working, after it has been dropped, dropped into water, damaged or left outdoors.
- 19 NO SERVICEABLE PARTS. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the appliance is used.
- 20 DO NOT let the power cord hang over the edge of a table or counter or touch hot surfaces such as the stove.
- 21 Always use the appliance on a dry, level surface. Make sure the suction-cup feet are wiped clean and no crumbs or residue are on the bottom of them.
- 22 Keep hands, hair, clothing, and utensils out of container while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used ONLY when the appliance is not running.
- 23 Avoid contact with moving parts.
- 24 DO NOT attempt to sharpen blade assemblies.
- 25 DO NOT use the appliance if the blade assembly is bent or damaged.
- 26 To reduce risk of injury, never place the blade assembly on the motor base without the proper container.
- 27 DO NOT operate this appliance on or near any hot surfaces (such as on a gas or electric burner or in a heated oven).
- 28 The use of attachments or accessories (including canning jars), that are not recommended or sold by the manufacturer may cause fire, electric shock, or personal injury.
- 29 DO NOT remove the container from the motor base while the appliance is running.
- 30 To reduce the risk of injury, NEVER operate the appliance without the blade assembly installed in a container. DO NOT try to defeat the interlock mechanism; make sure the blade is properly installed before operating the appliance.
- 31 DO NOT expose containers to extreme temperature changes.
- 32 DO NOT overfill.
- 33 Max ON time is 60 seconds under 1100W load. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, let it cool down for approximately 30 minutes before using it again.
- 34 To reduce the risk of burns, always allow the appliance to cool before taking off parts and before cleaning.
- 35 To avoid injury, never attempt to place the Pro Extractor Blade™ onto the motor base without first assembling the blade assembly to the Nutri Ninja® Cup.
- 36 THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. Do not use this appliance for anything other than its intended use. Do not use outdoors.
- 37 Check Stainless Steel cup for presence of foreign objects before using.

SAVE THESE INSTRUCTIONS

Nutri Ninja® Cups

⚠ WARNING: DO NOT BLEND HOT LIQUIDS



650 ml

Double Wall Stainless Steel Ninja® Cup


⚠ WARNING: DO NOT BLEND HOT LIQUIDS



650 ml

Multi-Serve Cup

⚠ WARNING: DO NOT BLEND HOT LIQUIDS

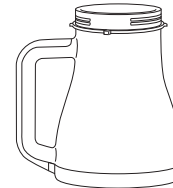

1.4 L

Sip & Seal® Lid (2)

NOTE: Sip & Seal lid, Spout lid and Pro Extractor Blades can be used with all Ninja Cups.


Pro Extractor Blades™

ACCESSORIES

Select accessories are included. Others are available for purchase at www.ninjakitchen.eu or by calling 0800 862 0453.



Motor Base

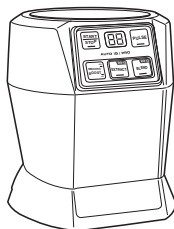

FEATURES:

- Nutrient & Vitamin Extraction†
- 1100 Watt Motor
- User Interface:

Start/Stop

Start/Stop is a manual setting that runs at High speed for 60 seconds. This button can be pressed at any time if you wish to stop a program.

Smooth Boost™

SMOOTH BOOST YES/NO is a special feature available when using the Auto-iQ® EXTRACT and Auto-iQ BLEND. This setting can be used to control the consistency of your beverage recipes. Select SMOOTH BOOST YES when smoother, creamier results are desired. This is the default program for both Auto-iQ EXTRACT and Auto-iQ BLEND programs. Select SMOOTH BOOST NO when more of a textured consistency is desired.

Pulse

Offers greater control to help prevent over-processing or over-blending. Simply hold down the button and our blades will run at a high speed for a quick burst of power to break through ice or chop vegetables.

AUTO-IQ EXTRACT†

EXTRACT should be used when blending hard, leafy, or fibrous whole fruits and vegetables, including apples, kale, and celery. This optimised program allows you to blend fresh items with their skins, seeds, and stems into nutrient extractions. Before using EXTRACT, select Smooth Boost YES or NO depending on your desired consistency.

AUTO-IQ BLEND


BLEND can be used to make a range of beverages that do not include hard or fibrous fresh ingredients, such as milkshakes, protein smoothies, soft fresh-fruit smoothies, and frozen cocktails. Before using BLEND, select SMOOTH BOOST YES or NO depending on your desired consistency.

- Sip & Seal® lids for drinks on the go.
 - Nutri Ninja® Cups and Sip & Seal lids, BPA free, and dishwasher safe.
- NOTE: The Stainless Steel Ninja® Cup is NOT dishwasher safe.
- Cord Wrap located on back of the motor base.

Ice to Snow

Crushing Ice to Snow is easy – take ice cubes directly from your freezer, and put in a dry Ninja® Cup – use the pulse feature in short quick bursts until it’s a snow like consistency.

†Extract a drink containing vitamins and nutrients from fruits and vegetables.

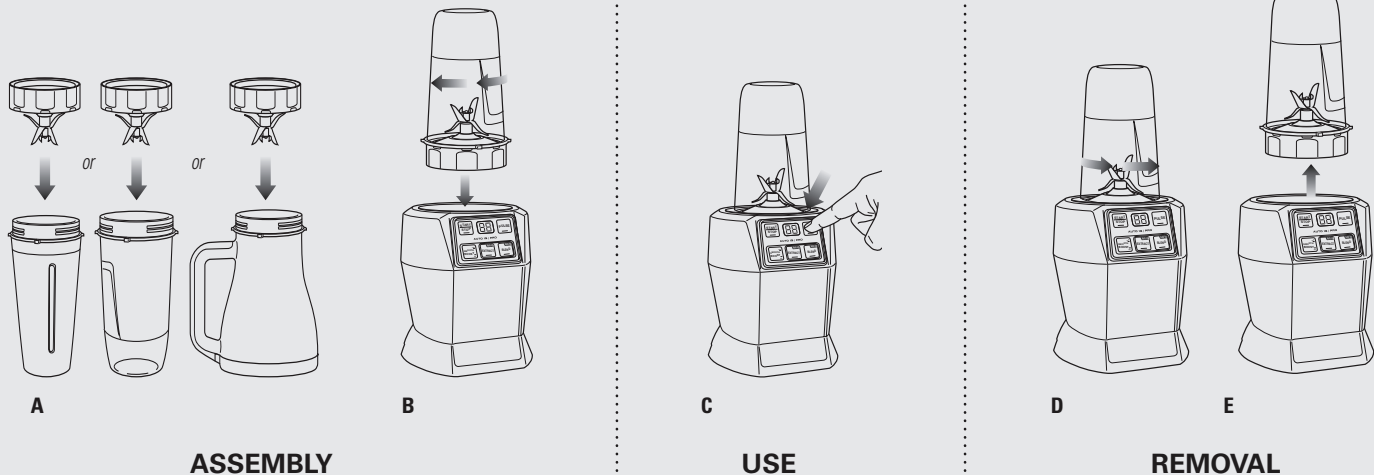

For best results, follow the recipe/ingredient loading instructions found in your Inspiration Guide.

CAUTION: Do not blend hot liquids. Allow the liquids or foods to cool to room temperature before blending.

CAUTION: Do not put hot liquids in the Stainless Steel 650 ml Nutri Ninja Cup before blending. Start with cool or room temperature liquid. Heated liquid can create internal pressure in a sealed cup, which may erupt on opening and cause a burn injury.

IMPORTANT: Do not overfill. to avoid spilling, do not add ingredients past the "MAX" fill line.

IMPORTANT: When processing soft dry ingredients such as day-old bread or cheese use quick, short 1 second pulses. Do not overfill to avoid overheating the appliance. Allow the appliance to cool after each use.

ASSEMBLY & USE OF THE NUTRI NINJA® CUP

NOTE: Ninja® Auto-iQ® Technology can sense which container is on the motor base. The function lights will illuminate depending on which Nutri Ninja Cup is placed on the motor base.

BEFORE FIRST USE:

- Remove all packaging material and labels from the appliance.
- Wash the lids, cups, grinder, and blades in warm, soapy water with a soft cloth.
- Rinse and dry thoroughly.
- **NOTE:** The Double Wall Stainless Steel Ninja Cup is NOT dishwasher safe.
- Lids, cups and blades are all dishwasher safe. It is recommended that the lids and attachments be placed on the top rack. Ensure that the Pro Extractor Blades™ are removed from the cups before placing in the dishwasher.
- Wipe the motor base clean with a damp cloth.

ASSEMBLY:

WARNING: NEVER LEAVE THE APPLIANCE UNATTENDED WHILE IN USE.

CAUTION: USE CAUTION WHEN HANDLING THE BLADE ASSEMBLY AS IT IS VERY SHARP.

IMPORTANT: MAKE SURE THE MOTOR BASE IS PLUGGED IN FOR USE.

- 1 Place the motor base on a clean, dry, level surface such as a counter or tabletop. Press down on the motor base to make sure the suction cups adhere to the counter or tabletop.
- 2 Add ingredients to the Nutri Ninja cup.
- 3 Place the Pro Extractor Blades onto the cup and tightly screw on clockwise (A) until you have a good seal.
- 4 Turn the Nutri Ninja cup upside down and place it onto the motor base (B), aligning the tabs on the cup with the motor base. Rotate the Nutri Ninja cup clockwise until it locks in place (you will hear a click when the lock is engaged).

USE:

- 5 Once the cup is engaged, the programs available for that attachment will illuminate. Select the program (C) desired based on your recipe. The Auto-iQ program will stop the appliance automatically at the end of the program.
- 6 To pause the program, press the selected speed or Auto-iQ Program a second time.

REMOVAL:

- 7 Once you have reached your desired consistency, press the **START/STOP** button to turn the program off. Turn the Nutri Ninja cup anticlockwise (D) and pull straight up to remove (E).
- 8 Turn the cup upright and remove the Pro Extractor Blades by twisting the Pro Extractor Blades anticlockwise.
- 9 Place the Sip & Seal® lid onto the Nutri Ninja cup, twist to seal, and enjoy!
- 10 Make sure the appliance is unplugged when not in use.
- 11 To remove the motor base unit, tip the unit forward from the rear to easily disengage the suction cups.



CARE & MAINTENANCE

CLEANING:

⚠ CAUTION: MAKE SURE THAT THE MOTOR BASE IS UNPLUGGED FROM THE POWER SOURCE BEFORE INSERTING OR REMOVING ANY ATTACHMENT AND BEFORE CLEANING.

⚠ CAUTION: DO NOT IMMERSE THE MOTOR BASE INTO WATER OR ANY OTHER LIQUID.

⚠ CAUTION: HANDLE BLADES CAREFULLY AS THE BLADES ARE VERY SHARP.

- 1 Separate/remove all parts from each other.
- 2 Clean the motor base with a damp cloth and wipe dry.
NOTE: The Double Wall Stainless Steel Nutri Ninja® Cup is NOT dishwasher safe.
- 3 Place the cups, lids and blade assemblies in the top rack of the dishwasher.

OR

- 4 Carefully hand wash the cups, lids, and blade assemblies in warm, soapy water with a soft cloth.

NOTE: If the appliance needs servicing, please call customer service at 0800 862 0453.

STORING:

- 1 Store the Nutri Ninja with Auto-iQ® Pro Complete upright. Secure the power cord on the back of the base by wrapping the cord around the cord wrap. Do not place anything on top of the unit. Store the cups and the rest of the attachments where they will not be damaged and won't cause a hazard.

RESETTING THE MOTOR THERMOSTAT:

The Nutri Ninja with Auto-iQ Pro Complete features a safety system that prevents damage to the unit's motor and drive system should you inadvertently overload the appliance. If the appliance is overloaded, the motor will stop. To reset the appliance, follow the resetting procedure below:

- 1 Unplug the appliance from the electrical outlet.
- 2 Remove and empty the cup and ensure that no food is jamming the cutting blades.
- 3 Allow the appliance to cool for approximately 30 minutes.
- 4 Re-install the cup onto the motor base and re-plug the appliance into the electrical outlet.
- 5 Proceed with using the appliance as before while making sure not to exceed the maximum recommended capacities.

TROUBLE-SHOOTING GUIDE

Unit doesn't turn on:

- Make sure the unit is plugged in and the **START/STOP** button is pressed.
- Insert and rotate cup clockwise in the base until it clicks into place. Display should turn on.

Unit doesn't turn off:

- Remove cup from base by rotating cup anticlockwise and lifting out. Display should turn off. Unplug the power cord from the outlet.

Lid/blade assembly hard to assemble:

- Set the cup on a level surface. Place the lid or blade assembly on the top of the cup and align the threads so that the lid/blades sit flat on the cup. Twist clockwise so that the lid/blades evenly align to the cup until you have a tight seal.

Doesn't mix well, food gets stuck:

- Using the Auto-iQ programs is the easiest way to achieve great results. The pulses and pauses allow the food to settle towards the blade. If food is routinely getting stuck adding some liquid will usually help.
- When packing the cups, start with fresh items, then add liquids, powders/dry ingredients, and finally frozen items or ice.

Unit moves on the counter while blending:

- Make sure the surface as well as the feet of the unit are clean and dry.

Unit is difficult to remove from the counter for storage:

- To remove the motor base unit, tip the unit forward from the rear to easily disengage the suction cups.



NOTES





NOTES

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NINJA®



Euro-Pro Europe Limited

15 Mariner Court
Calder Park
Wakefield
WF4 3FL



BL488UK_30_160126_1

© 2016 Euro-Pro Europe Limited

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

Printed in China



www.ninjakitchen.eu



0800 862 0453