



**Bullet Time Cord**  
**可伸缩子弹时间绳盒**  
**バレットタイムコード**

**Instructions for Use / 使用说明 / 説明書**



## Warning: Safety First

Bullet Time accessories are used to achieve an advanced filming technique that is dangerous if performed improperly. The technique must only be used in safe conditions by experienced users. Use this technique in spacious outdoor environments and ensure that there are no people or obstacles of any kind within a 10-foot (3-meter) radius.

Before every use, make sure that your camera and accessories are functioning properly. If there's any damage or irregularity, stop using them immediately. While using the accessories, be sure that the camera and Bullet Time Cord are firmly connected before you start swinging. While not connected to the camera, do not pull out the Bullet Time Cord as this may cause injury upon retraction.

**Note: Bullet Time accessories are not designed to be spun at extreme speeds. Please spin at a moderate speed (recommended swinging speed: one revolution per second) to avoid exerting excessive centrifugal force on the accessories.**

Do not swing the camera vertically (toward the ground) as this can easily result in ground impact and subsequent camera damage. When storing accessories, keep away from heat sources, humidity and direct sunlight to preserve structural integrity.


## Disclaimer

Please read this Disclaimer carefully. Using this product means that you acknowledge and accept the terms of this disclaimer. By using this product, you hereby acknowledge and agree that you are solely responsible for your own conduct when using this product and any consequences thereof. You agree to use this product only for proper and lawful purposes. You understand and agree that Arashi Vision Inc. (hereinafter referred to as 'Insta360') accepts no liability for any and all misuse, consequences, damages, injuries, penalties, or any other legal responsibility directly or indirectly incurred by your using this product and associated accessories.

Before every use, make sure that your accessories are functioning properly. If there's any damage or irregularity, stop using them immediately.

Within the scope of state laws and regulations, Insta360 reserves the right of final explanation and revision for the commitment.

# 1. Names of Parts

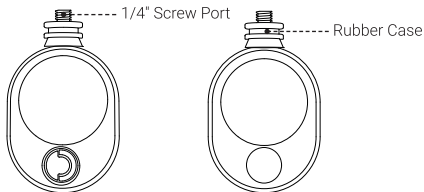

\* The rubber case can reduce damage caused by the 1/4" screw port to the camera's underside and the Bullet Time Cord itself. Do not disassemble the rubber case while in use.


## 2. Capture Bullet Time Shots Holding the Bullet Time Cord

\* The Insta360 ONE X2 is not included.


- 1 Screw the Bullet Time Cord into the bottom of the camera.



- 2 Turn on the camera, set it to Bullet Time mode and tap the Shutter button (button on the front of the camera) to start recording in Bullet Time.



3 Extend the Bullet Time Cord to its maximum length, hold it tightly, raise it over your head and then swing the camera in a smooth, level 360° circle (**recommended swinging speed: one revolution per second**). Hit the Shutter button again to stop recording.

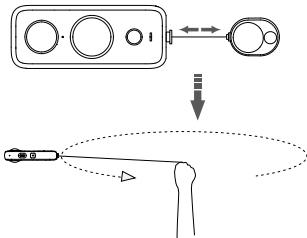

### Notes:

- 1) While in use, make sure that the Bullet Time Cord has been extended to its maximum length.
- 2) Maintain a smooth, level swing with the Bullet Time Cord. For best results, use Bullet Time mode in well-lit, outdoor environments.
- 3) Make sure that the camera and the Bullet Time Cord are properly connected before you start swinging.

## After-Sales service

The warranty period of this product is 3 months from the original purchase. Warranty service may vary according to the applicable laws of your state or jurisdiction. For detailed warranty policies, please scan the QR code below or visit: ***<http://insta360.com/support>***





# 安全操作指引

请在使用子弹时间配件前，仔细阅读本文档内容。建议您在空旷、安全的户外环境使用本设备，并确保在您周围 3 米半径内无任何障碍物。

使用前，请仔细检查相机、可伸缩子弹时间绳盒的螺母接口，若出现破损，请勿使用。使用时，请保证相机、Insta360 可伸缩子弹时间绳盒连接稳固。不连接相机时，绳子拉出自动收回过程可能对人造成伤害，请避免这类操作。

**注意：子弹时间配件并非针对极速甩动的情况而设计。请勿极速甩动相机（建议甩动速度：1 圈 / 秒），以免离心力过大使相机脱离子弹时间绳盒，造成设备损毁或人员损伤。**

垂直地面甩动相机，可能造成相机触地损坏，请谨慎使用。

请妥善保管相机及其相关配件，尽量使之远离热源、潮湿，避免暴晒，以免设备受损。

## 免责声明


请仔细阅读本声明，一旦使用本产品，即视为对本声明的全部认可和接受。

每次使用前，请仔细检查子弹时间配件及其相关配件、相机，若出现破损、变形，请勿使用。使用本配件，就意味着您认可并

同意，您将对使用本配件的行为和可能产生的后果负全部责任。您承诺仅会出于正当合法的目的使用本配件。您理解并同意，对于直接或间接因使用本配件而造成的滥用、不利影响、损害、伤害、惩罚或者其他法律后果，影石创新科技股份有限公司（以下简称“Insta360”）将不承担任何责任。用户应遵循包括但不限于本文提及的使用注意事项。

在国家法律法规范围内，本承诺解释权、修改权归 Insta360 所有。

## 1. 部件介绍

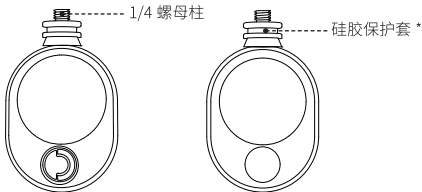

\* 螺母柱硅胶套可减少 1/4 螺母柱对相机底部以及绳盒壳体的磨损，使用时请不要拆除。


## 2. 手拿子弹时间绳盒拍摄技巧

\* Insta360 ONE X2 另售。


- ❶ 将子弹时间绳盒固定至相机底部。



- ❷ 开机后，将相机切换至子弹时间模式，单击相机快门键（正面按键），开始子弹时间录制。



③ 将子弹时间绳盒拉伸至最大长度，握紧并将其举过头顶，水平方向 360° 匀速（**建议甩动速度：1 圈 / 秒**）甩动相机。单击相机快门键完成拍摄。

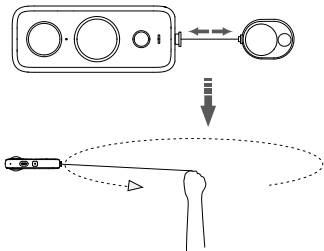

### 注意：

- 1) 拍摄子弹时间时，确保子弹时间绳已拉伸至最大长度。
- 2) 请在阳光充足、空旷环境下，以匀速（1 圈 / 秒）、平稳的方式甩动子弹时间配件。甩动过程中，尽量使子弹时间配件作水平圆周运动。
- 3) 使用前，请确保相机与配件连接稳固。

## 售后服务

自您最初零售购入之日起，本产品的保修期为 3 个月。详细的售后服务流程和保修条款，请扫描下方二维码或访问 [\*\*http://insta360.com/support\*\*](http://insta360.com/support)



## 警告：安全第一

パレットタイムアクセサリは高度な撮影テクニックを実現しますが、適切に扱わなければ危険を伴います。パレットタイム撮影は経験豊富なユーザーが安全な状況下でのみ行ってください。また、半径3メートル以内に人やいかなる障害物も存在しない、広い屋外で撮影してください。

使用前に必ず、カメラとアクセサリに問題がないことを確認し、損傷や異常が見られる場合は直ちに使用を中止してください。本アクセサリを使用してスイングを始める前に、カメラ、パレットタイムコードがしっかりと固定されていることを確認してください。カメラに固定していない状態でパレットタイムコードを引き出さないでください。コード収納時に怪我の恐れがあります。

**注意：パレットタイムのアクセサリは極端に速い速度で回転するようには設計されていません。本アクセサリに過度な遠心力がかからないようにするため、適度な速度（推奨速度は1秒間に1回転）で回転させてください。**

カメラを垂直に（地面に向かって）スイングさせないでください。カメラが地面にぶつかり破損する原因となります。

アクセサリを保管する際は、品質維持のため熱源や湿気、直射日光を避けてください。

## 免責事項


本免責事項をよくお読みください。本カメラと関連アクセサリーを使用することで、お客様は本免責事項の規約を承認し同意したことになります。

本カメラを使用することにより、本カメラ使用時のユーザーの行為およびその結果について、ユーザーが単独で責任を負うことを認め、同意したことになります。ユーザーは本カメラを適切かつ合法的な目的にのみ使用することに同意するものとします。本カメラおよび関連アクセサリーの使用により直接的または間接的に生じた、あらゆる誤用、影響、損害、傷害、罰則、またはその他の法的責任について、ユーザーは Arashi Vision Inc. (以下「Insta360」とします) が一切の責任を負わないことを理解し、同意するものとします。

使用する前に必ず、アクセサリーが正しく機能していることを確認してください。損傷や異常がある場合は直ちに使用を中止してください。

Insta360 は、国の法律および規制の範囲内で、本免責事項の最終的な説明及び改訂の権利を留保します。

# 1. 部品名称

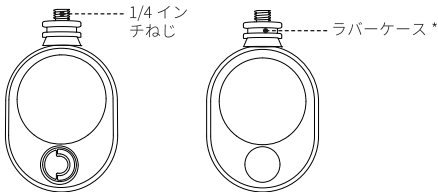

\* ラバーケースは 1/4 インチねじでカメラ底部およびパレットタイムコード自体が傷つかないようにします。使用中はラバーケースを外さないでください。




## 2. バレットタイムコードを手で持ってバレットタイム撮影する


\* Insta360 ONE X2 同梱されていません。




- ❶ バレットタイムコードのねじをカメラ底部のねじ穴に固定します。



- ❷ カメラを起動してバレットタイムモードに設定し、シャッターボタン (カメラ前側のボタン) を押してバレットタイム録画を開始します。



**③** バレットタイムコードをいっばいに引き出し、しっかりと持って頭上に持ち上げてから、水平な円を描くように滑らかにカメラをスイングします(推奨速度は1秒間に1回転)。再度シャッターボタンを押すと録画を停止します。

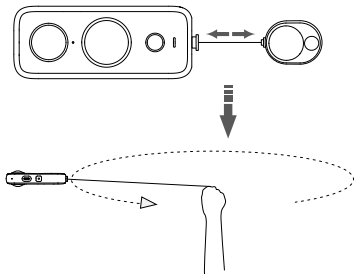

**注意：**

- 1)** バレットタイムコードはいっばいに引き出した状態でスイングしてください。
- 2)** バレットタイムコードは水平に滑らかに回転させてください。日当たりの良い屋外で使用すると最高の結果が得られます。

3) スイングを開始する前に、カメラとバレットタイムコードがしっかりと固定されていることを確認してください。

## アフターサービス

本製品の保証期間は、購入日から 3 か月です。保証サービスは国または管轄地域の適用法によって異なります。保証規定の詳細については、以下の QR コードをスキャンするか、または <http://insta360.com/support> にアクセスしてください。



**Arashi Vision Inc.**

**ADD:** 6F, Building A, Logan Century Center, 23 Haixiu Road,  
Bao'an District, Shenzhen, Guangdong, China

**WEB:** [www.insta360.com](http://www.insta360.com)

**TEL:** 400-833-4360                      +1 800 6920 360

**EMAIL:** [service@insta360.com](mailto:service@insta360.com)

V2.0